


TELECO Automation Srl

Viale Del Lavoro 5

31010 Colle Umberto (TV) - Italy Tel. +39.0438.388511 - Fax 0438.388536 www.telecoautomation.com

E mail: teleco.automation@nline.it

TYPE RS433 Mod.: TXW WALL Rev. USA0102

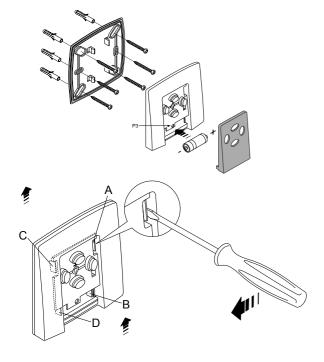


Wall fastening

TX must be fastened to a smooth wall free from grooves and away from metal surfaces and objects.

Fasten the lower part with the Fischer screws supplied. Then push in the upper part and apply the front cover to close the

Pulling out the upper shell

If it is necessary to open the transmitter, follow this procedure : press the points marked with A and B or C and D with a screwdriver and remove the upper shell.

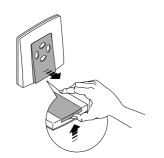

Pulling out the front cover

This is necessary any time that:

- you need to have access to the programming push button P3;
- you need to replace the battery;
- you need to open the container for maintenance.

Product description

Superheterodyne radio control devices, with the carrier frequency in the UHF band controlled by saw resonator, for the remote control of electronic and electrical appliances in conformity with the laws and standards in force.

The type of rolling code transmission signal makes it impossible to duplicate.

The transmitter code can be inserted (memorised) either directly into the receiver or via radio from the transmitter. The second possibility allows you to insert new transmitters into an existing system without having to have the receiver on hand. This may be carried out easily by the user without the help of the installer whilst still guaranteeing the total secrecy of

The user code is memorised under EEprom in the receiver which maintains the code information even when faced with blackouts.

Caution!

Changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.

Transmitters

The transmitters are encoded in the factory and each transmitter has its own unique code.

If you keep a channel button pressed down for more than 30 seconds the transmitter will automatically switch off.

The transmitters are available in 2 or 4 channel versions with the following codes:

TXW433US2 2 channel transmitter TXW433US4 4 channel transmitter

Technical data

- carrier frequency

- carrier frequency tolerance

- modulation

- signal modulation

- power supply

(Alkaline battery GP23A)

- maximum power consumption

- operating temperature range

433.92 MHz ±75 KHz

AM/ASK

PCM, 1.3 ms/bit

12V ± 10%

28 mA

- 10° _ +55°C