Opreational Description

With the software provided, eight commonly used tasks can be assigned to the programmable wheel button.

- Double click the "Optical Mouse/Pro" icon at the lower right corner of Windows control panel.
- 2. Or select "wheel Mouse" from windows.
- 3. Now the software control panel section will be displayed on the screen.
- 4. ere are five sections including left/right Button, Pointer, Motion, Wheel, and

Programmable button, in the mouse control panel. Please point to the tab you need to configure your mouse.

You can enlarge, or reduce the whole document view in both Microsoft Excel and Word 97/2000 applications easily and quickly.

Hardware Installation

- 1. Turn off your PC
- Connect Optical Mouse/Pro (PS/2,6-pin connector) to PS/2 port, or Connect Optical Mouse/Pro (USB) to USB port.
- 3. Turn on the PC.

*The limited connection will be supported only based on the type of model you bought.

Software Installation

1. Un-Install or removing the current mouse driver

Before installing the driver of Optical Mouse/Pro, we suggest that you check if any other mouse driver installed in your system. If yes, in order not to make conflict, please un-install or remove that driver before installing the Optical Mouse/Pro driver.

2. Install the Optical Mouse software

- a. Insert the Optical Mouse/Pro software diskette into drive A or B.
- b. For Window 95/98/2000/NT/ME, choose the "Start" menu, and select "Run"
- c. Type "A: SETUP"(or "B: SETUP") in the command line, and select "OK'.
- d. Follow the instructions on the screen, and RESTART the PC when the installation is completed.
- e. For Pro version: E-mail displaying function will be initialed as well if the driver had been installed successfully.

Note:

- The optical Mouse/pro software diskette includes both optical Mouse/Pro driver and application program. Please follow the above procedure to install both of them. The optical Mouse /pro application programs will NOT be installed if you install only the driver through the hardware.
- Because Microsoft Windows NT4.0 does not support USB interface, Please use the PS2 model to work for window NT4.0.

3. Un-Install the Optical Mouse/Pro

To remove the Optical Mouse/Pro software from your hard disk:

In Windows 95/98/2000/NT/ME) Click the "Start" menu, select "Programs", and move to "Wheel Mouse", then click "Uninstall icon".