 
 


Congratulations on your purchase of the most innovative wireless optical mouse which includes the RF cordless and optical technology for a superior performance and convenience on your PC.

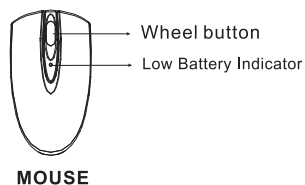

1. Insert the batteries

- A. Press the battery cover switch on the top of the mouse to open the battery compartment. (See Pic 1)
- B. Fit in the batteries accordingly to the diagram indicated in the battery compartment.

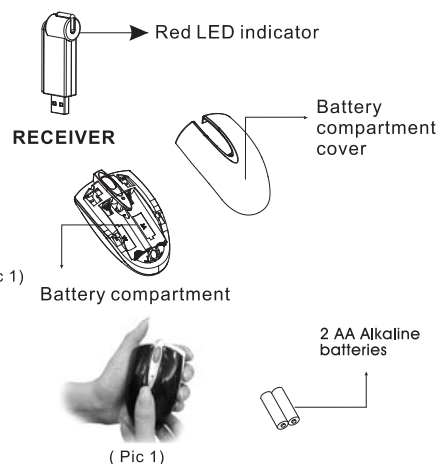

 
A wrong battery placement may cause a battery overheat.

Note

►The Cordless Optical Mouse unit offers a strong power saving management function. Once the mouse accesses the sleeping mode, "to click any button of the mouse" is compulsory to wake it up.

2. Connect the receiver

- A. Turn off your PC.
- B. Connect the receiver to USB port on your PC

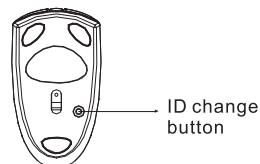


3. Establish communication between the mouse and the receiver

- A. Press the ID search button on the receiver, and note the red LED will blink slowly.
- B. Press the ID change button on the bottom of the mouse to set a new ID. The receiver's red LED indicator will blink at a faster rate until an identical ID is located.

Note

 To turn on/off the power press the button and hold for **three second**.

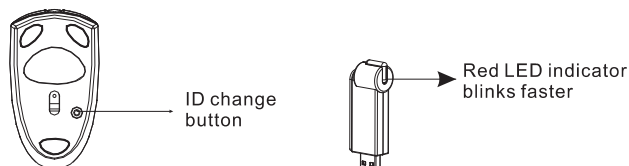

NOTE

►An appropriate environment setting can ensure the wireless device performance of a minimum **1.0m** transmission distance.

- C. The red LED indicator on the receiver will blink any time the mouse sends it a signal.

4. Battery Replacement

- A. When the Low Battery Indicator LED flashing, please replace new batteries.

❖Trouble shooting

- (1) Make sure you have connected the receiver correctly to the computer's USB or PS2 port.
- (2) For the supreme performance, we suggest you locate the receiver with a distance from other electrical devices, such as the computer, the computer monitor or external storage drives.
- (3) Make sure you have set the communication between the receiver and the mouse. Refer to the channel setting instruction in this manual.
- (4) Some system devices might conflict with the mouse. Confirm the IRQ/address settings of these devices for conflicts, and change the settings as required.
- (5) Try unplugging then reconnecting the receiver cable to your computer.

❖Battery use reminders

- (1)Keep all batteries (used or new) out of the reach of children.
- (2)To have the batteries with a regular check and replace new batteries if not used for a long time.
- (3)Remove batteries from the electrical device if the device is not going to be used for a long time.
- (4)If the performance of the batteries decrease substantially, it is time to replace the batteries.
- (5)Do not mix different types of batteries (e.g. NiMH, NiCd, alkaline, etc) in the mouse.

Federal Communication Commission Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- * Reorient or relocate the receiving antenna.
- * Increase the separation between the equipment and receiver.
- * Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- * Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC NOTE:

The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.