

 
L167 User Manual

Introduction

Congratulations on your purchase of the most innovative wireless mini mouse. With an incredible sensitivity to surface details and high tracking speed than other mice, the mouse can track reliably even on tricky polished or wood-grain surfaces. It offers even more advance that will make you more productive and more comfortable.

Safety Notice

- ▶ This product complies with IEC 60825-1, Class I laser product
- ▶ The product complies with FCC and CE rules.

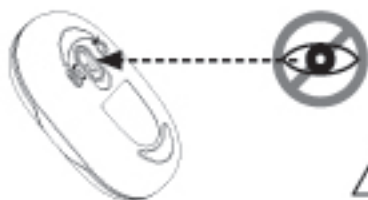


Please **DO NOT** direct the laser beam at anyone's eyes.


Features

- The world's first rotating mouse.
- 2.4GHz RF (distance 6-8m)
- Using state-of-art technology, 20 times more tracking speed.
- 16 Channels/4096 ID per channels
- Dynamic rotating cover for battery replacement & storable mini receiver
- 800/1600 dpi switchable.
- Auto-Link, Plug and Play! No need to set the channel ID.
- Power on/off switch
- Data report rate : 125 Report/Sec.
- 2*AAA Alkaline batteries included

 Mouse

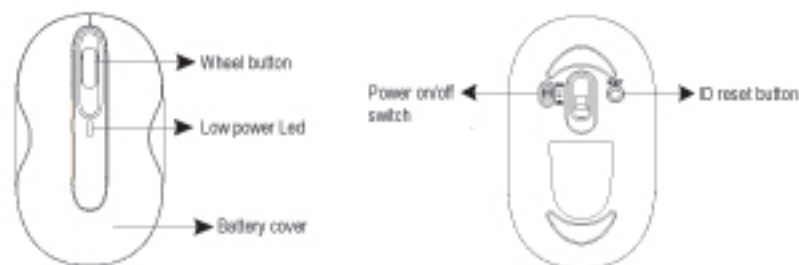


Receiver

 

1. Insert the batteries

 - Rotate the battery compartment cover to the left or the right of mouse.
- Fit in the batteries accordingly to the diagram indicated in the battery cabinet.
- Close the battery compartments by rotating cover back properly.
- Make sure the Power on-off switch on the bottom of the mouse is ON.
- The Low Power LED in the wheel bar will blink 3 seconds if the mouse power is on.

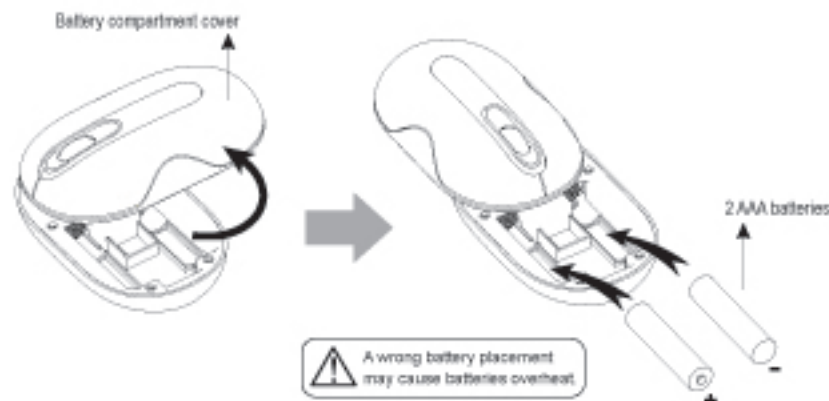

Note

- ▶ The unit offers a strong power saving management. Once the mouse accesses the sleeping mode, "to click any button of the mouse" is compulsory to wake it up.
- ▶ **Power on/off:**
Power on/off switch is designed to save the batteries power while non-usage of a longer period.

2. Connect the receiver

- Turn on your PC.
- Connect the receiver to USB port on PC



3. Communication : The mouse & the receiver

The 2.4GHz RF mouse features a dual-way transmission technology which enables the mouse and the receiver auto-communication.

A. Auto-link mode

- Make sure the Power On-Off Switch on the bottom of the mouse is ON.
- Operate the mouse, and the LED in the receiver will blink fast. Now the mouse and the receiver is auto-linked successfully.