 
 


### GETTING STARTED

Plug the power adapter into the back of the clock. Then plug the other end into a standard electrical outlet.

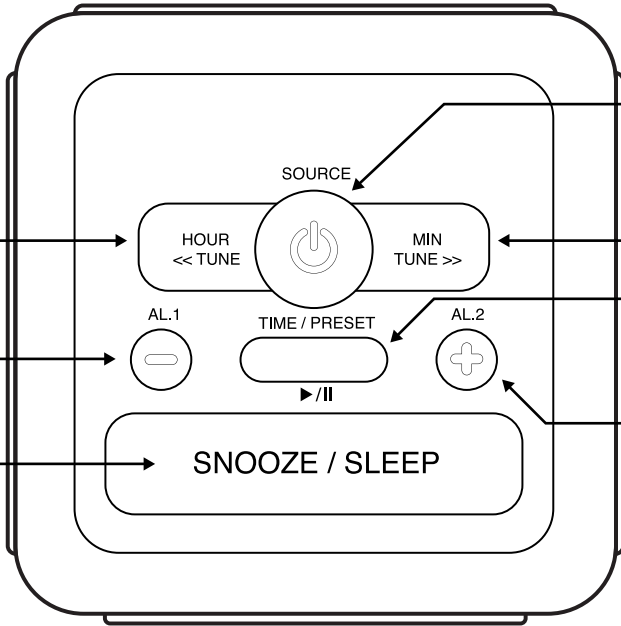

- POWER RADIO / BLUETOOTH** (SOURCE button)
- MINUTE / TUNE >>** (MIN TUNE >> button)
- TIME / PRESET PLAY / PAUSE** (TIME / PRESET button)
- ALARM 2 / VOLUME +** (AL.2 button)
- ALARM 1 / VOLUME -** (AL.1 button)
- SNOOZE / SLEEP** (SNOOZE / SLEEP button)
- HOUR / << TUNE** (HOUR << TUNE button)

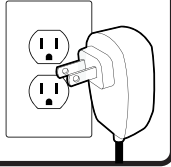

- PM INDICATOR** (PM indicator)
- ALARM 1 ON INDICATORS (RADIO / BUZZER)** (AL.1 indicator)
- ALARM 2 ON INDICATORS (RADIO / BUZZER)** (AL.2 indicator)
- BLUETOOTH ON** (Bluetooth indicator)

### BATTERY BACKUP (OPTIONAL)

**#1 Remove the battery cover on the bottom of the clock.**

**#2 Insert 2 fresh AAA battery. Make sure to follow the +/- symbols.**

**#3 Replace the battery cover.**

**Note:** The battery backup feature is not necessary to operate your digital alarm clock. It is optional to have the battery backup in case of a power outage. In the event of a power failure, the battery backup will automatically continue to operate the clock and maintain time and alarm time. When the clock runs on the battery backup the clock may lose or gain a few minutes per hour. This may require resetting the time for precise timekeeping.

**IMPORTANT:** Extended storage can cause batteries to leak and damage the unit. Leaky batteries should be discarded immediately. Skin burns or other personal injury can result. Always dispose of batteries according to federal, state and local regulations.

**IMPORTANT:**

- Clean the battery contacts and also those of the device prior to battery installation.
- Remove the battery from the equipment which is not to be used for an extended period of time.
- Remove used battery promptly

**CAUTION:** RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE. DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS. SHALL BE MARKED CLOSE TO THE BATTERY COMPARTMENT OR A STATEMENT IN THE USER MANUAL

#### ONE-YEAR LIMITED WARRANTY

NYL Holdings LLC warrants the original consumer purchaser of this product that it shall be free of defects in materials and workmanship for one year from the purchase date of this product. Defects caused by tampering, improper use, unauthorized modifications or repairs, immersion in water or abuse are not covered by this warranty. If a defect covered by this warranty occurs during the warranty period, package your clock carefully and send it to:

Att: Repair center / NYL Holdings LLC  
99 West Hawthorne Ave. Suite 202  
Valley Stream, NY 11580

(516) 256-3240  
1-877-378-7154

You must include a Proof of Purchase, either the original receipt or a photocopy and a check or money order for USD \$5.95 to cover the cost of shipping and handling. Also include your return address inside the package. NYL Holdings LLC will repair or replace the clock and return it to you. NYL Holdings LLC will not be liable for any loss or damages, including incidental or consequential damages of any kind: from any breach of warranty either expressed or implied relating to the product. Since some states do not allow the exclusion or limitation of incidental or consequential damages, these limitations may not apply to you. This warranty gives you specific legal rights, and you may have other rights that vary from state to state.

#### FCC Remarks

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

☐ This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.


If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician.


FCC RF Radiation Exposure Statement Caution: To maintain compliance with the FCC's RF exposure guidelines, place the product at least 20cm from nearby persons.

**Note: If no settings are made within 10 seconds, the clock will automatically return to display the normal time. If this happens, you will need to start the setting procedure again from step 1.**

## TIME SETTING

- #1** Press the TIME button for 3 seconds, until the HOUR & MINUTES start to flash.
  - #2** Press the HOUR & MINUTE buttons as needed to set the TIME.
- 
- Note: Be sure to set the hour with the correct AM or PM time period.**
- #3** Press the TIME button once, to SAVE and EXIT the time setting.

## ALARM SETTING

- #1** Press either ALARM 1 or ALARM 2 for 3 seconds until the HOUR & MINUTE digits start to flash.
  - #2** Press the HOUR & MINUTE buttons as needed to set the desired ALARM TIME.
- 
- Note: Be sure to set the hour with the correct AM or PM time period.**
- #3** Press the same ALARM 1 or ALARM 2 button once, to SAVE and EXIT the alarm time setting.

**Note: Any time you wish to check the alarm time, press and hold, ALARM 1 or ALARM 2. The display will briefly show the alarm time.**

## ALARM ON / OFF

Press either ALARM 1 or ALARM 2 button as needed to scroll through the ON /OFF settings:

### **BUZZER > RADIO > OFF**

Check the Alarm ON indicators and select your desired alarm option (radio or buzzer).



## USING THE SNOOZE

Press SNOOZE when the alarm is sounding. The alarm will be silenced temporarily, but will resume sounding after 9 minutes.

To stop the alarm, Press the button.

**Note: The alarm will be turned off, but will remain on to sound the next day.**

## USING THE RADIO

**Note: The FM radio antenna is a thin black cord on the back of the clock. For best performance make sure this cord is fully extended and is not twisted.**

- #1** Press the RADIO ON button. The radio station frequency will show on the display.

**Note: Pressing the POWER button will turn the Music on to the last used setting (Radio or Bluetooth). Use the to select Radio or Bluetooth.**

 
- #2** Press the << or >> tune buttons to select a radio station frequency.

**Tip: Press and HOLD the Tune buttons << or >> to quickly advance the radio station frequency.**

- #3** To turn off the radio, press and hold the power button for 3 seconds.

## ADJUSTING THE VOLUME

Press VOLUME + / - buttons to adjust the music volume (Radio or Bluetooth)

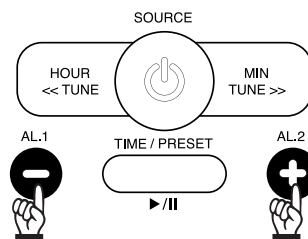

## BLUETOOTH MUSIC

- #1** Press the POWER ON button. The music will turn on to the last used source (Radio or Bluetooth).
- #2** Press the SOURCE button to switch between RADIO or BLUETOOTH. Check the display for the Bluetooth ON indicator.

**The clock will automatically connect to paired bluetooth devices if the device is turned on, and within range.**

- #3** For the first time the bluetooth is used, you must connect your bluetooth device.

On your wireless device, Enable bluetooth and connect to device name "71042WM".

**Note: When your bluetooth device is connected, the bluetooth ON indicator will be illuminated on the display.**



- #4** Press either << or >> to skip or go back a song.
- #5** Press the PLAY / PAUSE button to play or pause the current song.

**Note: If the volume is too low, check the volume on your Bluetooth device.**

- #6** To turn the music off, press and hold the POWER button for 3 seconds to turn OFF.

## STORE RADIO STATIONS PRESETS

**Note: You can store up to 10 FM radio stations.**

- #1** Tune to the desired radio station by pressing either << or >> tune to select a radio station.
- 
- #2** Press the PRESET button for 2 seconds, the preset station memory location (P01 - P10) will be shown on the display.
- 
- #3** Press either << or >> to select a preset number (P01 - P10) to save station for later.
  - #4** Press the PRESET button once to save the radio station preset.

**Note: To remove an already saved radio station, another station must be stored in its place.**

## SELECTING A PRESET RADIO STATION

With the radio turned ON, press the PRESET button as need to select a radio preset (P01 - P10).

## SLEEP TO MUSIC

**Note: This function allows you to listen to the music (Radio or Bluetooth) while you fall asleep. The music will automatically shut off after the timer expires.**

**Note: If using the radio, it will turn on to the last used radio settings (station and volume). To adjust these settings, please refer to USING THE RADIO, BLUETOOTH MUSIC, and ADJUSTING THE VOLUME sections of this instruction manual.**

- #1** Press the SNOOZE / SLEEP button. The display will show 90. This means the radio will turn off automatically after 90 minutes.
- #2** To reduce the sleep timer, press the SNOOZE / SLEEP button to reduce the timer: 90, 80, 70, 60, 50, 40, 30, 20, 10 minutes or OFF.
- #3** To cancel the SLEEP timer before the end of the set time, Press and hold the POWER button for 3 seconds to turn the music OFF.