

TALK EMAIL CHAT SURF PLAY TALK EMAIL CHAT SURF PLAY TALK EMAIL CHAT  
ALK EMAIL CHAT SURF PLAY TALK EMAIL CHAT SURF PLAY TALK EMAIL CHAT SURF PLAY TALK EMAIL  
AT SURF PLAY TALK EMAIL CHAT SURF TALK EMAIL CHAT SURF PLAY TALK EMAIL CHAT SURF PLAY TALK EMAIL

hiptop®

START GUIDE



# Step 1

## Get ready

### 1 Insert your SIM card.

Snap the SIM from the credit card-sized plastic card by pressing your thumb down on the gold circle.

Remove the device end-cap, using the thumb notch.



Insert the SIM into its slot with the gold contacts facing down and the cut corner going in first, beneath the Menu button. Make sure that you feel the SIM lock into place.



Replace the end cap with the logo right side up.

### 2 Plug the battery charger into the back of your device.

Your device will power on as soon as you attach the charger. If it does not power on, keep the charger attached until it does (2-4 hours).

The "Waiting for Activation" screen will appear. While you wait, read **Step 2** to get ready for on-screen Registration, which is described in **Step 3**.

# Step 2

## Learn the basics

To mute or adjust the sound, open the **Sound Controls** by pressing

**MENU** + **BACK** . To adjust brightness, open the **Display Controls** by pressing **JUMP** + **BACK** .

**WHEEL** Rotate the wheel to highlight items on a screen. Press the wheel to select a highlighted item or open a pop-up menu.

**MENU** Press to open a menu of actions you can take on the current screen.

**JUMP** Press (from any screen) to return to Jump screen, your starting point for launching any application.

**BACK** Press to dismiss menus or go back to the screen you were previously viewing.

**POWER** Press and hold for three seconds to power on/off.

**D-PAD** Press the directional pad's arrows to move around in text fields, to move between items in a list, or play games!



# Step 3

## Register

### 1 Device is activated.

Before you can use your account, your device must be activated. This can take up to 48 hours, but usually takes 1-3 hours. While you wait you'll see a "Waiting for Activation" screen.

You'll know your device has been activated when this Welcome screen appears:



### 2 Step through account registration.

Press **New User** to begin registration. You'll be asked to type your name and some other basic information. Just follow the prompts until you see the Congratulations screen.

Before going to the Jump screen, you'll be able to read some helpful hints about how to use your device.

# Step 4

## Go to a Web page

Let's check network connectivity and open a Web page at the same time. But first make sure you see the service connectivity icon in the title bar:

- 1 Press **JUMP** to go to the Jump screen.
- 2 Rotate the wheel **up** to select Web Browser, then press the wheel to enter the application.
- 3 Start typing a URL. (You don't need to type the "www" at the beginning.) As soon as you start typing, the "Go To" panel opens:



- 4 What you type appears in the top field ("hiptop" in the example above). Possible URL matches, and the option to search for the text you type, appear in the drop-down menu.
- 5 To go to a Web page, you can either finish typing the complete URL in the Go To panel then press Return; or, rotate the wheel to highlight a suggested URL in the drop-down menu, then press the wheel.

# Signing in to the Desktop Interface

The data you store in your hiptop's Email, To Do, Calendar, Address Book, Notes, and Camera applications are also available for viewing or editing on the Web from any computer connected to the Internet. Information in your account is stored on secure servers in a data center protected by extensive physical security and firewalls.

To reach the Desktop Interface, do the following:

- 1** On your desktop computer, point your Web browser to:
  
  
  
  
  
  
- 2** The Desktop Interface Sign In page opens.
- 3** Type your device's **Username** and **Password** to sign in. **Click Sign In**. Your Jump page opens.
- 4** Use the Jump page navigation buttons to open the various applications or to open the **Help** window, which displays the online hiptop Help Index page. From this page you can open the user documentation.
- 5** When you're finished using the Web applications, always click the **Sign Out** link to exit the Web site securely.