



Inside of EUT, white connector on bottom of photo goes to antenna.



Antenna assembly removed from EUT.




Close up of antenna




Inside view of EUT showing power supply, battery backup.



Interior View of EUT, Transceiver module is located at top right.

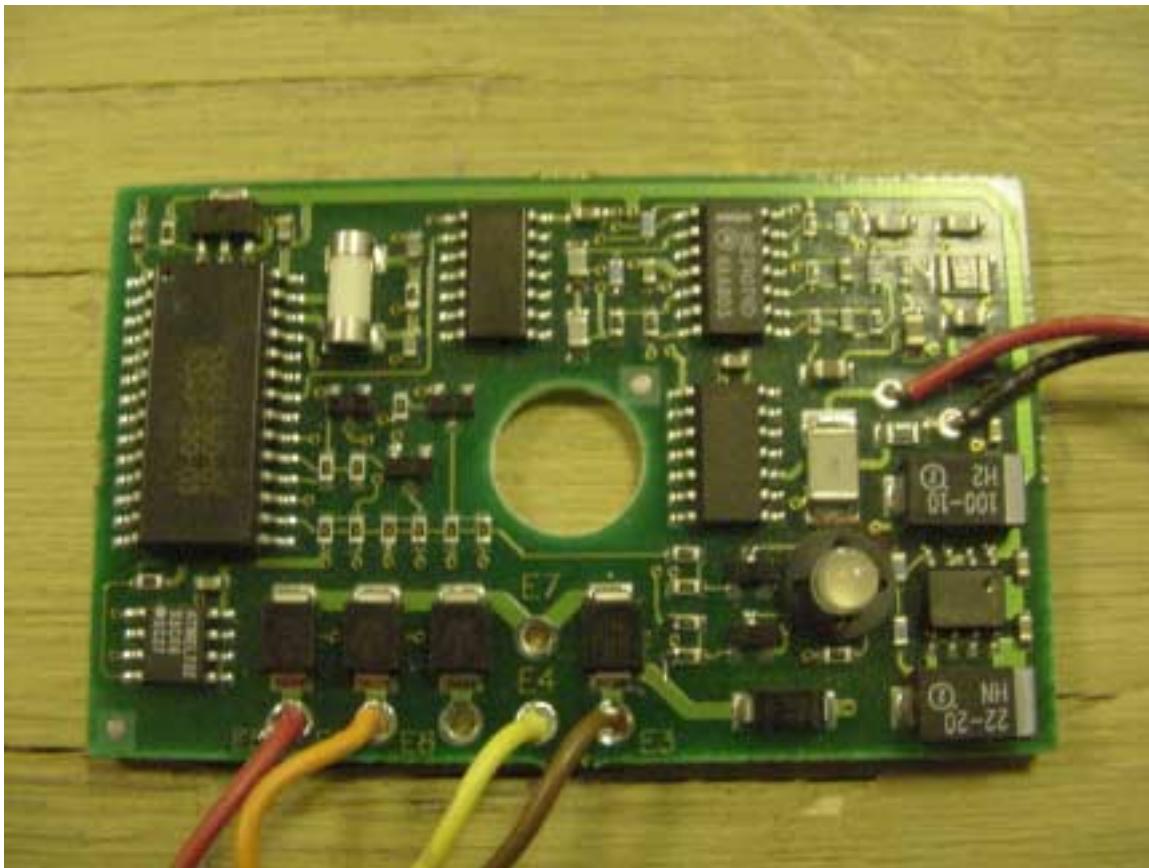

Transceiver module removed from EUT Component Side.

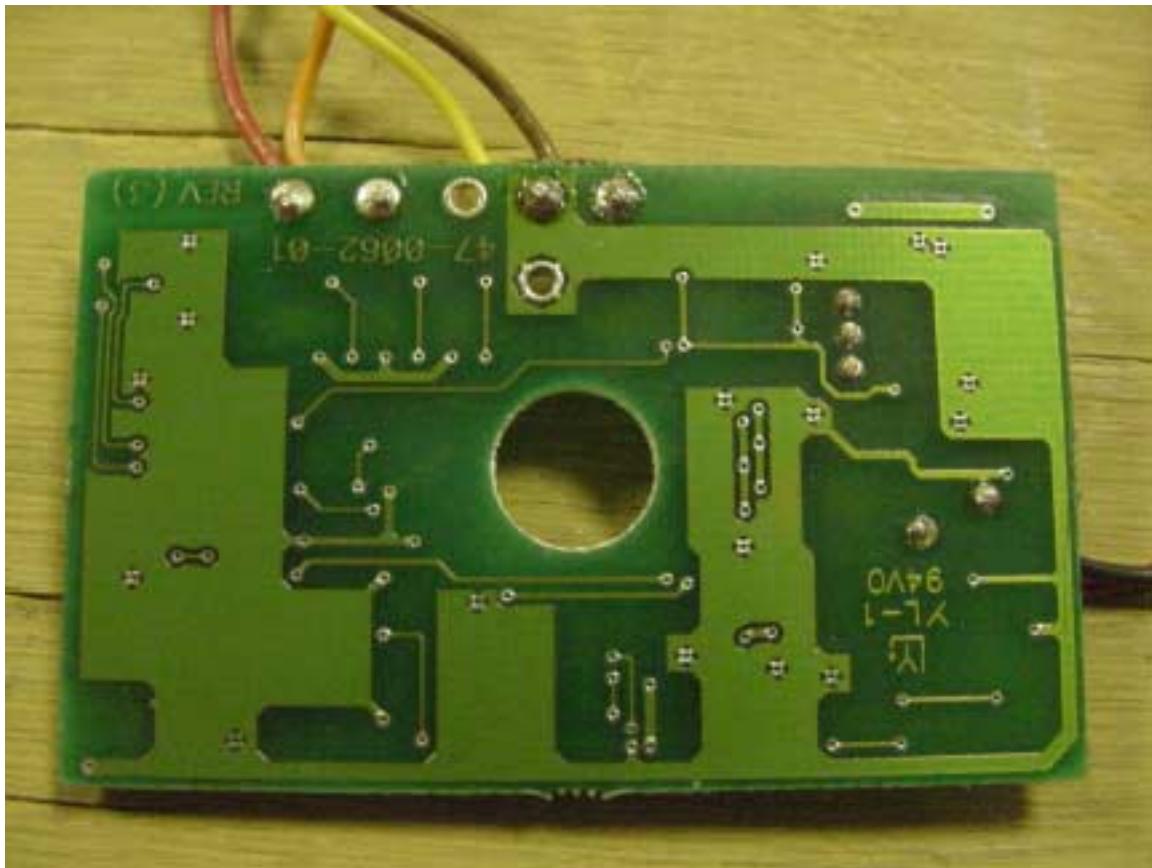

Transceiver module solder side photo.