



To download the latest User's Guide, Developer's Guide, and Firmware for your new handheld, please browse to this address:

ftp://ftp.alientechnology.com/pub/handheld/

Before you start using your new handheld, it is important that you enable the internal backup battery, by moving the small white switch under the main battery toward the right.

F

5

F

5

F

100

.

12

17

12

E.

F

E.

.

5



8/12/11

ALIEN TECHNOLOGY® ALH-900x OUICKSTART GUIDE



To download the latest User's Guide, Developer's Guide, and Firmware for your new handheld, please browse to this address:

ftp://ftp.alientechnology.com/pub/handheld/

Before you start using your new handheld, it is important that you enable the internal backup battery, by moving the small white switch under the main battery toward the right.

