

# THE “ ID ” CERTIFICATE DOCUMENT

**Product Depiction**

**NO. :**

**Version : A/0 , Pages : 3/4**

## Energy Saving Lamp

### Introduction

Instant start, flicker free

Conserves natural resources by at least saving 80% electricity than incandescent bulbs.

About 10 times lamp life than a standard incandescent bulb.

### Notice For Use

Never use with the following fixtures:

Dimming circuit

Emergency lighting fixtures

Electronic timer fixtures

Direct current fixtures

Use only at the rated voltage and frequency circuit. The power voltage must be in the range of 120V±10%.

Use indoor only. Never use it where water may drop on the lamp or where the atmosphere is humid.

Do not use in enclosed fixture, Or the lamp's life would be shorten.

Always turn off the switch when replacing or cleaning the lamp. Remove and install it by grasping only the plastic portion of the lamp.

Added weight may cause instability of free-standing portable lamps in which the distance from the bottom of the base to top of the lamp hold dose not exceed 3 times minimum vase width. Use only with portable lamps which are provided with lamp shade.

This product complies with Part 18 of the FCC Rules but may cause interference to Radios, television, wireless telephones, and remote controls. If interference occurs, move product away from the device or plug either into a different outlet.

Low EMC or Radio Frequency Interference. The lamp has filter circuits for Cutting out Radio Frequency Interference (RFI) and Complies with Electromagnetic Compatibility (EMC); they give out no harmful Radio Frequency radiation which tends to interfere with Radio, TV, and telecommunication, Mobile phones etc.

The lamps are designed to start at very low supply voltages down to about 108VAC and even lower if required, they are also designed to tolerate short term very high supply voltage surges up to 132VAC. These features are most important for developing area where the supply voltage can fluctuate widely.

They have short circuit protection ,all plastic materials used are certified Fire Retardant, they can be safely operated in the temperature range of -15 to +65 .

## NOTE

This device complies with part 18 of the FCC Rules.

- 1, Before commissioning this oven please read this instruction manual and keep it carefully.
- 2, There must be more than 30cm high space necessary above the top surface of oven.
- 3, Do not repair the oven yourself, please consult an authorized expert.
- 4, The contents of feeding bottles and baby food jars are to be stirred or shaken and the temperature is to be checked before consumption, in order to avoid burns.
- 5, Check the oven and the cable regularly for damage. If there is any kind of damage, the oven should not be used.

- Do not attempt to operate this oven with the door open since open- door operation can result in harmful exposure to microwave energy. It is important not to defeat or tamper with the safety interlocks.
- Carefully clean door seals and sealing surfaces.
- Do not operate the oven if it is damaged. It is particularly important that the oven door close properly and that there is no damage to the : (1) door(bent). (2) hinges and latches( broken or loosened). (3) door seals and sealing surfaces.
- Utensils should be checked to ensure that they are suitable for use in microwave ovens.
- When heating food in plastic or paper containers, check the oven frequently due to the possibility of ignition.
- Microwave heating of beverages can result in delayed eruptive boiling, therefore care has to be taken when handling the container.
- If smoke is observed, switch off or unplug the appliance and keep the door closed in order to stifle any flames.
- Egg in their shell and whole hard- boiled eggs shall not be heated in microwave ovens since they may explode.
- If the door or door seals are damaged. The oven must not be operated until it has been repaired by a trained person.
- Liquids or other foods must not be heated in sealed containers since they are liable to explode.

### Warning:

- 1, It is hazardous for anyone other than a trained person to carry out any service or repair operation, which involves the removal of any cover which gives protection against exposure to microwave energy.
- 2, Only allow children to use the oven without supervision when adequate instructions have been given so that the children is able to use the oven in a safe way and understands the hazards of improper use.
- 3, If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
- 4, This product will make disturbance in AV product, if any disturbance is occurred, use different electrical source jack to supply electricity or use low power or away from them.

Note: THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT .SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.