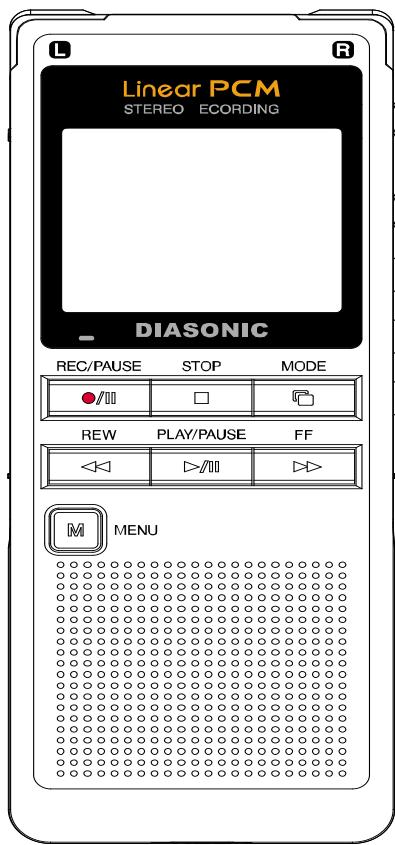
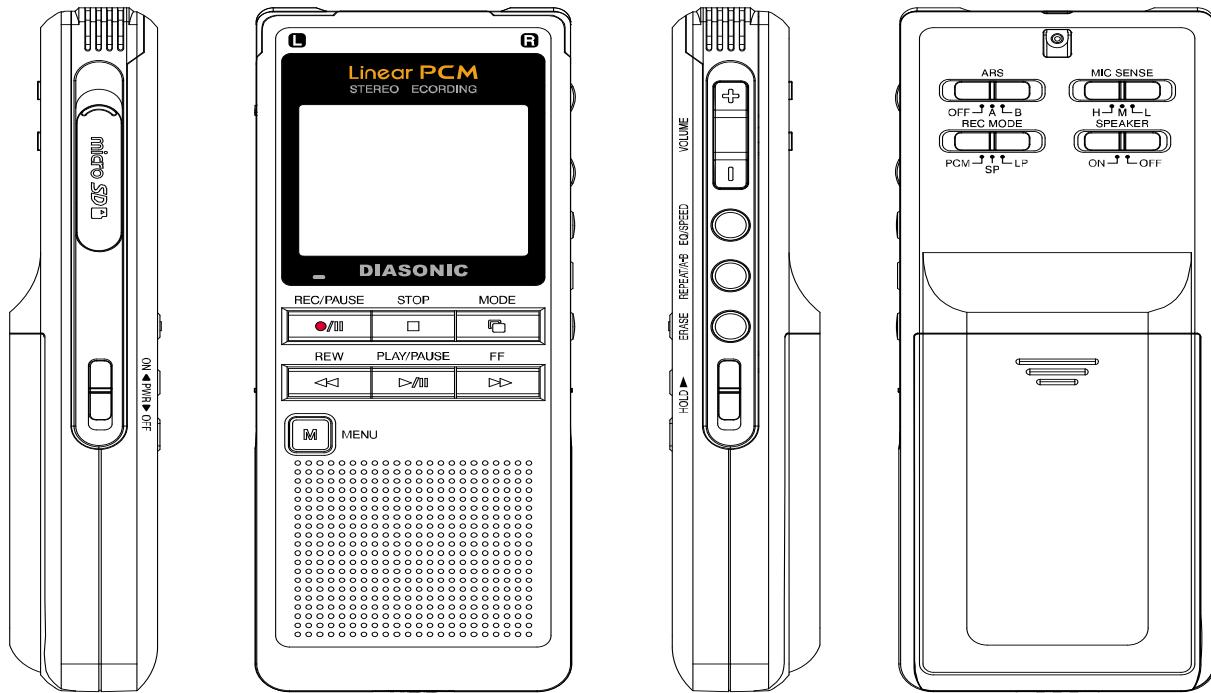

DDR-7000R

User Manual



● Name of each part



- 1.PLAY/PAUSE : Play, Pause
- 2.FF : Move to a next file, Fast Forward
- 3.REW : Move to a previous file, Fast backward
- 4.STOP : Stop, move to a previous folder
- 5.REC/PAUSE : Record, Pause
- 6.MODE : Changing a mode
- 7.MENU : Menu
- 8.VOL + : Volume up
- 9.VOL - : Volume down
- 10.EQ/SPEED : Set up Equalize and Speed
- 11.REPEAT/A-B : File repeat, Section repeat
- 12.ERASE : File erase
- 13.HOLD : key operation hold
- 14.ARS : Set up ARS
- 15.MIC SENS : Set up microphone sensitivity
- 16.REC MODE : Set up Recording quality
- 17.SPEAKER : Set up Built-in Speaker volume

● **Battery**

 
Chaning Battery

1. Press the battery cover release button, and then the battery cover open while lightly pressing down on it in the direction.
2. Insert 2pcs of AA batteries with the correct “+” and “-“ polarities.

Battery status Indicator



The battery indicator on the display shows the current battery status.



When the “Low battery” status is displayed, battery should be replaced or charged.

● **Charging**

If rechargeable batteries are used, plugging AC/DC adaptor starts charging just by connecting.

● **Power On**

Power on by holding the “▶/||” key for over 2seconds.

● **Power off**

Power off by holding “▶/||” button for over 2seconds.

● **Key Hold**

To slide the Hold key upward disables all buttons.

● **Volume Control**

Volume control button is placed on the right side of the recorder.

Volume may be adjustable from 0 to 30.

If an initial volume is set up in advance, volume level may be set up from 10 to 25 when powering on.

● Menu display and button operation

All modes and setups may be accessible throughout the display of main menu.



● Mode Switching

Whenever pressing mode button, each mode is switched from Voice, Encode, FM and Music.

● Playback

1. Select a folder by "M" button

It has 3types of folders

for efficiently managing files.

- A,B,C,D: Voice File
- Encord: encoding file
- Music: Music file

2. Select file to play back by "<◀, ▶>"

Start playing back a selected file by "▶/ ||"

3. Stop playing back by ■.



● Listening to FM Radio

1. Select FM Mode by "M" button.

2. Move to a desired FM Radio station by "<◀, ▶>".



● Recording

1. Select a folder desired to store a recorded file.

2. Start recording by "●/ ||"

3. Stop recording by ■.



Model: DDR-7000R

ANSI C63.4: 2003

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES.

OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS.

- 1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND
- 2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING

INTERFERENCE THAT MAY

CAUSE UNDESIRED OPERATION.

Notice: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.