



#### HOW TO CHANGE A SIM CARD

Designed for individuals with busy lives, the innovative SIM drawer allows the easy interchange of SIM cards .

To open the SIM drawer, lift the SIM drawer release lever (pictured) and extend it fully downwards so that the drawer appears from its slot at the top of the phone. Remove the drawer and change the SIM, aligning the slanted corners. With the phone face down, reinsert the SIM drawer into its slot and push it gently all the way in, making sure that it clicks into position. Switch on your phone to register the new SIM card.

## HANDMADE IN ENGLAND

The new Signature is the first phone ever to be hand-assembled by a single craftsman. Each phone bears the individual signature to sign the craftsman's work. The process is so challenging that it takes many years to learn the necessary skills. Very few make the grade. Only the very best and most experienced Vertu craftsmen are chosen. Highly respected throughout the company, they are the masters of their trade.





## HOW TO CHANGE THE BATTERY

Inspired by the design of vintage lighters, the engineered battery cover release mechanism is operated by a D-ring on the back of the phone. It is extremely secure, yet can be released quickly and easily with your fingertips. When the cover and battery are removed, the craftsman's engraved signature is revealed along with the decorative machined finishing of the internal surfaces. On Signature, no detail is overlooked.

Lift up the D-ring (pictured) on the back of the phone and turn it anticlockwise until the battery cover pops open. Raise the cover slightly and then move it up gently towards the top of the phone. To close, reverse the procedure: slide the cover at a slight angle carefully down the back of the phone until it hooks at the bottom, then push it gently so that it clicks shut.



# NAVIGATION KEY SETUP

Shaped to enhance the bold and sweeping aesthetic of Signature, the raised Navigation key appears to float above the keypad. Pivoting four ways on its friction-free mounting and with a satisfying central click, it enables you both to select your most useful functions with a single keypress, and to move the cursor quickly and easily around the intuitive display and menus.



## HOW TO USE THE NAVIGATION KEY

The Navigation key leaves the workshop programmed with the most popular menu options. Up locks the keypad. Down selects Names. Left selects Create Message, Right turns Bluetooth™ on/off. To change these to your preferred options, from the standby screen, press the Navigation key in your choice of direction for two seconds, then select from the menu your preferred option.

Note: To unlock the keypad, press Unlock, followed by the \* key on the keypad within two seconds.

## HOW TO CHECK FOR MESSAGES AT A GLANCE

When the phone has not been used for 30 seconds, the display gently fades to black, both saving power and creating a strikingly seamless fascia. Even in this standby mode, you can see the status of the phone at a glance thanks to another Signature innovation: a discreetly pulsing glow through the ceramic pillow. Slow flashing means the phone is in standby mode. Rapid flashing means you have missed a call or text. Constant glow means the phone is charging.

Note: There are three ways of charging Signature: via the mains, a car cigarette lighter, or a USB port. All three necessary chargers are provided in the Signature presentation box.





## MUSIC

From ringing tones to alerts, all the sounds produced by Signature are taken from a piece of music composed exclusively for Vertu by the Academy Award™-winning composer Dario Marianelli. The music was performed by the London Symphony Orchestra, conducted by Benjamin Wallfisch at Air Lyndhurst recording studios in London, with all solo flute pieces performed by Andrea Griminelli, one of the world's leading flautists. When played through the high-fidelity sound system of Signature, the effect is remarkable. It sets a new benchmark for audio performance on a mobile phone.

### HOW TO CHOOSE A RINGING TONE

To choose your favourite ringing tone, from the standby display, press Menu, then Settings, then Tones. You can choose from a wide range of full orchestral or flute solo tones. Scroll slowly through the list, and when you hear one you like, press Select. You can also specify a ringing tone for a specific caller or group, customise the SMS, Calendar and Alarm clock alert tones, and add your own choice of tones. For more information, please refer to the manual on the accompanying CD.

Image courtesy of Clive Barda.



*"Perhaps no one had yet written a piece of concert music specifically aimed at being used as ring tones, then recorded it with one of the best orchestras in the world, and NOT made it widely available on the web. The challenge was just irresistible."*

Dario Marianelli