

---

# KODAK Baby Video Accessory Camera / C10

## User guide

[www.kodak.com](http://www.kodak.com)

For help:

[www.kodak.com/go/C10support](http://www.kodak.com/go/C10support)

---

# Kodak

Eastman Kodak Company  
Rochester, New York 14650

© Kodak, 2011


All screen images are simulated.

Kodak is a trademark of Eastman Kodak Company.  
4H8795\_en

---

## What's in the box:

---

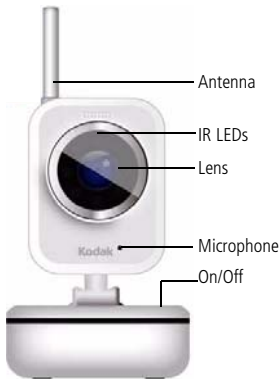

**C10 Camera**

### **Also included:**

**AC adapter** with 11.8 ft (3.6 m) cord

**Wall mounting accessories**

## Product warning



### CAUTION:

**Strangulation Hazard—do not place the camera in the crib or within 3 ft (1 m) of the baby.**

- You must regularly monitor your baby's activity. This product cannot replace responsible adult supervision. This product will not alert parents to a baby's silent activities.
- Never use extension cords with AC adapters. Use the AC adapters provided.
- When an AC adapter is plugged into an electrical outlet, do not touch the exposed end.
- Test the monitor before first use, periodically, and when changing the location of the camera.
- Small parts can be a choking hazard. Do not allow children to play with the camera.
- Install batteries correctly.
- Remove alkaline batteries from the camera if the camera is stored for long periods of time or when batteries are exhausted; do not mix old and new batteries; do not mix alkaline, standard, or rechargeable batteries.
- Keep all batteries away from children. Dispose of exhausted batteries properly.
- Do not attempt to recharge non-rechargeable camera batteries.

## Quick Start Up

### Camera

Operate the camera with the AC adapter or with 4 AA-size alkaline batteries (not provided).

- 1 If you choose to use AA-size alkaline batteries:
  - a Remove the screw on the back of the camera with a straight-blade screwdriver, then remove the battery door.
  - b Insert 4 batteries.
  - c Place the battery door back on the camera, then secure with the screw.
- 2 Select a location for the camera with the best view of the baby.



### CAUTION:

**Strangulation Hazard—do not place the camera in the crib or within 3 ft (1 m) of the baby.**

- 3 Place the camera on a flat surface, such as a dresser or shelf. To mount the camera on a wall, [see page 2](#).
- 4 Connect the AC adapter with the cord to the back of the camera.
- 5 Plug the AC adapter into a standard electrical outlet, then secure the cord to the wall using the mounting clips, if necessary.
- 6 Press the On/Off button for at least 2 seconds. The button glows when the camera is turned on.

## Mount the Camera on a Wall

**NOTE:** Test monitor reception before mounting the camera on a wall. View the image on the monitor while someone else adjusts the camera position. Optimal camera-to-subject distance for night viewing is 3 – 6 ft (0.9 – 1.8 m).



### **CAUTION:**

**Strangulation Hazard—do not place the camera in the crib or within 3 ft (1 m) of the baby.**

- 1** Select a wall location for the camera, then drill 2 holes in that location using a 13/64 in. (5.2 mm) drill bit. Use the template provided ([see page 10](#)).
- 2** Insert a wall anchor into each hole, then gently tap the anchors with a hammer until they are seated (flush-mounted) in the wall.
- 3** Insert the screws into the anchors, then tighten the screws until approximately 7/32 in. (5.6 mm) of each screw is exposed.
- 4** Slide the base of the camera over the screws until the camera locks into place.
- 5** Connect the AC adapter to the camera (or insert 4 AA-size alkaline batteries).
- 6** Secure the AC adapter cord to the wall with the mounting clips.

## Using the Camera

**On / Off Button**—Press for more than 2 seconds to turn camera On/Off.

## Linking the camera to your monitor

To purchase additional cameras and approved accessories, go to the KODAK Store ([www.kodak.com/go/accessories](http://www.kodak.com/go/accessories)).

To link your camera:

Linking button




- 1 Use a paper clip to press and hold the linking button on the back of the camera for more than 2 seconds (a white LED on the **camera** blinks twice per second for 10 seconds).
- 2 Press and hold the OK button on the **monitor** for more than 3 seconds (a linking icon appears on the LCD). After the camera is successfully linked, the display will show the image from the camera.

If you have more than one camera linked, the image on the monitor switches from camera No. 2 to camera No. 1 after 10 seconds.

NOTE: Repeat the procedure to link up to 4 cameras.

## Camera Select

You can view video from the selected camera or from all cameras in sequence. The default monitor setting displays video from each linked camera for up to 10 seconds in sequence. To change to a different camera manually, press  to select a camera, then press OK.

## Tips and Troubleshooting

### Picture not clear—

- For Night Vision, position the camera within 6 ft (1.8 m) of the baby.
- Test the reception by moving the monitor and/or camera to a different location.
- Position the monitor closer to the camera, if necessary.

**Squealing sound**—Move the camera and the monitor farther away from each other.



## Appendix

### KODAK Baby Video Accessory Camera / C10

Specifications	
<b>Power supply</b>	
<b>C10 Camera</b>	AC Adapter Model No. EFS0050059055OUL, Manufacturer: Eastern Frontier. EIAJ Class 2 DC plug. Input: 100-240V AC 50/60 Hz. 0.2 Amp Output: 5.9 V DC, 0.55 Amp, 3.6m cable
Size	2.8 x 3.2 x 6.0 in. (7.1 x 8.1 x 15.2 cm)
Weight	0.46 lb (210 g)
<b>Wireless network compatibility</b>	
2.4 GHz RF	
<b>Other features</b>	
Temperature	Operating: 32 to 104°F (0 to 40°C) Storage: -25 to 160°F (-32 to 71°C)

### Limited warranty

Kodak warrants KODAK Consumer Electronic Products and Accessories ("Products"), to be free from malfunctions and defects in both materials and workmanship for one year from the date of purchase. Retain the original dated sales receipt. Proof of the date of purchase will be required with any request for warranty repair.

### **Limited warranty coverage**

Warranty service is only available from within the country where the Products were originally purchased. You may be required to ship Products, at your expense, to the authorized service facility for the country where the Products were purchased. Kodak will repair or replace Products if they fail to function properly during the warranty period, subject to any conditions and/or limitations stated herein. Warranty service will include all labor as well as any necessary adjustments and/or replacement parts. If Kodak is unable to repair or replace a Product, Kodak will, at its option, refund the purchase price paid for the Product provided the Product has been returned to Kodak along with proof of the purchase price paid. Repair, replacement, or refund of the purchase price are the sole remedies under the warranty. If replacement parts are used in making repairs, those parts may be remanufactured, or may contain remanufactured materials. If it is necessary to replace the entire Product, it may be replaced with a remanufactured Product. Remanufactured Products, parts and materials are warranted for the remaining warranty term of the original Product, or 90 days after the date of repair or replacement, whichever is longer.

### **Limitations**

This warranty does not cover circumstances beyond Kodak's control. This warranty does not apply when failure is due to shipping damage, accident, alteration, modification, unauthorized service, misuse, abuse, use with incompatible accessories or attachments, failure to follow Kodak's operation, maintenance or repacking instructions, failure to use items supplied by Kodak

(such as adapters and cables), or claims made after the duration of this warranty. Kodak makes no other express or implied warranty for this product, and disclaims the implied warranties of merchantability and fitness for a particular purpose. In the event that the exclusion of any implied warranty is ineffective under the law, the duration of the implied warranty will be one year from the purchase date or such longer period as required by law. The option of repair, replacement, or refund is Kodak's only obligation. Kodak will not be responsible for any special, consequential or incidental damages resulting from the sale, purchase, or use of this product regardless of the cause. Liability for any special, consequential or incidental damages (including but not limited to loss of revenue or profit, downtime costs, loss of the use of the equipment, cost of substitute equipment, facilities or services, or claims of your customers for such damages resulting from the purchase use or failure of the Product), regardless of cause or for breach of any written or implied warranty is expressly disclaimed.

### **Your rights**

Some states or jurisdictions do not allow exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. Some states or jurisdictions do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you. This warranty gives you specific rights, and you may have other rights which vary from state to state or by jurisdiction.

### **Outside the United States and Canada**

In countries other than the United States and Canada,

the terms and conditions of this warranty may be different. Unless a specific Kodak warranty is communicated to the purchaser in writing by a Kodak company, no warranty or liability exists beyond any minimum requirements imposed by law, even though defect, damage, or loss may be by negligence or other act.

### **Regulatory compliance and advisory**

#### **FCC compliance and advisory**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed or used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: 1) reorient or relocate the receiving antenna; 2) increase the separation between the equipment and the receiver; 3) connect the equipment to an outlet on a circuit different from that to which the receiver is connected; 4) consult the dealer or an experienced radio/TV technician for additional suggestions.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. Where shielded interface cables have been provided with the product or specified additional components or accessories elsewhere defined to be used with the installation of the product, they must be used in order to ensure compliance with FCC regulation.

## FCC and Industry Canada

This device complies with Industry Canada RSS-210 and FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

### FCC et Industrie Canada

Cet appareil est conforme à la norme RSS-210 d'Industrie Canada et aux réglementations de la FCC. Son utilisation est soumise aux deux conditions suivantes : (1) cet appareil ne doit pas provoquer d'interférences nuisibles, et (2) cet appareil doit supporter les interférences reçues, y compris celles susceptibles de nuire à son bon fonctionnement.

## Canadian DOC statement

**DOC Class B Compliance**—This Class B digital apparatus complies with Canadian ICES-003.

**Observation des normes-Classe B**—Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

## Notice

When the monitor is operating, it is possible to view images and other content directly from other sources. Eastman Kodak Company, its subsidiaries and affiliates do not control and are not responsible for any content displayed or viewed.

## Wall mounting Template

Select a wall location for the camera, then drill 2 holes in that location using a 13/64 in. (5.2 mm) drill bit. Use this template to determine hole placement.

Align the top of your camera with the top of the drawing below.

