



About this User Guide

Spend some quality time with your User Guide. You'll reward yourself with great pictures to print, email, and share on your favorite social networking sites.

Keep learning

For more in-depth information about your camera, including its advanced features:

- Go to www.kodak.com/go/M790manuals
- Choose the M790 Extended User Guide

The Extended User Guide details every feature, button, and menu choice. It's indexed, searchable, and in color. (It's also too big to fit in this box.)

Watch how-to videos at www.kodak.com/go/wirelesshowto

Keep your camera close to you

Be ready—to capture the unexpected, to see your world from new angles, to take and share twice as many photographs as last year.

Because pictures hold memories. Sharing brings them to life.

 
 
 


Table of contents

Setting up your camera 3

- Loading the KLIC-7004 battery 3
- Charging the battery with AC power 4
- Inserting an SD/SDHC Card 5
- Turning on the camera 6
- Setting the language, date/time 6
- Connecting to a Wi-Fi network 7
- About Wi-Fi sharing 7

Installing the KODAK Share Button App 8

- Installing the Share Button App 8
- Setting up the Share Button App (a one-time setup) 9

Taking pictures and videos 11

- Taking pictures in Smart Capture mode 11
- Using Clean view and Tools view 12
- Monitoring the battery level 13
- Taking a video 13
- Using different modes 14

Reviewing pictures 16

Sharing, copying, and archiving 17

- Sharing pictures beyond a Wi-Fi network 18
- Using the Share Later feature 19
- Copying pictures to smartphone, tablet, or media player 20
- Transferring/archiving and sharing pictures using Wi-Fi and your computer 21


Printing to a Wi-Fi-enabled printer 22

Solving problems 23

Appendix 25

1 Setting up your camera

 Loading the KLIC-7004 battery

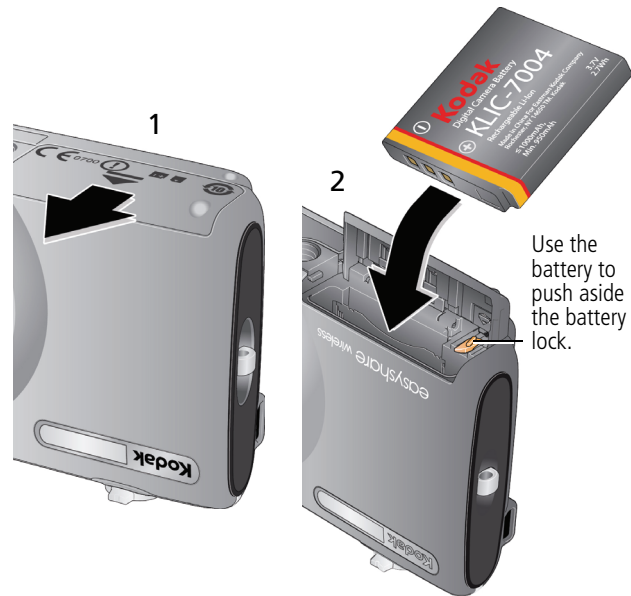

Charge the battery

[See page 4](#)

Purchase an extra battery

www.kodak.com/go/accessories


www.kodak.com/go/M790support

EN 3

Charging the battery with AC power

Charge the Li-Ion battery anytime—don't wait until it's exhausted. Charge until the Battery Charging light stops blinking. (Charging time varies by battery level. You can use the camera while it's plugged in.)

 - 1 Turn off the camera.
- 2 Attach the plug that fits your electrical outlet.
- 3 Connect the camera, USB cable, and charger.

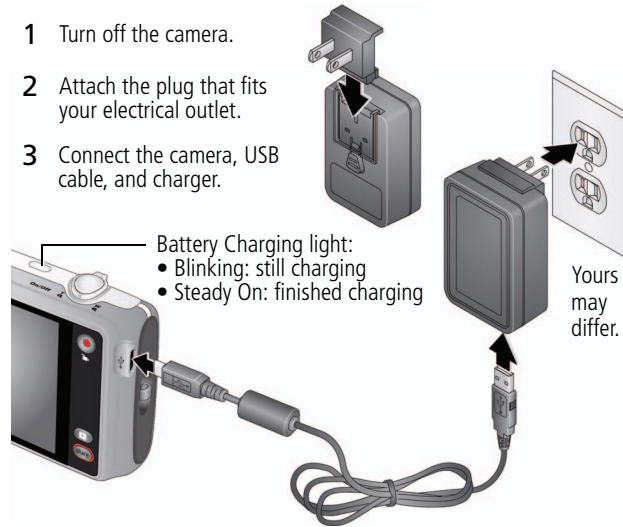

Charging the battery with a computer USB port

Use the USB cable to connect the camera to a computer USB port. Charge until the Battery Charging light stops blinking. (USB charging is typically slower than the previous method.)

IMPORTANT: *The camera charges when the computer is on and awake. Turn off the computer hibernation, sleep, and standby modes.*

 
Inserting an SD/SDHC Card

Your camera has enough internal memory for a few practice pictures. We **highly recommend** purchasing a Class 4 or higher SD/SDHC Card to conveniently store more pictures/videos. (Card class is typically shown on the card or packaging.)



CAUTION:

A card can only be inserted one way; forcing it may cause damage. Inserting or removing a card while the camera is on may damage the pictures, the card, or the camera.

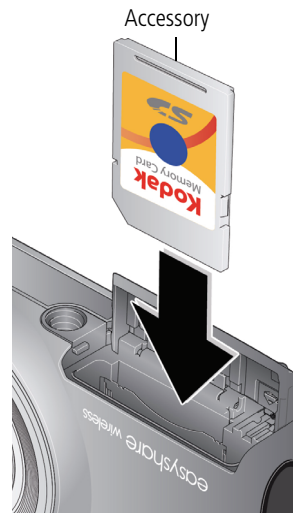

- 1 Turn off the camera, then open the door.
- 2 Insert a card until it clicks into place. (To remove a card, press and release it.)

IMPORTANT: *When you turn on the camera, it checks to see if a card is inserted. If pictures/videos are detected in internal memory, the camera prompts you to move them to the card. New pictures/videos are stored on the card.*

Purchase memory cards www.kodak.com/go/accessories

www.kodak.com/go/M790support

Turning on the camera



 
Setting the language, date/time

The first time you turn on the camera, you're prompted to choose your language and set the date/time.



Choose your language:


- 1 To keep the language that's currently displayed, tap Next.
- 2 To change the current language, tap Change. Drag or swipe ▲▼ to find your language, then tap it.

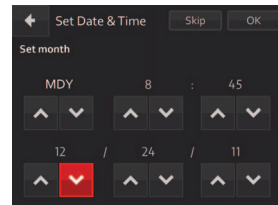

Set the date and time:

- 1 Tap ▲▼ under MDY if you want to change the date format. Do the same to change Hour, Minutes, Month, Day, and Year.
- 2 Tap OK.

 Connecting to a Wi-Fi network

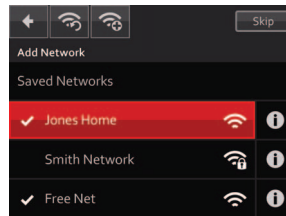

- 1 The camera offers a short instruction about sharing. After you read it, press OK.

The camera searches for available Wi-Fi networks.

- 2 Tap your desired network.

To simplify sharing, the network is added to your saved networks. (If you're asked for your network password, enter it. Tap Skip if you want to select a network later.)

Connecting to a non-broadcasting network

If you've set up your home network as non-broadcasting:

- 1 Tap Add Network.
- 2 Enter the network SSID (the network name).
- 3 If necessary, enter the security code (password).

About Wi-Fi sharing

To share pictures wirelessly, you need access to one of these:

- Home wireless router or access point, or
- Free, public, open, Wi-Fi hotspot that requires no Internet browser, terms and conditions, or password, or
- A compatible 3G/4G smartphone or tablet and cellular reception

(See the latest list of compatible devices: www.kodak.com/go/mobile)

**Keep reading to learn about
taking pictures and sharing wirelessly!**

www.kodak.com/go/M790support

2 Installing the KODAK Share Button App

Before you can share pictures/videos, you must:

- Install the KODAK Share Button App.
See [Installing the Share Button App](#) (below).
- Perform a one-time setup.
See [Setting up the Share Button App \(a one-time setup\)](#), page 9.

Installing the Share Button App

- 1 Make sure the computer is connected to the Internet.
- 2 Turn **off** the camera.
- 3 Using the USB cable, connect the camera to a computer USB port.
The camera turns on. The Camera Setup App runs. (If there are many pictures/videos on your memory card, this step could take several minutes.)



- 4 Watch your computer—when the Camera Setup App prompts you, click Install Now. (If you're prompted to allow the Camera Setup App to run, click Allow.)
- 5 When prompted, click Finish.

If you successfully installed the software

See "[Setting up the Share Button App \(a one-time setup\)](#)" on page 9.

Installing the KODAK Share Button App

If installation does not begin after several minutes

- 1 Make sure the computer is connected to the Internet.
- 2 Open My Computer. (For MAC OS, go to the Finder.)
- 3 Open the KODAK Setup App. (For MAC OS, open the KODAK Camera Setup App.)

If the installation still doesn't begin

- 1 Download the Share Button App from www.kodak.com/go/camerasw.
- 2 After it's downloaded, double-click to install it.

Setting up the Share Button App (a one-time setup)

After you install the Share Button App on your computer and click Finish (see page 8), the App automatically starts.* It prompts you through a one-time setup of your email and social networking credentials (user ID and password). The email addresses and sites that you choose will appear on your camera when you press the Share button.

If you successfully set up the software

See "After setting up the Share Button App" on page 10.

*** If the App didn't start when you clicked Finish**

The camera may have timed out.

- 1 Unplug the camera from the USB cable and turn it off.
- 2 Plug it back in and turn it on.
- 3 When the App starts, perform the one-time setup, above.



Installing the KODAK Share Button App



After setting up the Share Button App

Congratulations—you're ready to share!

- Take some pictures (see page 11).
- Choose pictures to share (see page 17).

Each time you connect:

- Pictures/videos are transferred to your computer.
- The Share Button App emails and/or shares your chosen pictures on your social networking sites.

 
 
 
Adding new email addresses to your camera

The easiest way to add email addresses to your camera is by using the Share Button App on your computer:

- 1 Start the Share Button App on your computer.
- 2 Click Settings.
- 3 Click Email List Setup.
- 4 Click +Add Email.
- 5 Add an email address.


The next time you connect the camera to the computer, the email address is added to your camera.

IMPORTANT: You must set up Email Sharing before you can share by email. See "Setting up the Share Button App (a one-time setup)" on page 9.



3 Taking pictures and videos

Taking pictures in Smart Capture mode


When you turn on the camera the first time, it's ready to take pictures in Smart Capture mode . (After that, it remembers the last mode you used.)

- 1 Use the LCD to compose the picture.
- 2 Press the Shutter button **halfway down** to focus and set exposure.

Focus brackets indicate the camera focus area. If the camera is not focusing on the desired subject (or if you get an error), release the Shutter button and recompose the scene.

- 3 When the Focus brackets turn green, press the Shutter button **completely down**.



The new picture is briefly displayed and is saved unless you tap Delete . (To dismiss the picture and get back to taking pictures right away, press the Shutter button halfway down.)

Want to go right to Wi-Fi sharing? See page 17.

Taking pictures and videos

Using Clean view and Tools view

Sometimes, you want to see all tools that are available. (Other times, you want a clean, uncluttered view.)

Tap anywhere on the LCD to change between Clean view and Tools view.

Clean view



Tools view

(Tap a tool to adjust its settings.)

A photograph of the same family on the beach, but the camera interface is in 'Tools view' mode. The interface is cluttered with various settings and tools. Lines connect text labels to specific elements in the interface:






- Touch Shutter
- Self-timer/Burst
- Flash Mode
- Exposure compensation
- ISO
- More (Swipe toolbar or tap More to see hidden tools.)
- MODE
- ISO Speed
- ISO 6400
- Program
- Settings
- Date stamp
- Sharpness
- Color mode
- Focus/Exposure zone
- White balance
- Zoom slider
- Pictures/video time remaining
- Wi-Fi status
- Battery level

NOTE: When you change a setting, it remains set even if you turn off the camera.


Taking pictures and videos

Monitoring the battery level

Don't miss a picture-taking opportunity—keep your battery fully charged.

Full	
Three quarters	
Half	
One Quarter/Critical	
Plugged into AC Power	

Taking a video


The camera is always ready to take a video—just press and release the Record Video button . (Press and release it again to stop.)



www.kodak.com/go/M790support

Taking pictures and videos


Using different modes

Capture mode	For
 Smart Capture	General picture taking—it offers excellent image quality and ease of use.
Program Mode	More creative control than Smart Capture.
Scene Modes	Point-and-shoot simplicity when taking pictures under special conditions (see page 15).

1 Tap **MODE**



 2 Tap the mode that suits your subject.

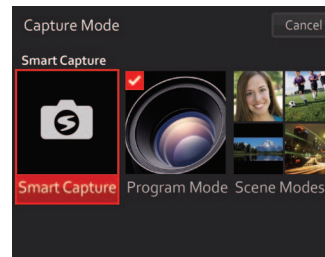

Taking pictures and videos

Using Scene modes

Choose a Scene mode before taking a picture.

- 1 Tap **MODE**, then tap Scene Modes.
- 2 Tap a Scene mode:


Scene mode	For
Portrait	Full-frame portraits of people.
Sport	Subjects that are in motion.
Landscape	Distant scenes.
Photobooth	Taking 4 pictures, combining them into 1 strip.
Close-up	Close range. Use available light instead of flash.
Sunset	Subjects at dusk.
Backlight	Subjects that are in shadow or "backlit."
Candlelight	Subjects illuminated by candlelight.
Children	Action pictures of children in bright light.
Blur Reduction	Reducing blur of camera shake, subject motion.
Bright	Bright beach or snow scenes.
Fireworks	Fireworks.
Self-Portrait	Close-ups of yourself.
Night Portrait	Red-eye reduction of people in night scenes.
High ISO Auto	People indoors, in low-light scenes.
Panorama	"Stitching" 2 or 3 pictures into 1 panoramic scene.

4 Reviewing pictures

- 1 Press the Review button .
The most recent picture/video is displayed.
- 2 Swipe   to view the previous or next picture.



 Understanding the review icons

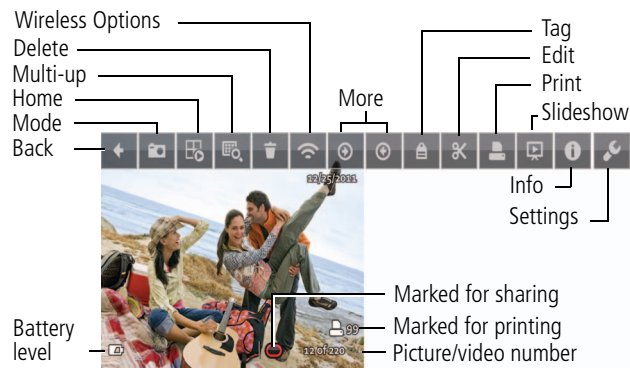

5 Sharing, copying, and archiving

You've already:

Installed the Share Button App on your computer. (You **must** install the Share Button App and set up accounts/passwords. [See page 8.](#))

 
Taken pictures ([see page 11](#)).

- 1 Press the camera Share button.
- 2 Swipe ◀▶ to find a picture.
- 3 Tap the desired email addresses and/or social networking sites.

NOTE: To choose multiple pictures, swipe the LCD ◀▶. Tap more addressees or sites.

- 4 Tap Send.

The camera connects to your network and the pictures are shared.

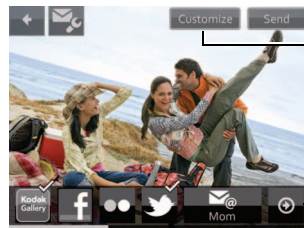

Tap **Customize** to change the default subject/message that accompanies your shared pictures as well as album name/descriptions.

Tap **More** (⊕) to see more destinations.

If no saved Wi-Fi networks are found, you can:

- Tap Re-scan (📶) (at the top of the LCD) to re-scan for a network.
- Share using a smartphone ([see page 18](#)).
- Use the Share Later feature ([see page 19](#)).
- Share using the USB cable ([see page 21](#)).

www.kodak.com/go/M790support

Sharing, copying, and archiving

 
Sharing pictures beyond a Wi-Fi network

Most public Wi-Fi hot spots are “captive” portals—they require you to accept their terms and conditions before accessing the Internet. This camera does not support captive portals.

No problem! If you have an ANDROID, RIM BLACKBERRY, or APPLE iOS smartphone or a 3G/4G tablet* running the EASYSHARE Camera App you can share pictures anywhere there’s a cellular network!



IMPORTANT: You must download and install the EASYSHARE Camera App on your smartphone/tablet. Go to www.kodak.com/go/mobile.

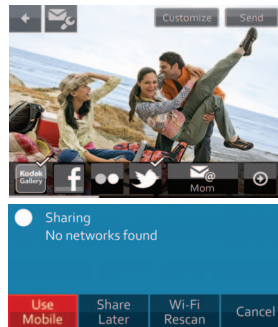

- 1 Press the camera Share button.
- 2 Swipe ◀▶ to find a picture.
- 3 Tap the desired destinations, then tap Send.
- 4 Tap Use Mobile.
The camera broadcasts its own Wi-Fi network, which your smartphone/tablet recognizes.

- 5 Start the EASYSHARE Camera App on your smartphone/tablet.
The camera and smartphone/tablet work together to email and share.

* See the latest list of compatible devices: www.kodak.com/go/mobile

Sharing, copying, and archiving

Using the Share Later feature

If the camera cannot find a Wi-Fi network, you can tap Share Later. Then, when you are back home, you have options:

 
The recommended option when you are back home:



1 Press the Review button .



2 Tap Wireless Options.

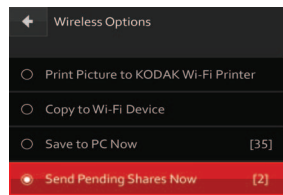

3 Tap Send Pending Shares Now.
If a saved network is discovered, the pictures are shared.

Other options when you are back home:

- Choose new pictures to share ([page 17](#)) and tap Send.
Any unshared pictures are sent with the new ones.
- Transfer (archive) pictures to your computer ([page 21](#)).
When pictures have been transferred to your computer, any pictures tagged for sharing are emailed or shared.

www.kodak.com/go/M790support

 
Sharing, copying, and archiving

Copying pictures to smartphone, tablet, or media player

You can copy pictures from your camera to view on your device. (See the latest list of compatible devices: www.kodak.com/go/mobile.)

On your camera:

- 1 Press the Review button .

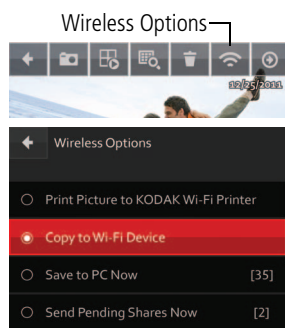

- 2 Tap Wireless Options.
- 3 Tap Copy to Wi-Fi Device.

- 4 To copy a picture, tap Copy to Wi-Fi device. (If you tap Select Multiple, tap the pictures to copy.)

- 5 Tap Copy.

On your smartphone, tablet, or media player:

IMPORTANT: Download and install the EASYSHARE Camera App on your smartphone, tablet, or media player. Go to www.kodak.com/go/mobile.

- 1 When prompted by the camera, start the KODAK EASYSHARE Camera App on the smartphone, tablet, or media player.
- 2 Connect to the network specified on the camera LCD.
- 3 If it's the first time you've used this device with the camera, you may be prompted to select a network or enter a password.

The camera and device connect. The pictures are copied to the device.

Sharing, copying, and archiving

Transferring/archiving and sharing pictures using Wi-Fi and your computer

Use this procedure to transfer/archive (back up) and share pictures using Wi-Fi and your computer.

IMPORTANT: *You must install and set up the Share Button App (see page 8).*

- 1 Log on to the computer account where the Share Button App resides.
- 2 Move within range of your computer's Wi-Fi network.
- 3 Plug the camera into AC power (see page 4).

The camera turns on. Pictures that have not been transferred to your computer are transferred/archived (backed up). If a saved network is discovered, the pictures are shared.

Transferring/archiving and sharing pictures using the USB cable

Use this procedure to transfer/archive (back up) and share pictures using the USB cable.

IMPORTANT: *You must install and set up the Share Button App (see page 8).*




 

- 1 Turn **off** the camera.
- 2 Using the USB cable, connect the camera to a computer USB port.
- 3 Follow the prompts to transfer pictures/videos to your computer.

Pictures that you tagged are emailed or shared.

www.kodak.com/go/IM790support

6 Printing to a Wi-Fi-enabled printer

You can print wirelessly from your camera to a Wi-Fi-enabled KODAK All-in-One Printer. (Go to www.kodak.com/go/aio.)

- 1 Turn on the printer. (If applicable, turn on the printer Wi-Fi antenna.)
- 2 Press the camera Review button .
- 3 Swipe   to find a picture.
- 4 Tap Wireless Options.

 



NOTE: You can print one picture (or multiple copies of the same picture) at a time.

- 5 Tap Print Pictures to KODAK Wi-Fi Printer.
- 6 Follow the prompts to choose the printer and complete the print request.

Other wireless printing options:


You can print to a GOOGLE CLOUD PRINT Web Printing Service printer:

- 1 Press the camera Share button.
- 2 Swipe   to find a picture.
- 3 Tap the email address of your printer. (If it's not available, set it up in the Share Button App on your computer. See [page 9](#).)
- 4 Tap Send.


The camera sends the print request to the printer.

7 Solving problems

 Go to www.kodak.com/go/M790support for the Extended User Guide, firmware updates, and answers to your questions.

Status	Solution
Camera does not turn on/off; buttons do not function.	<ul style="list-style-type: none">■ Remove then reinsert or replace the battery (see page 3).■ Charge the rechargeable battery (see page 4).
Camera freezes when a card is inserted or removed.	<ul style="list-style-type: none">■ Turn the camera off, then back on. Make sure the camera is turned off before inserting or removing a card.
Memory card not recognized.	<ul style="list-style-type: none">■ Card may be corrupted. Format the card in the camera. (Find the Format feature in the Settings menu ) <p>Caution: Formatting a card deletes all pictures and videos, including protected files.</p> <ul style="list-style-type: none">■ Use another memory card.
Favorite email addresses are not on the camera.	<ul style="list-style-type: none">■ Install the KODAK Share Button App on your computer, then see page 10.
EYE-FI Card does not work in the camera.	<ul style="list-style-type: none">■ An EYE-FI Card is treated as an SD Card. We recommend using the built-in Wi-Fi features of this camera (see page 17).

Solving problems

Status	Solution
Cannot connect to a network away from home.	<p>NOTE: The camera does not support "captive" portals. (See page 18.)</p> <p>If a Wi-Fi network is not found, you can:</p> <ul style="list-style-type: none">■ Tap Re-scan  (at the top of the LCD) to re-scan for a network.■ Share using a smartphone (see page 18).■ Use the Share Later feature (see page 19).■ Share using the USB cable (see page 21).
Can no longer use the camera to send email or share on a social networking site.	<p>If you've recently updated your email or social networking site user ID, password, or any other credential:</p> <ul style="list-style-type: none">■ On your computer, start the KODAK Share Button App.■ Click Settings, then update and save your credentials.■ Using the USB cable, connect the camera to your computer to receive the updates.

Getting help on the Web

Extended User Guide	www.kodak.com/go/M790manuals
Support for your product	www.kodak.com/go/M790support
Wireless camera How-to videos	www.kodak.com/go/wirelesshowto
Latest camera firmware	www.kodak.com/go/M790downloads
Contact Kodak	www.kodak.com/go/contact

8 Appendix

Device compatibility

See the latest list of compatible devices: www.kodak.com/go/mobile

CAUTION:

When using this product, it should be installed and operated with a minimum distance of 7.9 in. (20 cm) for 2.4 GHz operations between the radiator and your body. This transmitter must not be collocated or operated in conjunction with any other antenna or transmitter.

CAUTION:

Do not disassemble this product; there are no user-serviceable parts inside. Refer servicing to qualified service personnel. KODAK AC Adapters and Battery Chargers are intended for indoor use only. The use of controls, adjustments, or procedures other than those specified herein may result in exposure to shock and/or electrical or mechanical hazards. If the LCD breaks, do not touch the glass or liquid. Contact Kodak customer support.

- The use of an accessory that is not recommended by Kodak may cause fire, electric shock, or injury. For approved accessories, go to www.kodak.com/go/accessories.
- Use only a USB-certified computer equipped with a current-limiting motherboard. Contact your computer manufacturer if you have questions.
- If using this product in an airplane, observe all instructions of the airline.
- When removing the battery, allow it to cool; it may be hot.
- Follow all warnings and instructions supplied by the battery manufacturer.
- Use only batteries approved for this product to avoid risk of explosion.
- Keep batteries out of the reach of children.
- Do not allow batteries to touch metal objects, including coins. Otherwise, a battery may short circuit, discharge energy, become hot, or leak.
- Do not disassemble, install backward, or expose batteries to liquid, moisture, fire, or extreme temperature.
- Remove the battery when the product is stored for an extended period of time. In the unlikely event that battery fluid leaks inside the product, contact Kodak customer support.

Appendix

- In the unlikely event that battery fluid leaks onto your skin, wash immediately with water and contact your local health provider. For additional health-related information, contact your local Kodak customer support.
- Dispose of batteries according to local and national regulations. Go to www.kodak.com/go/kes.
- See www.kodak.com/go/reach for information about the presence of substances included on the candidate list according to article 59(1) of Regulation (EC) No. 1907/2006 (REACH).

Limited Warranty

Kodak warrants its digital cameras and accessories (excluding batteries) to be free from malfunctions and defects in both materials and workmanship for the warranty period specified on your KODAK Product packaging. Retain the original dated sales receipt. Proof of purchase date is required with any request for warranty repair.

Limited warranty coverage

Warranty service is only available from within the country where the products were originally purchased. You may be required to ship products, at your expense, to the authorized service facility for the country where the products were purchased. Kodak will repair or replace products if they fail to function properly during the warranty period, subject to any conditions and/or limitations stated herein. Warranty service will include all labor as well as any necessary adjustments and/or replacement parts. If Kodak is unable to repair or replace a product, Kodak will, at its option, refund the purchase price paid for the product provided the product has been returned to Kodak along with proof of the purchase price paid. Repair, replacement, or refund of the purchase price are the sole remedies under the warranty. If replacement parts are used in making repairs, those parts may be remanufactured, or may contain remanufactured materials. If it is necessary to replace the entire product, it may be replaced with a remanufactured product. Remanufactured products, parts and materials are warranted for the remaining warranty term of the original product, or 90 days after the date of repair or replacement, whichever is longer.

Limitations

This warranty does not cover circumstances beyond Kodak's control. This warranty does not apply when failure is due to shipping damage, accident, alteration, modification, unauthorized service, misuse, abuse, use with incompatible accessories or attachments, failure to follow Kodak's operation, maintenance or repacking instructions, failure to use items supplied by Kodak

Appendix

(such as adapters and cables), or claims made after the duration of this warranty. **Kodak makes no other express or implied warranty for this product, and disclaims the implied warranties of merchantability and fitness for a particular purpose.** In the event that the exclusion of any implied warranty is ineffective under the law, the duration of the implied warranty will be one year from the purchase date or such longer period as required by law. The option of repair, replacement, or refund is Kodak's only obligation. Kodak will not be responsible for any special, consequential or incidental damages resulting from the sale, purchase, or use of this product regardless of the cause. Liability for any special, consequential or incidental damages (including but not limited to loss of revenue or profit, downtime costs, loss of the use of the equipment, cost of substitute equipment, facilities or services, or claims of your customers for such damages resulting from the purchase, use, or failure of the product), regardless of cause or for breach of any written or implied warranty is expressly disclaimed. The limitations and exclusions of liability set forth herein apply to both Kodak and its suppliers.

Your rights

Some states or jurisdictions do not allow exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. Some states or jurisdictions do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you. This warranty gives you specific rights, and you may have other rights which vary from state to state or by jurisdiction.

Outside the United States and Canada

In countries other than the United States and Canada, the terms and conditions of this warranty may be different. Unless a specific Kodak warranty is communicated to the purchaser in writing by a Kodak company, no warranty or liability exists beyond any minimum requirements imposed by law, even though defect, damage, or loss may be by negligence or other act.

FCC compliance and advisory

FC KODAK EASYSHARE Wireless Camera / M790

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

www.kodak.com/go/M790support

EN 27

Appendix

This equipment generates, uses, and can radiate radio frequency energy and, if not installed or used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: 1) reorient or relocate the receiving antenna; 2) increase the separation between the equipment and the receiver; 3) connect the equipment to an outlet on a circuit different from that to which the receiver is connected; 4) consult the dealer or an experienced radio/TV technician for additional suggestions.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. Where shielded interface cables have been provided with the product or specified additional components or accessories elsewhere defined to be used with the installation of the product, they must be used in order to ensure compliance with FCC regulation.

FCC and Industry Canada

This device complies with Industry Canada RSS-210 and FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC et Industrie Canada

Cet appareil est conforme à la norme RSS-210 d'Industrie Canada et aux réglementations de la FCC. Son utilisation est soumise aux deux conditions suivantes : (1) cet appareil ne doit pas provoquer d'interférences nuisibles, et (2) cet appareil doit supporter les interférences reçues, y compris celles susceptibles de nuire à son bon fonctionnement.

Canadian DOC statement

DOC Class B Compliance: This Class B digital apparatus complies with Canadian ICES-003.

Observation des normes-Classe B: Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

Mexico-COFETEL Certified

Appendix



Este equipamento opera em caráter secundário, isto é, não tem direito a proteção contra interferência prejudicial, mesmo de estações do mesmo tipo, e não pode causar interferência a sistemas operando em caráter primário.

China CCC



SRRC certification

China RoHS

环保使用期限 (EPUP)

在中国大陆, 该值表示产品中存在的任何危险物质不得释放, 以免危及人身健康、财产或环境的时间期限 (以年计)。该值根据操作说明中所规定的产品正常使用而定。

有毒有害物质或元素名称及含量标识表						
部件名称	有毒有害物质或元素					
	铅	汞	镉	六价铬	多溴联苯	多溴二苯醚
数码相机电路板元件	X	○	○	○	○	○
锂电池	X	○	○	○	○	○
交流变压器	X	○	○	○	○	○
电池充电器	X	○	○	○	○	○

○: 表示该有毒有害物质在该部件所有均质材料中的含量均在SJ/T 11363-2006规定的限量要求以下。
X: 表示该有毒有害物质至少在该部件的某一均质材料中的含量超过SJ/T 11363-2006规定的限量要求。



USB 数据线

Kodak

Eastman Kodak Company | Rochester, New York 14650

© Kodak, 2012

Kodak and EasyShare are trademarks of Eastman Kodak Company.

Eye-Fi is a trademark of Eye-Fi, Inc.

4H8858_en

www.kodak.com/go/M790support

Federal Communication Commission Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

For product available in the USA/Canada market, only channel 1~11 can be operated. Selection of other channels is not possible.

This device and its antenna(s) must not be co-located or operation in conjunction with any other antenna or transmitter.

IMPORTANT NOTE:

Federal Communication Commission (FCC) Radiation Exposure Statement

This EUT is compliance with SAR for general population/uncontrolled exposure limits in ANSI/IEEE C95.1-1999 and had been tested in accordance

with the measurement methods and procedures specified in OET Bulletin 65 Supplement C. This equipment should be installed and operated with minimum distance 1cm between the radiator & your body.

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B conforme à la norme NMB-003 du Canada.

This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

For product available in the USA/Canada market, only channel 1~11 can be operated. Selection of other channels is not possible.

This device and its antenna(s) must not be co-located or operation in conjunction with any other antenna or transmitter.

Under Industry Canada regulations, this radio transmitter may only operate using an antenna of a type and maximum (or lesser) gain approved for the transmitter by Industry Canada. To reduce potential radio interference to other users, the antenna type and its gain should be so chosen that the equivalent isotropically radiated power (e.i.r.p.) is not more than that necessary for successful communication.

IMPORTANT NOTE:

IC Radiation Exposure Statement

This EUT is compliance with SAR for general population/uncontrolled exposure limits in IC RSS-102 and had been tested in accordance with the measurement methods and procedures specified in IEEE 1528. This equipment should be installed and operated with minimum distance 1 cm between the radiator & your body.