 


3-Outlet Outdoor Countdown Power Center with Remote Control

Operating Instructions

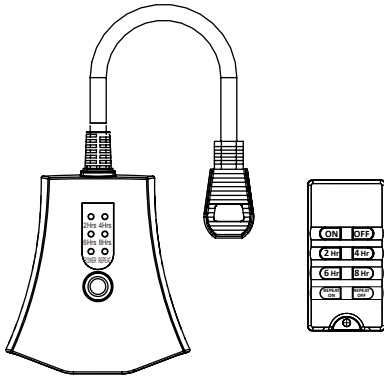

IMPORTANT SAFEGUARDS

Signal Word Definitions

NOTE: These are general definitions only; all may not pertain to the actual product purchased.

DANGER - Indicates an imminently hazardous situation, which, if not avoided, will result in death or serious injury. Usage of this signal word is limited to the most extreme situations.

WARNING - Indicates a potentially hazardous situation, which, if not avoided, could result in death or serious injury.

CAUTION - Indicates a potentially hazardous situation, which, if not avoided, may result in minor/moderate injury or product/property damage. It also alerts against unsafe practices.

When using electrical products, always follow basic safety precautions including the following:

READ ALL INSTRUCTIONS BEFORE USE.

WARNING

Choking Hazard-- Small parts.
Not for children under 3 years.

 
WARNING:

- To reduce the risk of fire, electric shock, or serious personal injury
- Do not immerse the product in liquids
- This product is not intended for use by children and contains small parts that may pose a choking hazard to children under the age of three. Keep the product out of the reach of children and pets.
- Do not use an electrical device or appliance with this product whose electrical specifications exceed those specified in the "Electrical Specifications" section of this manual.

CAUTION:

- To reduce the risk of personal injury or product/ property damage:
- This product is intended for non-commercial, non-industrial use in the remote control of single electrical outlet. Do not use this product for any other purpose.

WARNING: This product is equipped with a three-prong grounding pin plug to reduce the risk of electric shock. This plug will fit into a grounded outlet only one way. This is a safety feature. Never use the plug with an extension cord unless you can fully insert the plug into the extension cord. Do not alter the plug. Do not attempt to defeat the safety purpose of the grounding plug.

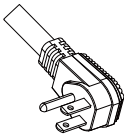


Federal Communication Commission Interference Statement

This equipment has been tested and found to comply with the limits for Class B digital device, harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation of the device.

 FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

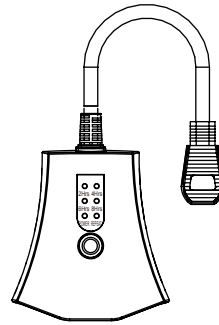

Item: RC-021/TR-024
ELECTRICAL RATINGS
Range Up to 120ft.
125Vac 60Hz 15 A General Purpose
125Vac 60Hz 15 A Resistive
1,000 W Tungsten
500 VA Electronic Ballast
120Vac 60Hz 8.3A Ballast.
1/2 HP

 
Battery Handling and Usage

WARNING: Keep batteries away from children and pets.

- Follow the battery manufacturer's safety and usage instructions.
- Insert the battery observing the proper polarity (+/-) as indicated inside the Battery Compartment.
- Remove a spent or discharged battery from the product. Remove the battery when not using the product for an extended period.
- Never throw batteries into a fire. Do not expose batteries to fire or other heat sources.
- Dispose or recycle spent/discharged batteries in compliance with all applicable laws. For detailed information, contact your local solid waste authority.
- Battery contains mercury. Do not put in trash. Recycle or manage as hazardous waste.

Battery Replacement:

- Remove the Battery Compartment Cover from the back of the Remote Control by sliding the Cover in the direction that its treads curve.
- Remove the spent battery and place a new 3V lithium battery into the Battery Compartment, correctly observing the polarity indications (+/-) inside the Battery Compartment.
- Replace the Battery Compartment Cover.

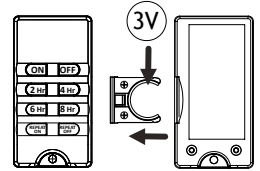

Features

- Control electrical outlet up to a distance of 120 feet.
- Has three grounded receptacles.
- Weather resistant housing protects connected lighting.
- Countdown function automatically turns power off 2,4,6,8 hours later.

Installation

- Mount or hang the RECEIVER on the wall near a wall grounded electrical 125V 60Hz outlet which the power supply cord of the RECEIVER will plug into.
- Plug the cord of the device you wish to control remotely at the bottom of the RECEIVER.
- The device must be mounted in vertical position with the receptacle facing downward and with the receptacle at least 2ft above the ground level.

Operation

Control by transmitter:

- Press the ON button on the transmitter to turn the receiver ON.
- Press OFF button on the transmitter to turn the receiver OFF.
- Press 2 Hr, 4Hr, 6Hr, 8Hr, to turn the receiver on and off after that specific hour.
- Press REPEAT ON button and set the desired hours 2Hr, 4Hr, 6Hr or 8Hr to have the receiver turn off and repeat the same program after 24hrs, daily repeat.
- While the receiver is set to REPEAT ON and at the desired hours 2 Hr, 4Hr, 6Hr or 8 Hr, press the REPEAT OFF button to stop the repeating function. This means that the receiver will finish the set hours and not repeat automatically.

Control by receiver:

- Press the green button. The power indicator will light and the three outlets are "ON".
- Press the green button and select 2 Hr, 4Hr, 6Hr, 8Hr, to turn the receiver on and off after that specific hour.
- Press the green button until the repeat indicator light is on and this will repeat the same program after 24hrs, daily repeat.
- When the repeat light is not on the timer, program will run one 24 hour cycle and turn off.
- Continue pressing the green button until all indicator lights are out. All three outlets are turned off.