IEEE 802.11b/g/n

# 11n Wi-Fi USB Dongle USER'S GUIDE

**VERSION 1.2** 

© All rights reserved.

All trade names are registered trademarks of respective manufacturers listed.

This manual may not be copied in any media or form without the written consent of original maker.

# TABLE OF CONTENTS

1. Introduction1
2. Wireless LAN Basics
3. IP ADDRESS
4. Install Driver/Utility5
5. Wireless Network Configuration7
5.1 Utility Icon7 5.2 Client Mode (Default Setting)7
6. Technical Specifications14
7. Troubleshooting16
8. Glossary



# INTRODUCTION

Thank you for your purchase of the WLAN Adapter. Featuring wireless technology, this wireless networking solution has been designed for both large and small businesses, and it is scalable so that you can easily add more users and new network features depending on your business scale.

#### **FEATURES**

Support Microsoft XP(32bit/64bit) / Vista(32bit/64bit) / Win7(32bit/64bit) / Win8(32bit/64bit).

Operating distance of up to 300 meters in free space.

150/120/90/60/54/48/36/30/24/22/18/12/11/6/5.5/2/1 Mbps selectable Data Rate.

64/128-bit WEP, WPA (Wi-Fi Protected Access), WPA2

2.400GHz ~ 2.4835GHz unlicensed ISM Frequency Band.

Modulation Method :

IEEE 802.11b : DSSS (Direct Sequence Spread Spectrum).

IEEE 802.11g / 802.11n : OFDM (Orthogonal Frequency Division

Multiplexing). Easy operation and setting up.

#### SYSTEM REQUIREMENTS

Windows System : XP(32bit/64bit) / Vista(32bit/64bit) / Win7(32bit/64bit) / Win8(32bit/64bit).

System must have a device driver installed. It allows you to communicate with WLAN 11n USB Client Adapter.

#### **BEFORE YOU START**

- 1. Confirm Box Contents
- ♦WLAN 11n USB Client Adapter
- ♦ Quick Start Guide
- Driver CD

### **CONNECTING YOUR WLAN 11n USB Client Adapter**

**Quick Start Guide** 

Connect your WLAN 11n USB Client Adapter. Install driver.

#### **GETTING TO KNOW WIRELESS LAN ADAPTER**

#### LED

LED turns on when WLAN link to WLAN adaptor or AP. LED is blinking when WLAN Adapter is active.





# WIRELESS LAN BASICS

Wireless LAN network defined by IEEE 802.11b/g standard committee could be configured as :

Ad Hoc wireless LAN. Infrastructure wireless LAN.

Ad Hoc network is a group of wireless LAN cards, this group is called a BSS (Basic Service Set). This group can use their wireless LAN cards to communicate with each other, but can not connect to the **Internet**.

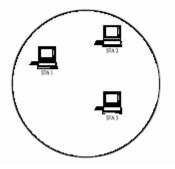

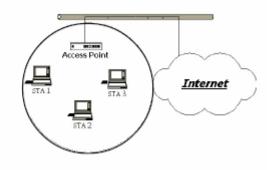

Ad Hoc Wireless Network

Infrastructure Wireless Network

The most obvious difference between **Infrastructure** wireless network and **Ad Hoc** wireless network in **Infrastructure** wireless network can access the resource in the Internet through **Access Point**.

Depending on your requirement, you can easily set up your system network to be a "Ad Hoc" or "Infrastructure" wireless network. Generally speaking, if in your network, there is an Access Point in it, we recommend you to set your network as an "Infrastructure", so it can connect to the Internet.



# **IP ADDRESS**

To use the WLAN 11n USB Client Adapter with a computing device, the WLAN Adapter must be equipped with a proper Interface. All drivers and supporting software for the WLAN Adapter must be installed and configured first.

Ask your system administrator for the following information, which you may need to provide during driver installation :

Your Wireless Client Name. Your Wireless SSID. Your personal computer's unique client name and workgroup name. For your network account, your user name and password. Your IP address, gateway address, and subnet mask if you're not using a DHCP client.

Any personal computer on a network is identified by a unique network address. There are two methods to assign a network address to a personal computer on a TCP/IP network :

Static IP addressing.

Dynamic IP addressing (DHCP Client).

In network with static IP addressing, the network administrator manually assigns an IP address to each personal computer. Once a static IP address is assigned, a personal computer uses the same IP address every time it reboots and logs on to the network. You may manually change the IP address in the

**Network Properties dialog box.** Network using static IP address is easy to set up and do not require additional network management software.

In network with dynamic IP addressing, a DHCP server in the network dynamically assigns IP addresses to all clients every time they log on to the network. Network using dynamic IP address requires setting up and running a DHCP Server.



# **INSTALL DRIVER / UTILITY**


The installation & driver CD will automatically activate the autorun installation program after you insert the disk into your CD drive.

#### Step 1 :


Insert the installation CD into your CD-ROM. Choose the Setup Language and click Next button.

#### Step 2 :


Installation descriptions shown. Click **Next** to continue.

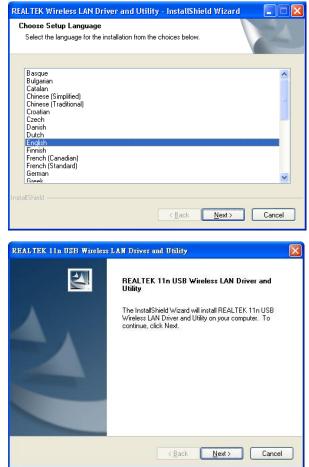

#### Click Install to begin the installation

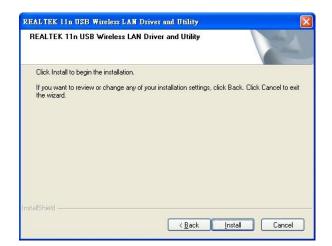

# Installing & configuring WLAN utility

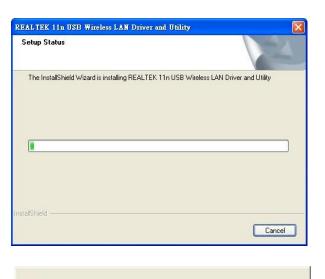

Installing Drivers.

Now installing REALTEK 11n USB Wireless LAN Driver

# Step 3 : Click Finish to complete installation

REALTEK 11n USB Wireless	LAN Driver and Utility
	InstallShield Wizard Complete The InstallShield Wizard has successfully installed REALTEK 11n USB Wireless LAN Driver and Utility. Click Finish to exit the wizard.
	< Back Finish Cancel



WLAN 11n USB Client Adapter uses its own management software. All functions controlled by users are provided by this application. When you insert the WLAN Adapter into your personal computer, a icon should appear in the Windows System Tray automatically.

# 5.1 Utility Icon

Client mode utility running but no WLAN Adapter plugged

🉈 🕅 💑 🧶 😻 - 10:55 PM -

Client mode utility running and WLAN Adapter scan available network.

🔊 🗞 🧌 🕲 🕵 🧶 11:50 PM

Client mode utility running and WLAN Adapter can not scan any AP

式 12:11 AM

AP mode utility running.



5.2 Client Mode (Default Setting)


# Wireless Device Control :



- Show Tray Icon Show icon or not show icon in systray.
- Radio Off Stop wireless signal.
- Disable Adapter Stop wireless device.
- Windows Zero Config Stop Use Utility.

#### **5.2.1 GENERAL SETTING**

Once device is set, double click on that icon and the configuration window will pop up as shown. It shows the current connected network. The signal strength and link quality are displayed also. The bar graph displays the quality and strength of the link

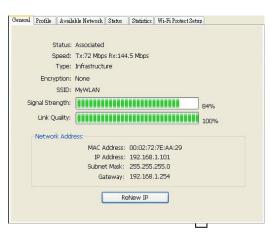

between the node and its Access Point. Link Quality is a measurement of receiving and transmitting performances over the radio.

**Network Address** displays current MAC Address, IP Address, Subnet. and Gateway.

Click **Renew IP** button to refresh IP address leased from wireless AP.

#### **5.2.2 PROFILE SETTING**

In profile tab, you can Add, Remove, Edit, Duplicate and Set Default to manipulate profile content manually. Strongly recommend to use profile after you do Available Network.

Gen	eral	Profile	Available Network	Status	Statistics	Wi-Fi Protect S	etup	
A١	ailable	e Profil	e(s)					
	Prot	file Nar	ne		SSID			Add
								Remove
								Edit
								Duplicate
								Set Default
	<					>		
							J	

#### 5.2.3 AVAILABLE NETWOEK SETTING

#### Click Available Network

tab and it will show all available networks that radio can reaches. Select proper SSID & BSSID you want to connect.

Click **Refresh** button to force and rescan available networks currently.

	Channel	71	Network Authentication	Sigr
I <sup>™</sup> 145test I <sup>™</sup> TekomIPCamera	1	None		88
	1	WEP	Unknown Unknown	70
jerrytest	1	None		60
Atheros Jerry	2	None	Unknown	86
I <sup>0)</sup> Tekom_Office I <sup>0)</sup>		WEP None	Unknown	64
A <sup>**</sup> ATHEROS	6	None	Unknown Unknown	44 50
L <sup>O</sup> DAFONG	-	WEP	Unknown	46
C DAFONG	0	WEP	OFIKTIOWTI	40
Note Double click on item to	ioin (crox	to profile		
	juni/crea	te pronie.		

Select one of SSIDs, and click Add to Profile to create profile that

can be configured more wireless parameters. In this page, you can edit your profile name, configure wireless security like WEP, WPA, WPA2, 802.1x ...etc. After finishing setup, click **OK** button to save configuration

Vireless network pr	operties	
Profile Name:	BlackBox	
Network Name(SSID):	BlackBox	
Channel: Wireless network security This network requires	11 (2462MHz) 👻	B02.1x configure EAP TYPE : GTC Tunnel : Usemane :
ASCII PAS		Identity : Password : Certificate :

#### 5.2.4 Status

Status page tab, shows all wireless, networking and device driver version in details.

eneral	Profile	Available Network	Status	Statistics	Wi-Fi Protect Setup	
		facturer Driver Version		= REALTE	∃K .327.2009	
		: Radio Header		= 5.1000	.327.2009	
	Encryption			= Disabler	4	
		enticate		= Open S		
		nel Set		= ETSI		
	MAC	Address		= 00:02:72:7E:AA:29		
	Data	Rate (AUTO)		= Tx:72 M	Mbps Rx:144.5 Mbps	
	Channel (Frequency)			= 11 (2462 MHz)		
	Statu	IS		= Associa	ted	
	SSID			= MyWLA	N	
		rork Type		= Infrastructure		
		er Save Mode		= None		
		iated AP MAC			72:86:51:01	
	Up Ti	me (hh:mm:ss)		= 0:03:55	5	

#### **5.2.5 Statistics**

Statistics page tab will show real-time TX/RX relative counters to check or evaluate the wireless performance. Click **Reset** button to set counter to zero.

Counter Name	Value
Tx OK	151
Tx Error	0
Rx OK	63
Rx Packet Count	63
Rx Retry Rx ICV Error	0
Reset	

#### 5.2.6 Wi-Fi Protected Setup


An easy and secure setup solution for Wi-Fi network. you can choose PIN Code or Push Button method to connect to an AP.

-Pin Input Con After pushir AP.		n.Please enter	the PIN code int	o your
	PIN C	ode: 100149	81	
	Pin Inp	out Config (PIN	1)	
Push Button				
	ng the PBC butto visual button on s		the physical butt g page.	on on
	Push Bu	tton Config (P	BC)	

#### Pin method:

#### Step 1 :

Push the PIN button.

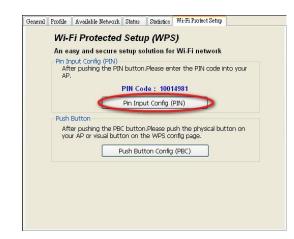

#### Step 2 :

Select a specific AP



# Step 3 :

Enter the PIN code into your AP.


#### Wi-Fi Protected Setup

This page allows you to change the setting for WFS (Wi-Fi Protected Setup). Using this feature could let your wineless client automically synconize its setting and connect to the Access Point in a minute without any hassle.

WPS Status:	) C	onfigured 🕗 UnConfigured
Self-PIN Number:	9566	1469 Regenerate PIN
Push Button Config	uration: Sta	nt PBC
Apply Changes	Reset	
Compart Kow Infor		
	Encryption	Ken
Authentication	Encryption None	<b>Key</b> N/A
Current Key Info: Authentication Open	1/2010-00-0 <del>-0</del> 00500//201	

#### Step 3 :

Select AP that you want to configure.

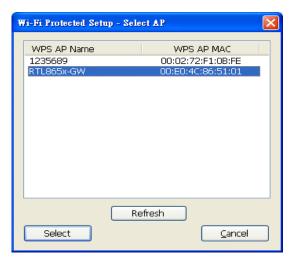

#### Step 4 :

Wait for configuring your wireless AP to be the security setting.

Fi Protected Setup - PIN method	
Wi-Fi Protected Setup - PIN method	
Please enter the following PIN code into your AP .	
PIN Code: 10014981	
Status : Selected AP [AAA]	
	ancel



#### Step 1 :

Push the PBC button.



#### Step 2 :

Push the physical button on your AP or visual button on the WPS config page.

#### Wi-Fi Protected Setup


This page allows you to change the setting for WPS (Wi-Fi Protected Setup). Using this feature could let your wireless client automically syncronize its setting and connect to the Access Point in a minute without any hassle.

- u	onfigured UnConfigured
95661	469 Regenerate PIN
ration: Star Reset	APBC
Encryption	Key
	ration: Star

#### Soft AP:

#### Step 1 :

Click **Access Point** to change AP mode

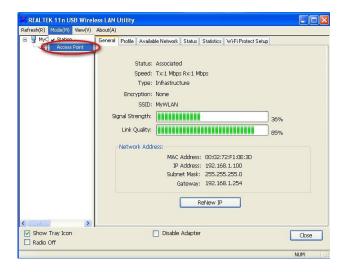

# Step 2 :

Click **Config** to set AP.

General Advanc	ced Statistics ICS		
	SSID: acer_AP		
	BSSID: 00:02:72:F1:0	)E:3D	
Asso	ciation Table		
AID	D MAC Address	Life Time	
		Config	

# Step 3 :

Setting SSID and Securtiy

Profile Name:	Access Point Mode				
Network Name(SSID):	acer_AP				
This is a computer-to	n-computer(ad hoc) network; wireless				
access points are not	t used.				
Channel:	1 (2412MHz) 🖌				
Wireless network secu	arity				
This network requires	a key for the following:				
Netw	vork Authentication: Open System 🛛 👻				
	Data encryption: Disabled				
	SPHRASE				
Key index (advanced)	l 1 💌				
Network key:					
Confirm network key:					

#### Step 4 :

Choosing the Ethernet controller and click Apply to bridge your Soft AP.

ConnName	me Device Name							
	SIS191 Ethernet Controller Bluetooth PAN Network Adapter							
<								
< Public Network	/##							



# TECHNICAL SPECIFICATIONS

Product Name	11n Wi-Fi USB Dongle(2T2R)					
Standard	802.11b/g/n, 802.3, 802.3u					
Data Transfer Rate	1,2,5.5,6,11,12,18,22,24,30,36,48,54,60,90,120 and maximum of 150Mbps					
Modulation Method	BPSK/ QPSK/ 16-QAM/ 64-QAM					
Frequency Band	2.4GHz ISM Band					
Spread Spectrum	IEEE 802.11b: DSSS (Direct Sequence Spread Spectrum)					
	IEEE 802.11g/n:OFDM (Orthogonal Frequency Division					
	Multiplexing)					
RF Output Power	802.11b : 22.34 dBm ,					
-	802.11g: 25.19 dBm <sup>,</sup>					
	802.11n(20M): 22.24 dBm •					
	802.11n(40M): 21.28 dBm					
Operation Mode	Ad hoc, Infrastructure					
Receiver Sensitivity	ty 11Mbps -80dBm@8%, 54Mbps -70dBm@10%, 130Mbps -					
	64dBm@10%					
Operation Range	Up to 180m in open space					
LED	Power					
OS Support	Windows XP /Vista /7/8, Mac, Linux					
Security	WEP, TKIP, AES, WPA and WPA2					
Interface	USB 2.0					
Power Consumption	Transmit: average 305 mA					
	Receive: average 190 mA					
Operating Temperature	0 - 50° C ambient temperature					
Storage Temperature	-10 ~ 70°C ambient temperature					
Humidity	5 to 90 % maximum (non-condensing)					
Dimension	28.5 x 156 x 8mm (LxWxH)					

The channel identifiers, channel center frequencies, and regulatory domains of each 22-MHz-wide channel are shown in following Table.

Channel Identifier	Frequency (MHZ)	Regulatory Domains					
		Japan	ETSI	North America	Israel	Mexico	
1	2412						
2	2417	•					
3	2422	•					
4	2427	•					
5	2432	•					
6	2437	•					
7	2442	•					
8	2447	•		•			
9	2452	•					
10	2457	•		•		•	
11	2462	•		•		•	
12	2467	•					
13	2472						
14	2484	•					



# TROUBLESHOOTING

#### Symptom :

The LED is off.

#### Remedy :

Make sure the dongle is inserted properly. Otherwise contact your vendor.

# Symptom :

The LED is always on not blinking.

# Remedy :

Make sure that you have installed the driver from attached CD. Otherwise contact your vendor.

# Symptom :

The LED is blinking but the icon does not appear in your icon tray.

#### Remedy :

Make sure that you have installed the Utility from the attached CD.

# Symptom :

The dongle is linking, but can't share files with others.

# Remedy :

Make sure the **file and printer sharing** function is enabled. You can enable the function by checking the icon of **My Computer** -> **Control Panel** -> **Network** -> **file and printer sharing** -> **I want to be able to give others to access to my files**.

# Symptom :

Slow or poor performance under AP mode

# Remedy :

Try to select another channel for the communicating group or move your device closer to the Access Point.



# GLOSSARY

# IEEE 802.11 Standard

The IEEE 802.11 Wireless LAN standards subcommittee, which is formulating a standard for the industry.

#### **Access Point**

An internetworking device that seamlessly connects wired and wireless networks together.

#### Ad Hoc

An Ad Hoc wireless LAN is a group of personal computers, each with a WLAN adapter, connected as an independent wireless LAN. Ad Hoc wireless LAN is applicable at a departmental scale for a branch or SOHO operation.

#### BSSID

A specific Ad Hoc LAN is called a Basic Service Set (BSS). Personal computers in a

BSS must be configured with the same BSSID.

#### DHCP

Dynamic Host Configuration Protocol - a method in which IP addresses are assigned by server dynamically to clients on the network. DHCP is used for Dynamic IP Addressing and requires a dedicated DHCP server on the network.

# **Direct Sequence Spread Spectrum**

This is the method the wireless cards use to transmit data over the frequency spectrum. The other method is frequency hopping. Direct sequence spreads the data over one frequency range (channel) while frequency hopping jumps from one narrow frequency band to another many times per second.

# ESSID

An Infrastructure configuration could also support roaming capability for mobile workers. More than one BSS can be configured as an Extended Service Set (ESS). Users within an ESS could roam freely between BSSs while served as a continuous connection to the network wireless stations and Access Points within an ESS must be configured with the same ESSID and the same radio channel.

#### Ethernet

Ethernet is a 10/100Mbps network that runs over dedicated home/office wiring. Users must be wired to the network at all times to gain access.

#### Gateway

A gateway is a hardware and software device that connects two dissimilar

systems, such as a LAN and a mainframe. In Internet terminology, a gateway is another name for a router. Generally a gateway is used as a funnel for all traffic to the Internet.

#### IEEE

Institute of Electrical and Electronics Engineers Infrastructure

An integrated wireless and wired LAN is called an Infrastructure configuration. Infrastructure is applicable to enterprise scale for wireless access to central database, or wireless application for mobile workers.

#### ISM Band

The FCC and their counterparts outside of the U.S. have set aside bandwidth for unlicensed use in the so-called ISM (Industrial, Scientific and Medical) band. Spectrum in the vicinity of 2.4 GHz, in particular, is being made available worldwide. This presents a truly revolutionary opportunity to place convenient high-speed wireless capabilities in the hands of users around the globe.

#### Local Area Network (LAN)

A LAN is a group of personal computers, each equipped with the appropriate network adapter card connected by cable/air, that share applications, data, and peripherals. All connections are made via cable or wireless media, but a LAN does not use telephone services. It typically spans a single building or campus.

#### Network

A network is a system of personal computers that is connected. Data, files, and messages can be transmitted over this network. Networks may be local or wide area networks.

#### Protocol

A protocol is a standardized set of rules that specify how a conversation is to take place, including the format, timing, sequencing and/ or error checking.

#### SSID

A Network ID unique to a network. Only clients and Access Points that share the same SSID are able to communicate with each other. This string is case-sensitive.

#### Static IP Addressing

A method of assigning IP addresses to clients on the network. In networks with Static IP address, the network administrator manually assigns an IP address to each personal computer. Once a Static IP address is assigned, a personal computer

uses the same IP address every time it reboots and logs on to the network, unless it is manually changed.

# Temporal Key Integrity Protocol (TKIP)

The Temporal Key Integrity Protocol, pronounced tee-kip, is part of the IEEE 802.11i encryption standard for wireless LANs. TKIP is the next generation of WEP, the Wired Equivalency Protocol, which is used to secure 802.11 wireless LANs. TKIP provides per-packet key mixing, a message integrity check and a re-keying mechanism, thus fixing the flaws of WEP.

# Transmission Control Protocol / Internet Protocol (TCP/IP)

TCP/IP is the protocol suite developed by the Advanced Research Projects Agency (ARPA). It is widely used in corporate Internet works, because of its superior design for WANs. TCP governs how packet is sequenced for transmission the network. The term "TCP/IP" is often used generically to refer to the entire suite of related protocols.

#### Transmit / Receive

The wireless throughput in Bytes per second averaged over two seconds.

#### Wi-Fi Alliance

The Wi-Fi Alliance is a nonprofit international association formed in 1999 to certify interoperability of wireless Local Area Network products based on IEEE 802.11 specification. The goal of the Wi-Fi Alliance's members is to enhance the user experience through product interoperability. The organization is formerly known as WECA.

# Wi-Fi Protected Access (WPA)

The Wi-Fi Alliance put together WPA as a data encryption method for 802.11 wireless LANs. WPA is an industry-supported, pre-standard version of 802.11i utilizing the Temporal Key Integrity Protocol (TKIP), which fixes the problems of WEP, including using dynamic keys.

#### Wide Area Network (WAN)

A WAN consists of multiple LANs that are tied together via telephone services and / or fiber optic cabling. WANs may span a city, a state, a country, or even the world.

# Wired Equivalent Privacy (WEP)

Now widely recognized as flawed, WEP was a data encryption method used to protect the transmission between 802.11 wireless clients and APs. However, it used the same key among all communicating devices. WEP's problems are well-known, including an insufficient key length and no automated method for distributing the keys. WEP can be easily cracked in a couple of hours with off-the-shelf tools.

### Wireless LAN (WLAN)

A wireless LAN does not use cable to transmit signals, but rather uses radio or infrared to transmit packets through the air. Radio Frequency (RF) and infrared are the commonly used types of wireless transmission. Most wireless LANs use spread spectrum technology. It offers limited bandwidth, usually under 11Mbps, and users share the bandwidth with other devices in the spectrum; however, users can operate a spread spectrum device without licensing from the Federal Communications Commission (FCC).

#### **Fragment Threshold**

The proposed protocol uses the frame fragmentation mechanism defined in IEEE 802.11 to achieve parallel transmissions. A large data frame is fragmented into several fragments each of size equal to fragment threshold. By tuning the fragment threshold value, we can get varying fragment sizes. The determination of an efficient fragment threshold is an important issue in this scheme. If the fragment threshold is small, the overlap part of the master and parallel transmissions is large. This means the spatial reuse ratio of parallel transmissions is high. In contrast, with a large fragment threshold, the overlap is small and the spatial reuse ratio is low. However high fragment threshold leads to low fragment overhead. Hence there is a trade-off between spatial re-use and fragment overhead.

Fragment threshold is the maximum packet size used for fragmentation. Packets larger than the size programmed in this field will be fragmented If you find that your corrupted packets or asymmetric packet reception (all send packets, for example). You may want to try lowering your fragmentation threshold. This will cause packets to be broken into smaller fragments. These small fragments, if corrupted, can be resent faster than a larger fragment. Fragmentation increases overhead, so you'll want to keep this value as close to the maximum value as possible.

# **RTS (Request To Send) Threshold**

The RTS threshold is the packet size at which packet transmission is governed by the RTS/CTS transaction. The IEEE 802.11-1997 standard allows for short packets to be transmitted without RTS/CTS transactions. Each station can have a different RTS threshold. RTS/CTS is used when the data packet size exceeds the defined RTS threshold. With the CSMA/CA transmission mechanism, the transmitting station sends out an RTS packet to the receiving station, and waits for the receiving station to send back a CTS (Clear to Send) packet before sending the actual packet data. This setting is useful for networks with many clients. With many clients, and a high network load, there will be many more collisions. By lowering the RTS threshold, there may be fewer collisions, and performance should improve. Basically, with a faster RTS threshold, the system can recover from problems faster. RTS packets consume valuable bandwidth, however, so setting this value too low will limit performance.

#### **Beacon Interval**

In addition to data frames that carry information from higher layers, 802.11 includes management and control frames that support data transfer. The beacon frame, which is a type of management frame, provides the "heartbeat" of a wireless LAN, enabling stations to establish and maintain communications in an orderly fashion. Beacon Interval represents the amount of time between beacon transmissions. Before a station enters power save mode, the station needs the beacon interval to know when to wake up to receive the beacon (and learn whether there are buffered frames at the access point).

#### **Preamble Type**

There are two preamble types defined in IEEE 802.11 specification. A long preamble basically gives the decoder more time to process the preamble. All 802.11 devices support a long preamble. The short preamble is designed to improve efficiency (for example, for VoIP systems). The difference between the two is in the Synchronization field. The long preamble is 128 bits, and the short is 56 bits.

#### WPA2

It is the second generation of WPA. WPA2 is based on the final IEEE 802.11i amendment to the 802.11 standard.

# Temporal Key Integrity Protocol (TKIP)

The Temporal Key Integrity Protocol, pronounced tee-kip, is part of the IEEE 802.11i encryption standard for wireless LANs. TKIP is the next generation of WEP, the Wired Equivalency Protocol, which is used to secure 802.11 wireless LANs. TKIP provides per-packet key mixing, a message integrity check and a re-keying mechanism, thus fixing the flaws of WEP.

#### 802.1x Authentication

802.1x is a framework for authenticated MAC-level access control, defines Extensible Authentication Protocol (EAP) over LANs (WAPOL). The standard encapsulates and leverages much of EAP, which was defined for dial-up authentication with Point-to-Point Protocol in RFC 2284.

Beyond encapsulating EAP packets, the 802.1x standard also defines EAPOL messages that convey the shared key information critical for wireless security.

#### **Advanced Encryption Standard (AES)**

Security issues are a major concern for wireless LANs, AES is the U.S. government's next-generation cryptography algorithm, which will replace DES and 3DES.

#### **Federal Communication Commission Interference Statement**



This equipment has been tested and found to comply with the limit s for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment of f and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- -- Reorient or relocate the receiving antenna.
- -- Increase the separation between the equipment and receiver.
- -- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- -- Consult the dealer or an experienced radio/TV technician for help.

#### Caution

Any changes or modifications not expressly approved by the p arty responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference.

(2) This device must accept any interference received, including interference that may cause undesired operation.

#### FCC RF Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. End users must follow the specific operating instructions for satisfying RF exposure compliance. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter. This equipment has been SAR-evaluated for use in hand. SAR measurements are based on a 5mm spacing from the body and that compliance is achieved at that distance.

Hereby, CC&C Technologies, Inc. declares that this WLAN 11n adapter, 2T2R is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. The declaration of conformity may be consulted at <u>market@ccandc.com.tw</u>

# CE Mark Warning (+0700)

This is a class B product. In a domestic environment, this product may cause radio interference, in which case the user may be required to take adequate measures.