

FCC ID: PAOCB123**BATTERY INSTALLATION / REPLACEMENT****This unit is powered by a 9V battery (not included).**

Please follow the steps below to install / replace the battery :

1. Make sure the volume knob is at power-off position.
2. Press down on the battery door and slide it off in the direction of the arrow.
3. Install a fresh battery by connecting the battery compartment. The battery fits only one way.
4. Place the battery in the battery compartment and replace the battery door.

OPERATION

- In any case, fully extend the telescoping antenna can give you the best performance.
- Switch on the unit by turning the volume knob downward until you hear a click sound.
- Adjust the volume knob to a comfortable listening level.
- For best transmission, hold the unit about 30mm from your mouth, then press and hold down Push To Talk Button and speak into the speaker / microphone in a normal voice.
- Release the Push To Talk Button and wait for feedback after finishing transmission.
- To turn off the unit by turning the volume knob upward until you hear it click.

TROUBLESHOOTING

SYMPTOM	CHECK LIST
Trouble with reception	<ul style="list-style-type: none">● The walkie-talkie is turned on.● Volume is turned up.● Push to talk button is not pressed.● The antenna is extended fully.● The battery is not weak.
Trouble with transmission	<ul style="list-style-type: none">● The push to talk button is fully pressed.● The antenna is extended fully.● The battery is not weak.

Congratulation on your purchase of CB-123 Walkie-Talkie. It is convenient to use for any outdoor activities with transmission range up to 800 meter.

FCC INFORMATION

This device complies with Part 15 of FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference that may cause undesired operation.

WARNING Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device may cause TV or radio interference even when it is operating properly. To determine whether it is causing the interference, simply turn it off. If the interference disappears, it is the source of interference.

Try to eliminate the interference by :

1. Moving your walkie-talkie away from the receiver.
2. Consult dealer for help.

If you cannot eliminate the interference, the FCC requires that you stop using your walkie-talkie.

SPECIFICATIONS

Frequency Coverage	27.125 MHz
Sensitivity (Max)	6 μ V
Audio Output	200mW
Input Power (at 9V DC)	100mW
Output Power	50mW
Power requirement	One 9 Volt Battery
Speaker / Microphone Diameter	57 mm
Antenna Impedance	50 Ohms
Antenna Length	710 mm
Dimensions	151 x 75 x 38 mm
Weight	230g