


# B2K MANUAL

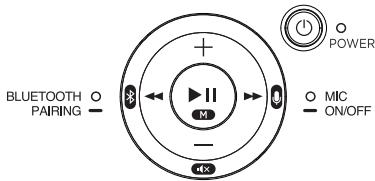

LED Color : Power LED : 3 colors RED / BLUE / YELLOW / BT LED : BLUE / MIC LED : BLUE

## 1. Turn On/Off

- ① Turn On: When the speaker is off, press the power button (  , 2 seconds) When the power is turned on, the power LED light turns blue. When the power is turned on, the speaker will play the notification sound (POWER ON) When charging, press the power button shortly, then the speaker will turn on.
- ② Turn Off: When the speaker is on, Press the power button (  , 2 seconds). When the power is turn off, the power LED will flash on red light twice, then it will be turned off. When the power is turned off, the speaker will play the notification sound (POWER OFF) When charging, press the power button shortly, then the speaker will turn off.
- ③ When it is in Bluetooth mode and the speaker doesn't pair anything within 10minutes, the speaker turns off automatically. \*If the speaker is plugged thru USB memory or AUX, it doesn't turn off automatically.
- ④ When Bluetooth or MIC LED is working on, the LED light is flashing.

## 2. Speaker volume control (Music volume)

- ① The volume controller can control music volume only not microphone volume.
- ② There are ten music volume levels, Vol. 0 means no sound, Sound level starts from Vol. 1.

	MUTE	MIN			NORMAL				MAX	
VOL	0	1	2	3	4	5	6	7	8	9

- ③ If you press the Vol UP button (+) shortly, the volume level goes up to just 1 level. If you press the Vol UP button (+) for about 2 seconds, the volume level can go to the max volume level Vol 9. If the volume level is Vol 5 and it changed, the changed volume level will be retained, which will be the initial volume level next time.
- ④ If you press the Vol DOWN button (-) shortly, the volume level goes down to just 1 level.
- ⑤ If you long press the Vol DOWN button (-) for about 2 seconds, the volume level will be muted. In mute mode, press the Vol UP button (+) or Vol DOWN (-), the music volume will be back to the previous level.
- ⑥ There is notification sounds for each volume level. .

## 3. Play (USB or Bluetooth)

- ① Play : When the speaker is paused or stopped, Press the play/pause button (  ) shortly.
- ② Pause : When the speaker is playing, Press the play/pause button (  ) shortly.
- ③ Previous : Press the left button (  ) shortly on the navigator.
- ④ Next : Press the right button (  ) shortly on the navigator.

## 4. Input mode

- ① If you long press play/pause button (  ) for about 2 seconds, you can set the input mode.
- ② The input order is following like this: Bluetooth → USB → AUX → Bluetooth Each input mode has its own notification sound. ("Bluetooth MODE", "USB MODE", "AUX MODE") USB, AUX mode can only be changed when USB, AUX is plugged into the speaker. If a USB memory isn't plugged into the USB port, the input order is following like this : Bluetooth → AUX → Bluetooth
- ③ The default input is Bluetooth
- ④ If a USB memory is plugged into the USB port, USB is the default input mode.
- ⑤ When the speaker is set on other mode, like a USB memory is being plugged into the speaker, the speaker will turn into USB mode and play the file by itself, which is in the USB memory.

## 5. Connect a Bluetooth device

- ① Bluetooth ID : "B2K - MAGICSING"
- ② If you turn on the speaker, the speaker will be trying to connect a Bluetooth device. When the speaker is trying to connect a Bluetooth device, Bluetooth LED will flash.
- ③ If the pairing doesn't succeed within 30 seconds, the speaker will stop connecting by itself. In this case, Bluetooth LED will be turned off.
- ④ If you want to connect a Bluetooth device, long press the left button (  ) on the navigator.
- ⑤ If the speaker connects to a Bluetooth device, the speaker will play the notification sound (Bluetooth connected) In this case, Bluetooth LED will flash.
- ⑥ If you want to disconnect a Bluetooth device, long press the left button (  ) on the navigator. In this case, the speaker disconnects to the Bluetooth device and then search another Bluetooth device to pair with it. While doing this, Bluetooth LED is flashing.

## 6. Microphone

- ① Turn on: When the microphone is turned off, long press the right button (  ) for about 2 seconds on the navigator. When the microphone is turned on, Mic LED will flash. If the microphone is connected to the speaker, Mic LED light will remain turned on. When the microphone is turned on, the speaker will play the notification sound.
- ② Turn off: When the microphone is turned on, long press the right button (  ) for about 2 seconds on the navigator.
- ③ When the microphone is turned off or disconnected, Mic LED will flash.
- ④ If the microphone can't be succeeded to connect within 5 minutes, the microphone will be turned off automatically.

## 7. EQ mode

- Select the 4 types EQ mode by the remote control.
- [DEFAULT] : Default mode
- [MEGA BASE] : Bass boost mode
- [POP] : Optimizing for pop
- [MAGICSING] : Optimizing for MAGICSING karaoke app

## 8. Notification sound

- If the notification sound key is turned on, the speaker plays the notification sound. These buttons contain notification sounds: Power, Input, Volume, EQ mode If the notification sound key is turned off, all notification sounds won't be played through the speaker.

## 9. Low Battery indication

- ① When the battery is going down below 20%, Power LED will flash on orange light every 1 second.
- ② When the battery is going down below 5%, Power LED will flash on orange light every 1/2 second. The speaker will play the notification sound ("Low Battery") every 1 minute.

## 10. Charging

- ① If USB cable (Micro5pin) is plugged into the port at the back of the speaker, the battery starts to charge and Power LED will flash on red light.
- ② When fully charged, Power LED will turn red light and then it will stop charging.

## 11. Remote Control

- ① Power : If you press the power button on the remote control, the speaker will finish the power saving mode or it will be the power saving mode. When finishing the power saving mode, the speaker will play the notification sound ("POWER ON + MODE") When it's going to the power saving mode, red LED light will flash twice and the speaker will play the notification sound (OFF)
- ② Bluetooth : The speaker starts the pairing process again.
- ③ Mute : Turn on/mute, If mute is turned on, the speaker will play the notification sound ("MUTE")
- ④ +, - : Volume UP/DOWN
- ⑤  : Play or pause the music.
- ⑥   : Previous or next song
- ⑦ Bluetooth, USB, AUX : Select the input mode among Bluetooth, USB memory, AUX mode
- ⑧ EQ : Select the 4 types EQ mode. When it changes the mode, the speaker will play each of the notification sound.
- ⑨ Voice ON/OFF : Turn on/off the notification sound.
- ⑩ Mic : Turn on/off the microphone.

## 12. Pairing the microphone

- ① Standby mode : If there isn't any button input within 10 seconds, the speaker will be on standby mode.
- ② Change mode : Press MODE button to change the mode. The changing order is following like this: Mic Vol → Speaker Vol → Echo → Channel → Notification sound.
- ③ Microphone volume : Press "▲" "▼" button to adjust the microphone volume (0-9).
- ④ Speaker volume : Press "▲" "▼" button to adjust the speaker volume.
- ⑤ Echo volume : Press "▲" "▼" button to adjust the echo volume.
- ⑥ Channel : Press "▲" "▼" button to adjust the channel from A1 to B8. (1-8) Initial LCD indicates the present channel When the channel is adjusted, only the frequency will be changed. It won't pair. Long Press MODE button for about 3 seconds, the speaker will pair with a Bluetooth device as the current channel. During the pairing process, LED will flash about 3 seconds, (0.7 sec ON, 0.3 sec OFF)

## WARRANTY CARD

PRODUCT	TELEPHONE
MODEL NUMBER	PURCHASED DATE DAY / MONTH / YEAR
CUSTOMER'S NAME	PURCHASED FROM
ADDRESS	
CITY/STATE/ZIP	REASON FOR SERVICE

## FCC Part 15.19

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

## FCC Part 15.21

Any changes or modifications (including the antennas) to this device that are not expressly approved by the manufacturer may void the user's authority to operate the equipment.

## FCC RF Radiation Exposure Statement

This equipment complies with FCC RF Radiation exposure limits set forth for an uncontrolled environment. This device and its antenna must not be co-located or operating in conjunction with any other antenna or transmitter. This equipment should be installed and operated with a minimum distance of 20 cm between the radiator and your body.