

EK5 Manual

Product Overview

1. Overview

- Wireless Microphone with KT0646M

2. Specifications

- Transmission

NO	Certification	Frequency band(MHz)	A GROUP				B GROUP			
			1	2	3	4	5	6	7	8
USA	FCC	904~924	905	906	908	910	918	920	922	924

- RF Power: 0.01W/MHz
- Power: AA Battery 2EA (Alkaline Battery recommended)

3. Operating temperature conditions

- 0 ~60°C

3. Microphone controller buttons guide



	NUMBER / LETTER INPUT Press these buttons to input characters for search.
	EXIT / DELETE Press this button to erase your input or to cancel function you chose.
	RESERVATION Press this button to reserve a song or to cancel reserved songs.
	NAVIGATION AND PLAY Press [▲][▼][◀][▶] to navigate through functions. Press [▶/■] button to play and stop songs.
	SEARCH Press this button to display search panel.
	MENU See the function menu bar on the right side screen by pressing this button.
	KEY Press this button to adjust key.
	 JUMP Press this button to skip prelude or interlude.
	 TEMPO Press this button to adjust tempo.
	VOICE SEARCH Search a song by speaking out the name of a song or singer.
	FAVORITE SONG Add the current song to the favorite song list.
	MICROPHONE VOLUME Adjust volume of the single Microphone.
	LIST Press this button to display reserved, favorite and performed song list.
	RECORDING Press this button to record selected song.
	POWER Press this button to Turn on / off Wireless Microphone.

Group and Frequency channel Selection

1. Connecting a wireless microphone (pairing)
 - If the wireless microphone can not be connected, connect the wireless microphone to the unit via group and channel settings. When connected, the microphone volume icon is displayed in the upper right corner of the screen.
2. Group & channel setting
 - 1) How to set group and channel Turn on the wireless microphone power and press the corresponding number button while holding down the power button, Change the channel.
※ When using one wireless microphone, it can be used regardless of group A or group B. However, When two units are used, one unit must be set to A group and the other one to B group.
 - 2) Group and channel setting button
 - i. A group (LED: blue) Button 1: 1 channel Button 2: 2 channels Button 3: 3 channels Button 4: 4 channels
 - ii. B group (LED: green) Button 5: 5 channels Button 6: 6 channels Button 7: 7 channels Button 8: 8 channels

FCC Warning Statement

FCC Part 15.19

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Part 15.21

Any changes or modifications (including the antennas) to this device that are not expressly approved by the manufacturer may void the user's authority to operate the equipment.

FCC RF Radiation Exposure Statement:

This equipment complies with FCC RF Radiation exposure limits set forth for an uncontrolled environment.

This device and its antenna must not be co-located or operating in conjunction with any other antenna or transmitter.