

MAGICSING

EB2 Manual

WIRELESS MICROPHONE

Product Overview

1. Overview


- Wireless Microphone with









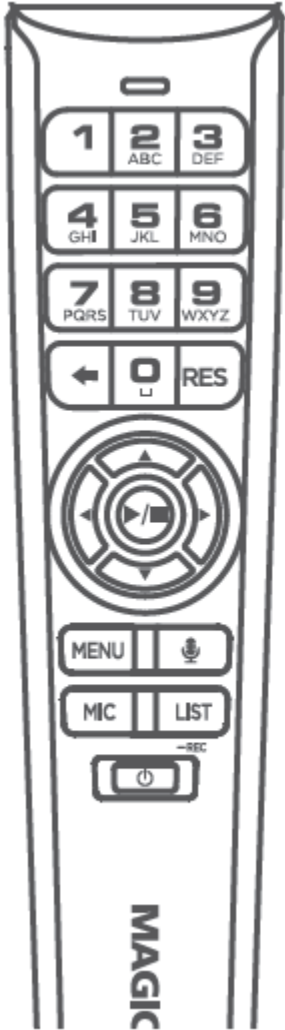


2. Specifications

- Transmission
 - 1) Group 1: 904, 906, 908, 910 MHz
 - 2) Group 2: 918, 920, 922, 924 MHz
- RF Power: 0.003W/MHz
- Power: AA Battery 2EA (Alkaline Battery recommended)



3. Microphone controller buttons guide



  	NUMBER AND TEXT Press these buttons to input character for search.
	BACKSPACE Press this buttons to erase your input or to cancel function you chose.
	RESERVATION Press this buttons to reserve a song or to cancel reserved songs.
	NAVIGATION AND PLAY Press up, down, left and right buttons to navigate through funtions. Press ► / ■ button to play and stop songs.
	MENU See the function menu bar of the right side screen by pressing this button.
	VOICE SEARCH Search a song with speaking out a name of song or singer.
	MICROPHONE Adjust Microphone volume.
	LIST / RECORDING Short press display reserved, favorite and play history song list. Long press starts recording.
	POWER Turn on / off the MAGICSING by pressing this button.

Group and Frequency channel Selection

1. Connecting a wireless microphone (pairing)

- If the wireless microphone can not be connected, connect the wireless microphone to the unit via group and channel settings. When connected, the microphone volume icon is displayed in the upper right corner of the screen.

2. Group & channel setting

1) How to set group and channel Turn on the wireless microphone power and press the corresponding number button while holding down the power button, Change the channel.

※ When using one wireless microphone, it can be used regardless of group A or group B. However, When two units are used, one unit must be set to A group and the other one to B group.

2) Group and channel setting button

i. A group (LED: blue) Button 1: 1 channel Button 2: 2 channels Button 3: 3 channels Button 4: 4 channels

ii. B group (LED: green) Button 5: 5 channels Button 6: 6 channels Button 7: 7 channels Button 8: 8 channels

FCC Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the

instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.