

*How to operate FM channel.

Turn microphone power ON

There are 4 channels in the microphone.

1)106.3MHz 2)106.7MHz 3)107.1MHz 4)107.5MHz

1)Press the FM key once, the LCD will show FM 106.3 and the TV monitor will show 106.3.

2)Press the FM key twice, the LCD will show FM 106.7 and TV monitor will show 106.7.

3)Press the FM key three times, the LCD will show FM 107.1 and TV monitor will show 107.1.

4)Press the FM key four times, the LCD will show FM 107.5 and TV monitor will show 107.5.

5)Press the FM key five times, this will remove the LCD FM icon and will show OFF on the TV monitor

Set your FM Radio channel according to the LCD and the TV monitor.