

## WARRANTY CARD (제품 보증서)

PRODUCT 모델명	
MODEL NUMBER 일련번호	
PURCHASER'S NAME 구매자 성함	
ADDRESS 구매자 주소	
CITY / STATE / ZIP 우편 번호	
TELEPHONE 연락처	
PURCHASE DATE DAY / MONTH / YEAR 구입일	
PURCHASED FROM 구입처	
REASON FOR SERVICE 서비스 요청 이유	



**MAGICSING**  
BLUETOOTH MICROPHONE



Model. MP30

접이선

### ○ MAGICSING User Manual ○ (English)

#### 1. INSTRUCTIONS

##### How to use

- ① Switch on/off: press the power button, the blue light will on/off.
- ② **Bluetooth connection:** turn on the Bluetooth on your mobile phone, and search the Bluetooth name "MAGICSING", click and paired the device will tick sound.
- ③ Playing music: turn on the mobile phone music application such as "MAGICSING", download your favorite songs or accompaniment songs. Volume could be adjusted by mobile phone.
- ④ Adjusting sound: adjust MIC volume or ECHO in suitable place.

##### Cable connection

Connect the audio cable, plug the micro USB jack into this device and 3.5mm audio jack into mobile phone.  
※ Bluetooth will automatically disconnect when audio cable plug in.

#### 2. HOW TO RECHARGE

- ① When the battery voltage is too low, the product will automatically shutdown.
- ② Using USB cable to connect with mobile phone standard jack the red light will light.
- ③ about 2 hours to fully charged, when the charging is completed, the red light is automatically extinguished.
- ④ In normal conditions works 6-8 hours.

#### 3. SPECIFICATIONS

- ① Output power: 3Wx2 (speaker output)
- ② Frequency range: 100Hz-10KHz
- ③ Maximum sound pressure level: >115dB 1kHz THD<1%
- ④ Reverb mode: echo sound reverberation
- ⑤ Power supply: build-in Li-ion battery
- ⑥ Battery capacity: 2000mAh
- ⑦ Charging voltage: DC 5V

### ○ MAGICSING User Manual ○

#### 4. SERVICE DESCRIPTION

Thank you for using MAGICSING,

in order to effectively protect your interests, sales agents and company should clear commitment to product repair, replacement, and return of responsibilities and obligations, please read the following items:

- ① "warranty card" is our company to provide free service warranty on its products necessary credentials.
- ② In accordance with the principle of who is responsible for selling. Regarding the quality assurance the company is the dealer service support and dealer will provide service to customer commitment of warranty, customer may claim replacement or repair within 7days of purchased date. After 7 days, will be charged for repair include cost of delivery. When purchased, customer should fill in "warranty card".
- ③ The warranty does not cover as below
  - 1) Defects, damage and breakage resulting from accidents, misuse, (breakage, spillage of food/liquid substances that defect the product and parts such as PCB, battery leakage and etc.) wrong usage of electrical supply and voltage, abuse, alteration, and modification.
  - 2) in case of non-authorized third party commitment.
  - 3) No "warranty card".
  - 4) Damage caused by force majeure.
- ④ The final interpretation of the above matters belongs to the company.

Designed & Supplied by ENTERMEDIA. CO.LTD  
Address: Enter Bldg. 157-1, Seongo-ro, Bucheon-si, Gyeonggi-do, Korea 14429  
Website: [www.entermedia.xyz](http://www.entermedia.xyz)

## ○ MAGICSING User Manual ○

### FCC STATEMENT

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

## ○ MAGICSING User Manual ○

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.