


Using the battery

Your CC-Phone comes packaged with a partially charged, rechargeable Lithium battery so that you can use your CC-Phone immediately after it is activated.


Installing the battery

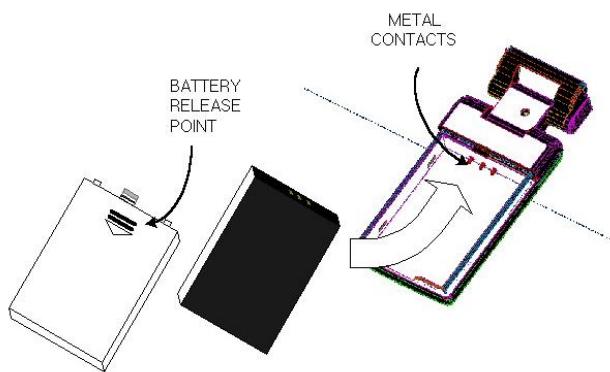

To attach the battery to your CC-Phone:

1. Hold the battery so that the metal contacts on the base of the battery line up with the metal contacts on the base of the battery pack
2. Place the battery on the back of the battery pack with the top of the battery
3. 뒷데리 덮개를 뒷데리 Pack에 씌운다.

Removing the battery

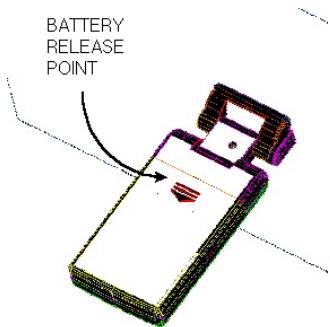


To remove the battery from your CC-Phone:

1. Turn the phone off.
2. Remove battery pack from CC-Phone.
3. Pull the battery release point(see illustration).

Charging the battery

You can tell whether or not your battery needs to be recharged by checking the  indicator in the upper-right corner of your CC-Wiz.

Charging with the Adapter

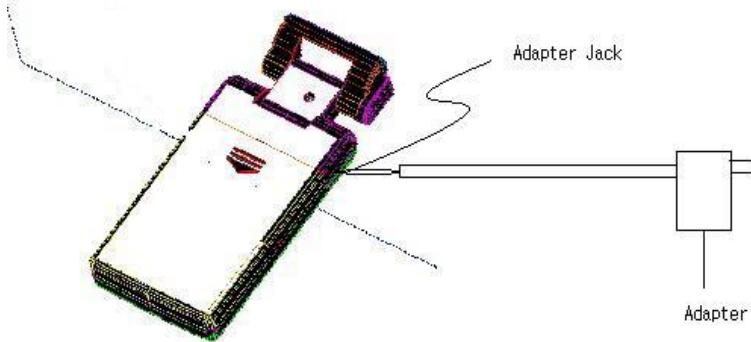

As adapter jack is connected into battery pack, it is charged. (See picture above)

The LED on the front of the Battery Pack indicate the following:

- 1) Red indicates that the battery is fully charged.
- 2) Green indicates that battery is fully charged.

Using with battery pack charger, a completely discharged battery recharges fully in a approximately 2.5 hours.

The empty battery icon

Two or three minutes before the battery charge level gets too low to operate the phone, the battery sensor will let you know by blinking an empty battery icon(). If you continue to operate the CC-Phone without charging, the CC-Phone will turn off automatically.

S&semicon~

BATTERY PACK
Lithium Ion Battery : 3.7V 900mAh

PRODUCTION CODE : XXXXXXXXXX

CAUTION

MADE IN KOREA

- 1. Don't use other than the specified Battery Charger.
- 2. To prevent injury or burns, don't allow metal Objects to contact or short circuit the Battery terminals.
- 3. Don't discard the Battery pack into fire.

