

12cm

37cm

12cm




30.5cm



12cm



30.5cm

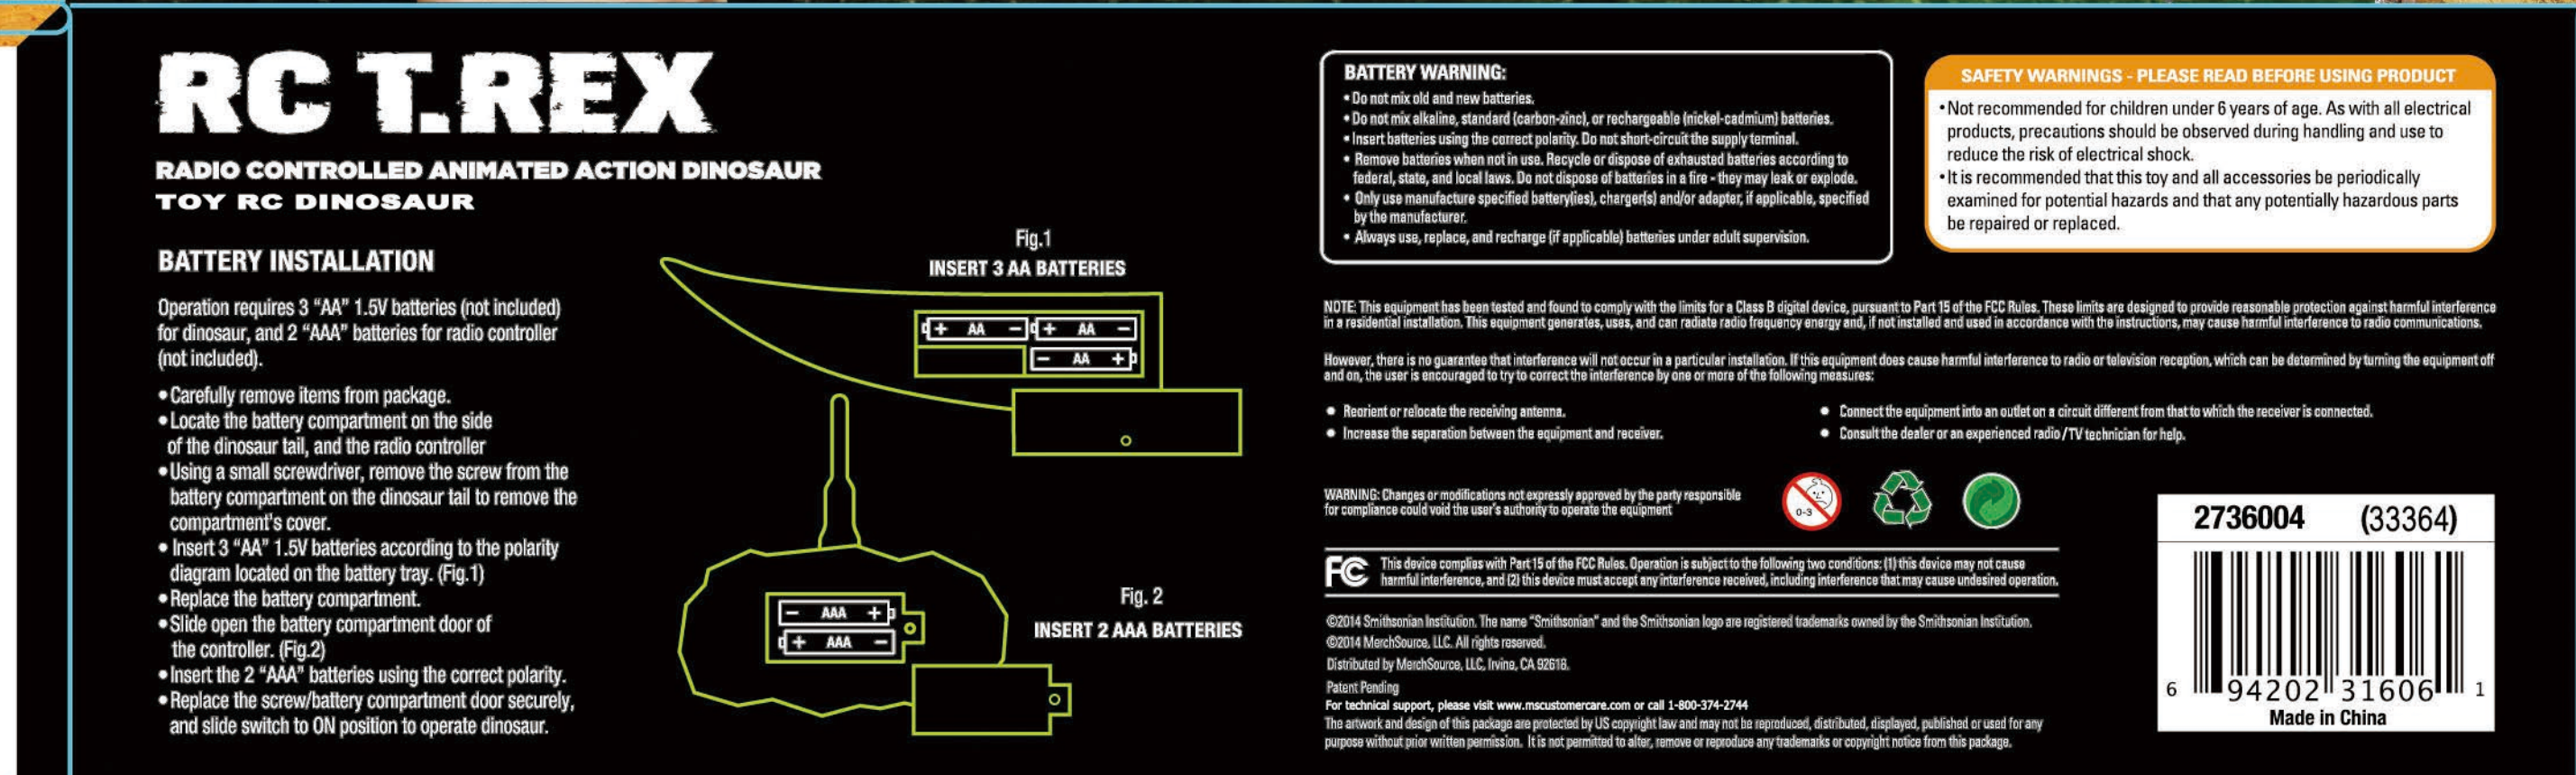

12cm

RC T. REX


RADIO CONTROLLED ANIMATED ACTION DINOSAUR

TOY RC DINOSAUR

BATTERY INSTALLATION

Operation requires 3 "AAA" 1.5V batteries (not included) for dinosaur, and 2 "AAA" batteries for radio controller (not included).

- Carefully remove items from package.
- Locate the battery compartment on the side of the dinosaur tail, and the radio controller.
- Using a small screwdriver, remove the screw from the battery compartment on the dinosaur tail to remove the compartment cover.
- Insert 3 "AAA" 1.5V batteries according to the polarity diagram located on the battery tray (Fig. 1).
- Replace the battery compartment.
- Slide open the battery compartment door of the controller (Fig. 2).
- Insert the 2 "AAA" batteries using the correct polarity.
- Replace the screw battery compartment door securely, and slide switch to ON position to operate dinosaur.

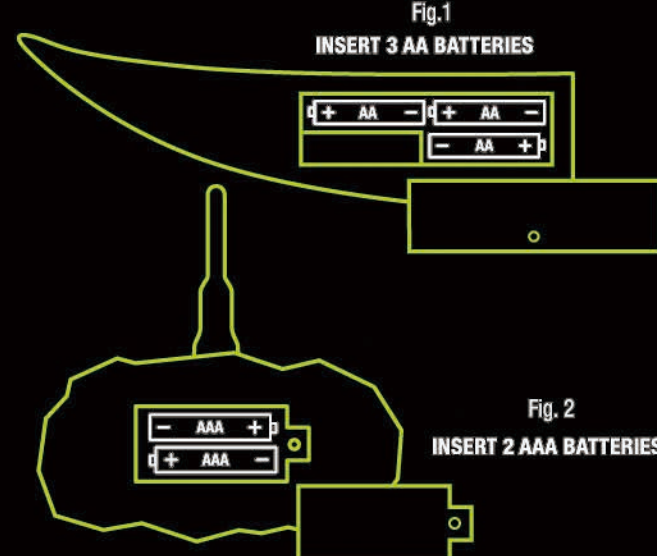

BATTERY WARNING:

- Do not use old and new batteries.
- Do not use alkaline, standard carbon-zinc, or rechargeable (nickel-cadmium) batteries.
- Do not short-circuit the contact points. Do not short-circuit the negative terminal.
- Remove batteries when not in use. Remove or dispose of exhausted batteries according to federal, state, and local laws. Do not dispose of batteries in a fire - they may melt or explode.
- Only use manufacturer specified batteries. Check your retailer's website for applicable, specified battery information.
- Remove the top, bottom, and recharge if applicable batteries under adult supervision.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This device may cause interference, and you may experience some interference if you use this equipment near a radio receiver.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to a power outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

©2014 Smithsonian Institution. The name "Smithsonian" and the Smithsonian logo are registered trademarks owned by the Smithsonian Institution.

©2014 Hasbro Inc. All rights reserved. The name "Hasbro" and the Hasbro logo are registered trademarks owned by Hasbro Inc. All rights reserved.

For more information, please visit www.smithsonian.com or call 1-800-234-2744. The artwork and design of this package are protected by copyright law and may not be reproduced, distributed, or used for any purpose without the prior written permission. Use is permitted by this, unless a separate notice is included or copyright notice from the packaging.

