

13.8cm

17.8cm

13 x 5.45 x 7 in

13.8cm



17.8cm

17.8cm

2.4GHz FHSS
TURBO DRIFTER
 RADIO CONTROLLED ACTION VEHICLE

BLU HAT
 MULTIFUNCTIONAL REMOTE CONTROL

Full Function Remote Control
 2.4GHz FHSS Frequency Hopping Spread Spectrum
 2-Speed Motor
 3-Speed Gearbox
 4-Function Remote Control

EXPERIENCE RC DRIFTING

TURBO DRIFTER
 RADIO CONTROLLED ACTION VEHICLE

EXPERIENCE RC DRIFTING

BLU HAT

BATTERY OPERATED PLAY VEHICLE
 6+ YEARS

FUNCTIONAL REMOTE CONTROL

EXPERIENCE RC DRIFTING

TURBO DRIFTER
 RADIO CONTROLLED ACTION VEHICLE

BLU HAT

EXPERIENCE RC DRIFTING

TURBO DRIFTER
 RADIO CONTROLLED ACTION VEHICLE

BLU HAT

• Built, Styling, Racing & Action on Smooth Surfaces
 • Available in Two Frequencies for Competitive Play
 • Full Function Remote Control

TURBO DRIFTER
 RADIO CONTROLLED ACTION VEHICLE

BATTERY INSTALLATION

This car requires 4 "AA" 1.5 batteries (not included). The controller requires one 9V battery (not included). When charging batteries, short-circuiting is required. See instructions for the best performance.

NOTE: For best operation, operate car on a hard surface.

• Carefully remove battery from the package.
 • Locate the battery door at the bottom of the car. Loosen Phillips screws and remove the door.
 • Pull the tabs on the door to the left and fit in to access the battery compartment. Insert 4 "AA" batteries while ensuring the correct polarity (+/-).
 • Replace the battery compartment door.
 • Repeat process on the back of the vehicle to insert 4 used battery door.
 • Repeat on 9V battery while ensuring the correct polarity (+/-).
 • Replace the battery compartment door.
 • Switch battery car and controller to power on/switched to "ON" position.

SAFETY PRECAUTIONS

- Do not operate this radio-controlled car on wet surfaces.
- Avoid water, sand and other when operating vehicle.
- Do not charge vehicle or controller in water.
- Never operate vehicle on the street or highway.
- Full stoppage is recommended when operating vehicle.
- Remove all batteries when not in use to avoid accidental operation.
- Never operate vehicle in a confined or crowded area, and do not use around children or animals as a distraction.
- Do not use vehicle with batteries, objects or sharp objects, as they will cause damage to both the vehicle and the battery.
- Keep fingers, hair and loose clothing away from the eyes, gears and motor while the vehicle is connected to "ON".
- Do not leave vehicle or controller near sources of heat or under direct sunlight for extended periods.
- Do not leave vehicle or controller outside overnight. Exposure is harmful to interior contents.

BATTERY WARNINGS

• Do not use or charge any battery that is damaged, swollen, leaking, or has a high temperature.
 • Do not use or charge any battery that is not the correct type or size.
 • Do not use or charge any battery that is not fully charged.
 • Do not use or charge any battery that is not fully charged.
 • Do not use or charge any battery that is not fully charged.
 • Do not use or charge any battery that is not fully charged.

CONTROL

TRANSMITTER ON: RED
POWER: ON

200910P **03088**

FE

© 2009 The copyright owner has reserved all rights in this product. All rights reserved. No part of this publication may be reproduced, stored in a retrieval system, or transmitted, in any form or by any means, electronic, mechanical, photocopying, recording, or by any information storage and retrieval system, without the prior written permission of the copyright owner.

33cm

17.8cm