2016版本--SM恐龙彩盒拼-2016-3-31--CTP





RADIO CONTROLLED ANIMATED ACTION DINOSAUR

Operation requires 3 "AA" 1.5V batteries (included) for the dinosaur,

NOTE: For best results, replace dinosaur batteries upon purchase.

and 2 "AAA" batteries for the radio controller (not included).

INSTALLING THE REMOTE'S BATTERIES

Using a screwdriver, remove the screw from the

battery compartment.

• Open the battery compartment door and insert

Using a screwdriver, attach the battery

compartment door back onto the remote.

INSTALLING THE DINOSAUR'S BATTERIES

• Locate the battery compartment located on the side

· Using a screwdriver, remove the screw from battery

Open the battery compartment door and insert 3 "AA" batteries (Fig. 2).
Using a screwdriver, attach the battery compartment

door back onto the dinosaur's tail.

2 "AAA" batteries (Fig. 1).



Remove batteries when not in use. Recycle or dispose of exhausted batteries according to federal, state, and local laws. Do not dispose of batteries in a fire - they may leak or explode

Always use, replace, and recharge (if applicable) batteries under adult supervision.

This device complies with Part 15 of the FCC Rules. Operation is subject to the follo harmful interference, and (2) this device must accept any interference received, in

For technical support, please visit www.mscustomercare.com or call 1-800-374-2744.

©2016 Smithsonian Institution. The name "Smithsonian" and the Smithsonian logo are registered trademarks owned by the Smithsonian Institution

The artwork and design of this package are protected by US copyright law and may not be reproduced, distributed, displayed, published or used for any purpose without prior written permission. It is not permitted to alter, remove or reproduce any trademarks or copyright notice from this package.

Reorient or relocate the receiving antenna.

©2016 MerchSource, LLC. All rights reserved.

Distributed by MerchSource, LLC, Irvine, CA 92618. China Patent No. ZL201430255276.5

Fig. 1 INSERT 2 "AAA" BATTERIES

Fig. 2 INSERT 3 "AA" BATTERIES

- AA +

C + AA - C + AA -

- AAA +; c+ AAA -

• It is recommended that this toy and all accessories be periodically

be repaired or replaced.

Consult the dealer or an experienced radio / TV technician for help.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

examined for potential hazards and that any potentially hazardous parts

2936001 (2301240)

