Table of Contents

1. Be	efore	using	the	product
-------	-------	-------	-----	---------

1. Safety Precaution	02
2. Features and Specification	05
3. Accessories	09
4. Location of Controls	10
5. LCD	11
6. PC System Requirement	12
7. Battery Recharge	13
8. Power	14
9. Connection/Disconnection to/from PC	15
10. File Download/Upload	18
11. Format	21

Table of Contents

0 D		Func	Himmo
-/ B	agin	- HIDIC	HOUSE

1. Keys	24
2. Power On/Off	25
3. Shifting Mode	26
4. Navigation	27

3. Audio

 1. Playing Music Files
 30

 2. Bookmark
 31

 3. Section-repeat
 32

4. Video

Table of Contents 5. Photo Viewing Images 6. FM Radio 7. Voice Voice Recording 8. Line-in

Table of Contents

9.		

)
1
7
3

10. Software

1. mobiBLU Transcoder	64
2. mobiBLU Transcoder Installation	65
3. File conversion (Blocked files/ multi-files)	68
4. Viewing File Information	72
5. Option Setting	73
6. mobiBLU Player	75

Table of Contents

11. Others

1. This may not be a trouble!	78
2. Warranty Services	80
3. FCC RF INTERFERENCE STATEMENT	81
4. Warranty Card	82



SRS is a registered trade mark of SRS Labs.
WOW technology is in conformity with the copyright of SRS Labs.

1. Before using the product

Safety Precaution	02
2. Features and Specification	05
3. Accessories	09
4. Location of Controls	10
5. LCD	11
6. PC System Requirement	12
7. Battery Recharge	13
8. Power	14
9. Connection/Disconnection to/from PC	15
10. Download and Upload	18
11. Format	21

Safety Precautions

Before using the product



Avoid humidity or dusty area.



Caution!

Caution!



Don't disassemble or modify the product.



Caution!



 
Don't put the product close to any heating device or under



Avoid the product from dropping or excessive shock.



Caution!







Don't touch the product with a wet hand.



Warning!

Safety Precautions

Before using the product





Caution!

Distributing music files without authorization is against copyright law.





Caution!

The manufacturer is not responsible for any damaged data saved in the product if the product error was caused by user's carelessness. The data saved in the product may be damaged in the A/S.



Listening to sound sources in higher volume may cause auditory disorder.



Warning!



Don't use earphone set while riding a bicycle or motorcycle, or driving a car.



Warning!



Immediately reset the product when it generates excessive heat or burning small, and then contact our A/S agent for repair.



Warning!

Safety Precautions

Before using the product

Carefully read this part before using the product. The Safety Precautions are classified into three categories; Danger, Warning and Caution. We are not responsible for any damage or loss from being not in conformity with these precaution provisions.



Danger: User may be endangered to death or any major injury when not in conformity with the previsions with this mark.



Warning: User may be subject to any major injury when not in

conformity with the provisions with this mark.



Caution: User may be subject to any minor injury or property damage

when not in conformity with the previsions with this mark.

Features

Before using the product

Playing Motion Images

This function allows you to enjoy high quality music videos or movies by converting images sources to mpg4 low-volume files. Now, your displayer shows you dynamic images!

Photo

Enjoy sharp-cut color images wherever you are.

You may zoom in and out (up to ×9) the images you desire to view large or small. This offers you to have a digital album.

Beep Sound

The new cheerful beep sounds will refresh you!

M3U Playlist

This product supports M3U function for both Winamp and Windows Media Player. Enjoy your taste whenever you desire to.

Watch, Alarm and Radio Advance-recording

This allows you to greet the new day with a refreshable wake-up music (MP3, WMA and OGG) by setting alarming time. DAH-1700 is not only a simple digital music player but also a multi-player providing you many conveniences such as alarming, watch and images. FM radio recording also will enable you to enjoy mid-night radio program in your commute subway train.

What will amaze you is the all above functions are available even in the power off.

Features

Before using the product

Voice Recording / FM Radio Recording / MP3 Direct Encoding (music recording)

The built-in high performance microphone enables you to use many functions of a professional voice recorder. And FM radio recording will allow you to repeatedly listen to stored radio programs and to send them to your PC. The product is also equipped with the Direct Encoding function which enables you to record sound sources from FM radio, CD player, Walkman and other external audio player with a simple one-touch button.

Multi-Codec

The product support Multi-codec to allow you to enjoy not only MP3 files but also WMA, WAV, OGG, JPEG, MPEG-4 and other media files.

High-speed USB 2.0 transmission

This product supports High-Speed USB 2.0 and it can achieve 40Mpbs transmission speed. Now enjoy your free time which was saved by extremely faster transmissions.

Firmware Upgrade

You may update your product for additional or improved functions by download the newest firmware in the Hyunwon's website. One of the leading MP3 player manufacturers, Hyunwon, is always a click away to support you with continuously updated firmware.

Mass Storage

The product is automatically identified as a 'removable disk' in you PC allowing you to download or upload files

Features

Before using the product

65000 Color OLED Display

This cutting-edge display system offers you more sharp-cut and alive images.

SRS 3D

You can now enjoy 3D Surround Stereophonic music with a tiny MP3 player! This SRS function offers you not only 3D Surround music but deep and abundant tone with the aid of enhanced bass.

11-band EQ Control for Your Own Taste

Create you own music tone with the aid of 11-band EQ controller and two User EQ channels!

Auto/Manual Lyric Streaming

You can simply create the lyrics steaming on the display for your favorite songs. DAH-1700 supports easy lyric creating function with Auto Lyric system. You may also edit lyrics as per your need.

Language-learning Aid

With all convenient and essential functions for language-learning such as sectionrepeat sectional FF/REW, resumption, bookmark and others the DAH-1700 enables you to study languages very effectively.

Specification


Before using the product

Class	Items	Specification
	FM Frequency Range	76MHz ~ 108.0MHz
FM Tuner	Headset Output	Left 7mW + Right 7mW(16Ω) Max. Volume
T III T UTIO	S/N ratio	50dB
	Antenna	Headset / Earphone code antenna
	Frequency Characteristic	20Hz ~ 20KHz
Audio	Headset Output	Left 20mW + Right 20mW(16Ω) Max. Volume
	S/N ratio	90dB
	File Type	MP3, WMA, OGG, WAV, ASF, JPEG, MPEG4
File	Bit Rate	MP3: 8Kbps ~ 320Kbps, VBR WMA: 32~192Kbps OGG: Q-1~Q10 WAV: MS-ADPCM
USB	Download Speed	40 Mbps
Reco	rding hours	1040 minutes for voice recording (with 256MB and based on 32Kbps)
Max. Playback hours		Audio: approx. 12 hours Video: approx. 3 hours
Operational Temperature		-5℃ ~ 70℃
Display		65000 Color OLED
Size (W x H x D mm)		58 x 28 x 22
	Weight(g)	35 (Battery inclusive)
Battery		Lithium Polymer (built-in type)

^{*} Real formated memory space may be less than memory size marked on Box & manual


Accessories

Before using the product

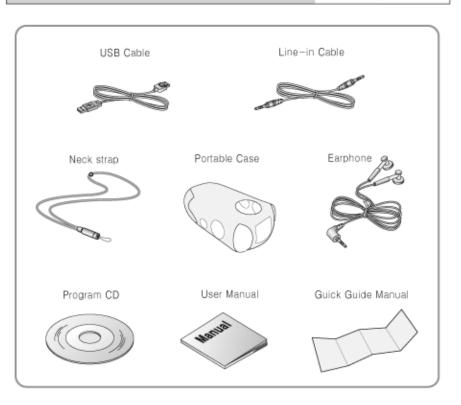

Location of Controls


Before using the product

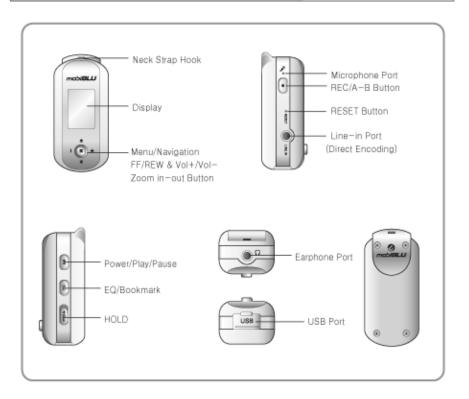

10



Before using the product

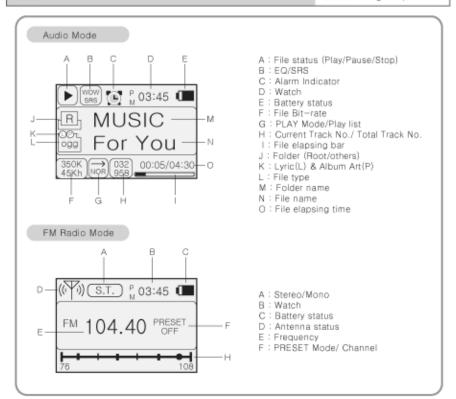

PC System Requirement

Before using the product


The minimum PC system requirements for the use of the product are as follows:

- . Microsoft OS (Window 98SE, ME, 2000, XP)
- CD-ROM Driver
- · Pentium 200MHz CPU or more
- RAM 64MB (128MB or more recommended)
- More than 30Mb space in hard disk (Additional hard disk may be required for storing music files)
- . USB 1.1 port or higher
- · Mac OS 9.0 or higher

Battery Recharge

Before using the product

1. Connect the product into PC with the USB cable supplied in the package.

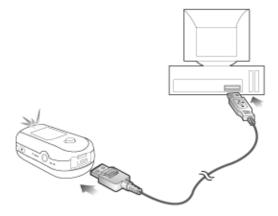

2. LED will turn on in the process of recharge. It will turn off at the completion of recharge.

Note!

- 1. It takes approximately 3 hours to completely recharge fully consumed battery.
- 2. Recharge is in process while downloading or uploading files.
- 3. Recharge the product using a USB cable when the display is not activated.

Power

Before using the product

When initially turning on the product, the battery status may vary. It is stabilized 5 to 6 seconds after the power ON.



- * Recharge the battery in following cases;
- 1. "Low Battery" appears on LCD -
- 2. Button is not functioning correctly
- 3. LCD is not activated by pushing the power button.
- Low ®

* Playback hours


Built-in Lithium Polymer Battery (459mAh): approx 12 hours (based on MP3 128Kbps, Vol. 20)

 Above results were derived from the measurement on the built-in Lithium Polymer Battery and are subject to change according to using conditions.

Connection with PC

Before using the product

Connect one end of the cable into a USB port on the back of PC and the other end to the earphone port of the product.

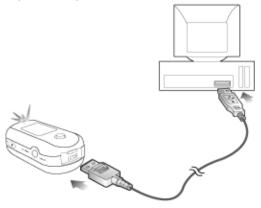

Note!

- 1. What's USB (Universal Serial Bus)? This is a new connection system between PC and peripheral devices.
- Connect the USB cable supplied with the product into a USB port in PC. Any unexpected error can be happened when connecting to the USB port in front of PC or USB hub.
- 3. The product can not be identified in the PC with Windows 98SE or lower. Install program CD supplied with the product in the PC.

Disconnection

Before using the product

With Windows ME, 2000 and XP

 Double click on the green arrow on the right-bottom part of the initial Window screen.



2. Click on Stop and OK after selecting "USB Mass Storage Device"



Click on OK on "Safety removal of the hardware" message bar followed by cable removal.



Disconnection

Before using the product

In case with Windows 98SE

Open "My Computer" or "Windows Search" and choose "Removable Disk." Choose "Remove" using the right button of mouse and then remove the USB cable.



- ① Note!
- Removing the cable without following above instruction will display a warning message and may cause a fatal error in PC or the product.
- Removing the cable while downloading or uploading files, or formatting the product may cause a fatal error in PC or the product.

File Download/Upload


Before using the product



!) Note!

This product downloads or uploads all types of data files (*.jpg, *.xls, *.hwp······) functioning as a removable disk as well as a MP3 player.


 To download files connect USB cable and click on "Copy" using right mouse button following the selection of files in PC.

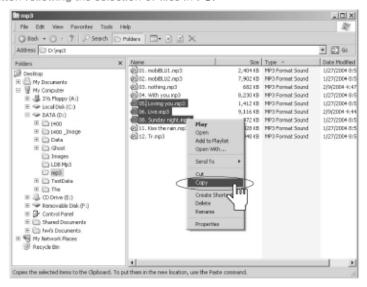

File Download/Upload

Before using the product

2. Click on "Paste" in Removable Disk window using right mouse button.

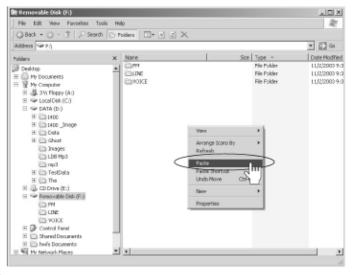


- Note! -
- 1. PC identifies the product as a removable disk under "My Computer."
- Don't remove USB cable while transferring the files. It may cause fatal error in PC or the product.

File Download/Upload

Before using the product

Downloading selected files to the product is completed.

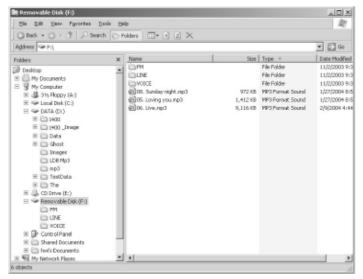



Note!

- 1. You can upload files from the product to PC by following reverse way.
- 2. Drag & Drop enables you to download or upload files simply.

Format


Before using the product



Note! -

Removed files can not be recovered after formatting the device!


 Choose "format" using right mouse button on removable disk folder in PC Windows.

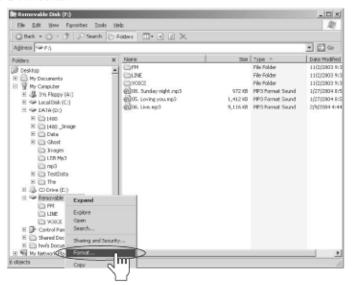

Format

Before using the product

2. Click on Start button when format window pops up. .

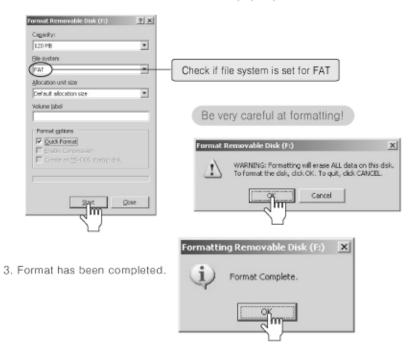

2. Basic Functions

1. Keys	24
2. Power On/Off	25
3. Shifting Mode	. 26
4. Navigation	. 27
5. Hold	. 28

Key Manipulation

Basic Functions

It is even easier to use the product with proper key manipulations.

	Bookmark Setting Press and hold in play
Bookmark Setting mode	Playing Bookmark Press shortly in Stop/Pause search desiring bookmark using press to play
	Deleting Bookmark Press shortly to delete selected and hold to delete all
Shifting EQ	Press in Play mode
Shifting Playmode	Press at Stop/Pause mode
Recording	Press hold at Stop/Pause mode
A-B Section repeat	Press in Play mode
File Deletion	Press on navigation screen select ON on File Deletion screen
Viewing Lyrics/ Album Art	Press and hold in Play wiew lylic press and hold wiew album art

* Album Art: It allows you to view photo images included in ID3 Tag.

Power ON/OFF

Basic Functions

Turning ON the power

Press



and hold to turn the power on.



- 1. The product is not activated with intro display only when it is in HOLD.
- 2. When the battery is low LCD shows "Low Battery" and is not activated.
- 3. Recharge the battery when the display is not activated.
- 4. The LED will blinks notifying you of Power ON if you press (and hold.



Turning OFF the power



and hold to turn the power off.



- 1. When no button manipulation in pause or stop condition is done after the set period for "Auto Power Off," it automatically turns off the power.
- 2. When you try to play a file again following the restart of the product, it completely recovers all previous setting. All track numbers, equalizer and other settings are recovered. (Resume function in second unit)

Shifting Mode

Basic Functions

There are all 6 modes programmed in the product; Audio, Video, Photo, FM Radio, Voice and Line in.














- · Audio: allows you to enjoy music
- · Video: allows you to enjoy motion images
- · Photo: allows you to view saved pictures
- . FM Radio: allows you to listen to FM radio.
- · Voice: allows you to record your voice.
- . Line in: allows you to record external audio source from other audio player.

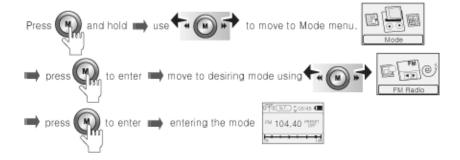

Navigation

Basic Functions

Enter Navigation while the product is in play to search folders and select Photo, Video, Record and other files.

Example: when trying to play "To you" in the music folder:



Press enter navigation



move to Music folder using











to play the file.



Note!


- REW direction to move to preceding (upper-leveled) folder
- Press () to get out of the Navigation mode.
- Press shortly to display a dialogue box to delete the file. Choose 'Yes' if you want to remove the file.

HOLD

Basic Functions

Place button to HOLD to hold the functions. Press the button once again to release it.

The display shows below indication for 1 ~ 2 seconds when you first set HOLD.

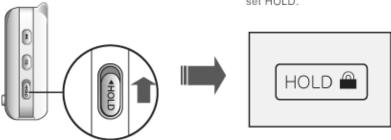


Note!

- 1. No button is functioning in Hold status.
- 2. The product is not activated except above short HOLD indication on display.

3. Audio


1. Playing Music Files	30
2. Bookmark	31
3. Section-repeat	32

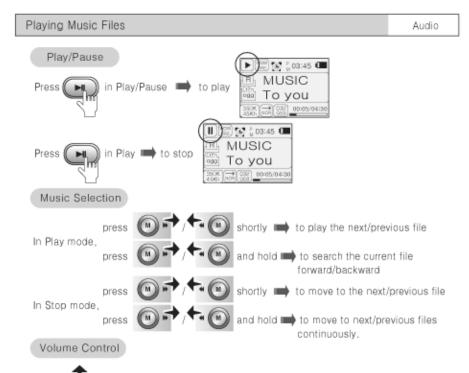




shortly to increase/decrease sound volume by steps and hold to increase/decrease sound volume continuously



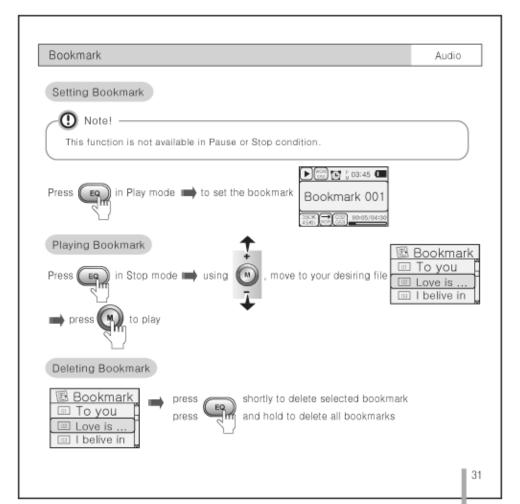


Section-repeat


Audio

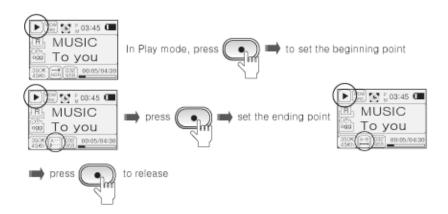

4. Video

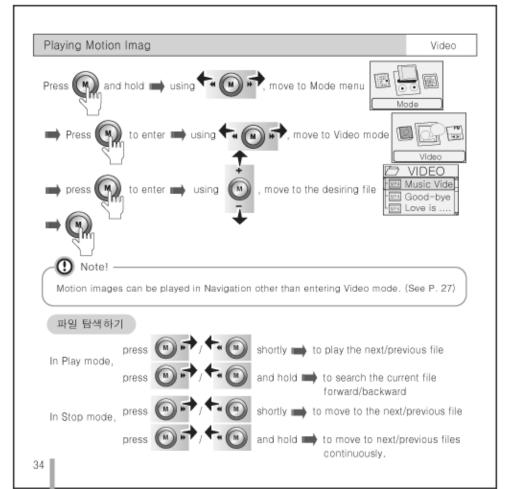

5. Photo

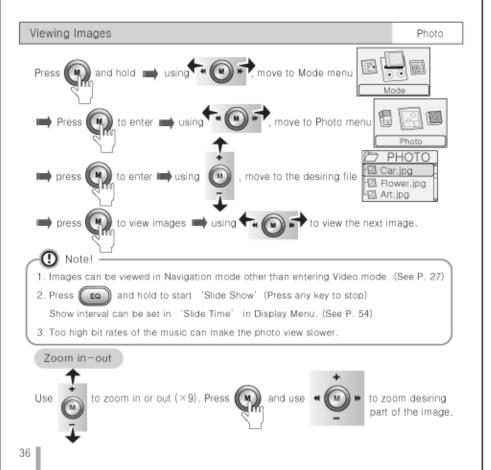


6. FM Radio

1. Listening to Radio	38
2. Saving Frequencies (Channels)	39
3. Entering Preset Mode	40
4. Radio Recording	41

Listening to Radio

FM Radio

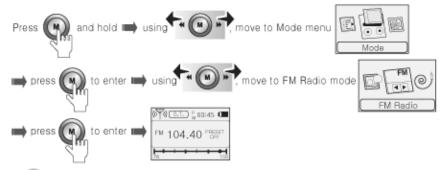

- Note!
 - 1. Earphone also takes its role as an antennan.
 - 2. The local frequency ranges may be various around the world.
 - 3. Automatic conversion between Mono/Stereo

Searching Frequencies



shortly to increase/decrease frequencies by 0.1Mhz

manual step-by-step search


and hold to continuously increase/decrease frequencies

auto search for stronger signals.

Saving FM Channels

FM Radio

Manual Save

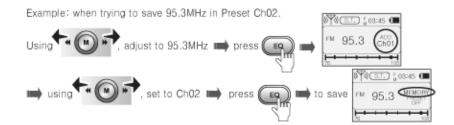

Auto Save



· Note!

- The Preset No will be changed to '01' to receive the frequency following the search to 108.0MHz.
- 2. Press (to halt the search in Auto Search
- The earphone takes the role as an antenna. Always connect the earphone into the product when trying to save channels automatically.

Entering Preset Mode

FM Radio



to enter Preset mode





search saved frequency press (M) to release the Preset mode.

Deleting saved frequency

to search the channel you want to remove





- 1. You can find all saved channels in the product by entering Preset Mode.
- 2. Preset search will not be available if there is no channel saved.

Radio Recording

FM Radio



while listening



in the recording 뻐 press



recording stop and saving press (




to exit.



- 1. The recording will be done without being through Recording-Ready
- Recorded sound source is saved in MP3 format in RECORD folder in the following sequence; FM001.MP3, FM002.MP3···..
- Bit rates for recording can be selected in setting menus 'Rec Setting' among 32, 64, 96 and 128kbps. (See P. 61)
- 4. Advanced FM recording can be set in Alarm in setting menus. (See P.58)

7. Voice

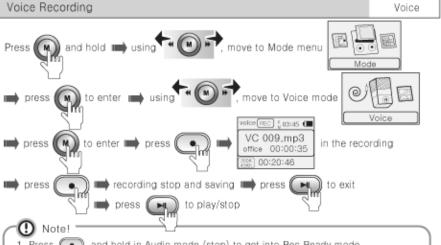


- Press (and hold in Audio mode (stop) to get into Rec Ready mode.
- Recorded files are stored in MP3 format in RECORD folder in the following sequence; VC001.MP3, VC002,MP3...
- 3. Bit rates for recording can be selected in setting menus 'Rec Setting' among 32, 96 and 128kbps. (See P.61)
- 4. You may save the memory by recording only necessary parts with the aid of VOR function. (See P.61)
- 5. The recording will be interrupted when the memory gets full. The recorded voice source only is saved in the memory in this incident.
- Sound quality may vary according to different distances from the sound source.
- 7. In case that the power is not enough to run the product, the recording may not be completed correctly.

8. Line-in

Line-in Recording


Line-in

Connect the product into external audio player with the Line-in cable supplied in the package.

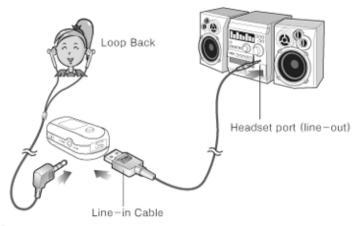

• Note!

You can listen to the audio source being recorded with the aid of Loop Back function.

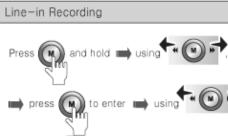

Line-in



, move to Voice mode





in the recordina

recording stop and saving press Fig. 1 press



to exit



- 1. Analog sound signals can be converted to digital sound by recording external audio sources with the Line-in cable supplied in the package.
- Recorded files are stored in MP3 format in RECORD folder in the following sequence; AU001.MP3, AU002.MP3...
- Bit rates for recording can be selected in setting menus 'Rec Setting' among 32, 64, 96 and 128kbps. (See P. 61)
- 4. When you record music, every single file can be created and stored automatically with the aid of VOR function. (See P. 61)
- The recording will be interrupted when the memory gets full. The recorded voice source only is saved in the memory in this incident.
- In case that the power is not enough to run the product, the recording may not be completed correctly.

9. Menu

1. Structure	50
2. Entering Menus	51
3. Playlist	52
4. Display	54
5. Playmode	56
6. EQ / SRS	57
7. Setting	58



Menu

MENU Mode: Audio / Video / Photo / FM Radio / Voice / Line in

Playlist

Display : Screen saver / Slide time / Lyrics / Screen off

/ Scroll speed / Brightness

Playmode: Normal / Normal DIR / Repeat 1 / Repeat DIR

Repeat all / Shuffle DIR / Shuffle all / Shuffle repeat

/ Intro / Study


- EQ/SRS: SRS WOW / Normal / Rock / Jazz / Classical / Pop / Dance


/ R&B / Hiphop / Blues / Ballad / Techno / User1 / User2

- Setting: Alarm / Watch / Timer / Scan speed / Play speed / Beep

/ Resume / ID3 Tag / Fade in / FM Region / REC setting

/ Initialize / Sys info

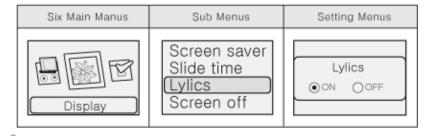

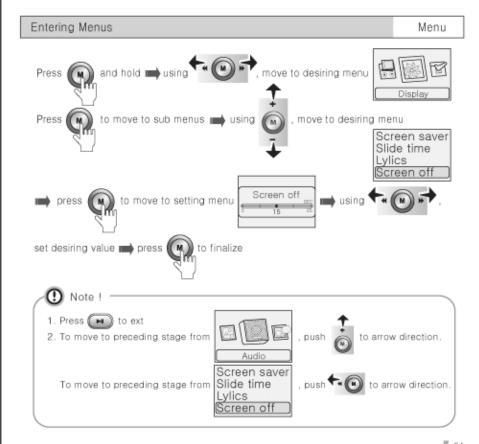


Playlist

Menu

Writing Playlist

 Search the file you want to write Playlist in Navigation





the playlist is created with the file name checked (up to 20 playlists)



Note!

It is only available in Navigation mode.

Cancel/Delete Playlist

Press



shortly to cancel or delete the selected playlist and hold to cancel or delete all selected playlist

Playing Playlist

Choose [Playlist] in Main menu





Menu



(P) Note! -

- 1. The written Playlist is available in Playlist mode.
- 2. Writing Playlist is not possible in Playlist mode. (possible in Navigation)
- 3. A Playlist icon appears in playing Playlists. Pigg 108:45 💷



Exit from the Playlist

Press (M

in Playlist Ready/Play mode to enter Navigation







, select the file i press m



to play is convert the mode to Normal



- Note!
- 1. Selecting any file in Navigation will convert the mode to Normal
- 2. The product also supports M3U files for both Winamp and Windows Media Player.

Display

 
Menu

Select [Display] in Main menu.




Screen Saver

It is activated when the product is not in use for preset time period.



Slide Time

 This is the interval time between images for 'Slide Show'.



Lylics

It enables lyric streaming





Menu



- 1. Only marked files by LDB manager support lyrics, (see enclosed instruction Viewing lyrics)
- 2. Lyrics are not available in Pause/Stop mode.
- Short cut: Press and hold in Play mode view lyrics press and hold
 - wiew photo images.

Screen Off

The display will be off when the player has not been in use after a preset period of time.



Scroll Speed

It enables you to set the streaming speed of file names.



Brightness

 
The brightness of display can be set as follows;



Playmode


Menu

Choose [Playmode] from Main Menu.



- Normal : All music files are playing in sequence.
- 2. Normal DIR: The files in current directory only are playing once in sequence.
- Repeat 1 : One file only is repeatedly playing.
- Sepeat DIR: The files in current directory only are repeatedly playing in sequence.
- Repeat all : All files are playing repeatedly in sequence.
- Shuffle DIR: All files in directories are playing in random sequence.
- 7 Shuffle all : All files are playing in random sequence.
- 8. Shuffle Repeat : All files are continuously playing in random sequence.
- Intro: Only initial parts (for 10 seconds) of all files are playing.
- 10. Study: The file is playing after skipping for set period of time.

 
(setting period: 5 ~ 60 seconds)






Short key: Press • in Stop/Pause mode to change Play Modes.




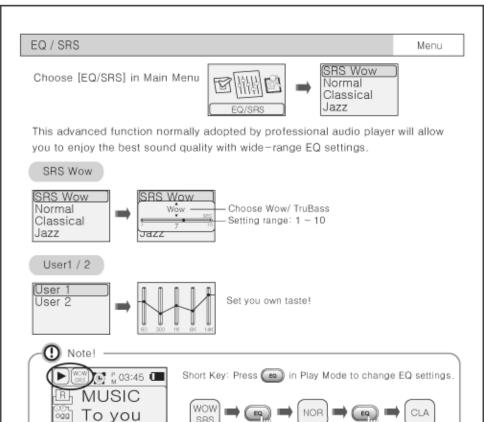

032 00:05/04:30

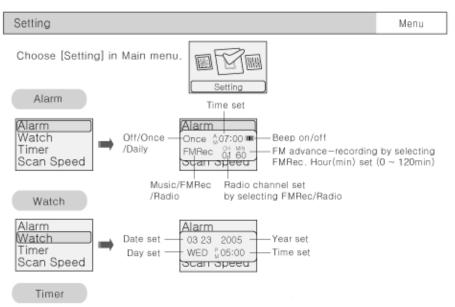

 - Sleep Mode: This function automatically turns off the power after set period of time for your sleep.
- Auto Off: The function turns off the power automatically when there has been no button manipulation for set period in Pause or Stop mode.



Menu

Scan Speed

The speed for fast-search can be set as follows:



 
Play Speed

This function sets the file playing speed.



Beep


This provides you cheerful beep sounds at initializing stop or play.



Menu

Resume

 This function fully recovers all previous settings for the last song's volume, EQ, Playlist and all others when you turn the power on again.



ID3 Tag

Choose ON to view the song information including Title, Artist, Album, Year and Genre in sequence. (File name only is displayed with the function off)



 
Choose this function ON to enable sound volume to increase smoothly.



Menu


FM Region

This enables you to set four major regions for FM signals around the world.



REC Setting

This is to select REC related menu options among FM, Voice and Line in.

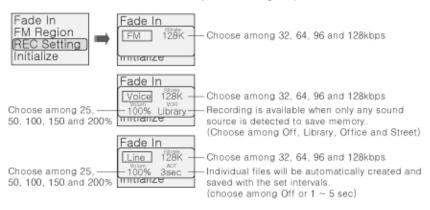

Menu

Initialize

This function initializes the product.



Sys Info

This enables you to view the product information.




10. Software

1. mobiBLU Transcoder	64
2. mobiBLU Transcoder Installation	65
3. File conversion (Blocked files/ multi-files)	68
4. Viewing File Information	72
5. Option Setting	73
6. Playing mobiBLU Player	75

mobiBLU Transcoder

Software

This is a program used to convert common motion image formats such as WMV, ASF, MPG and AVI to MP4 format that DAH-1700 can play.

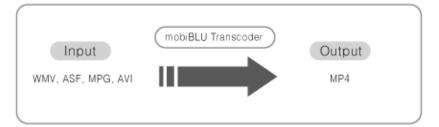

- System Requirement
 - 1. H/W
 - CPU: Intel Pentium4 1GHz or higher
 - HDD: 20MB or more space
- 2. S/W
 - Above Microsoft Windows 98 SE
 - Microsoft DirectX 9.0
 - MS Media Player 9.0
 - (Recommended Code Pack) C Pack or K-Lite Codec Pack

Installation of mobiBLU Transcoder

Software

This is a program used to convert common motion image formats such as WMV, ASF, MPG and AVI to MP4 format that DAH-1700 can play.

 Click on "mobiBLU Transcoder 1700" following the CD insertion.






2. Click on "Next"


Installation of mobiBLU Transcoder

Software

 Click on "Next" following the selection of directory where you want to install the program in.

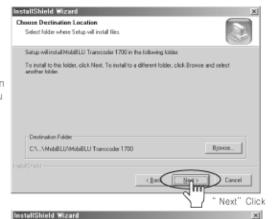

 Click on "Next" following the selection of program folder.

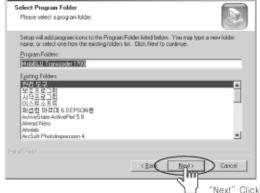

Installation of mobiBLU Transcoder

Software

5. Click on "Finish" to complete the installation.





[Initial Window]



Click on transcode it stops and is saved automatically at the completion of Transcoding.



[Transcoding is in process]


Sectioned File Conversion

Software

A specified section in a file can be Transcoded.

Move File Selection File Play shift Seek Bar to desiring position

press select to set begging point press to set ending point press to set ending point press select to enter the section. (press present to cancel the section)

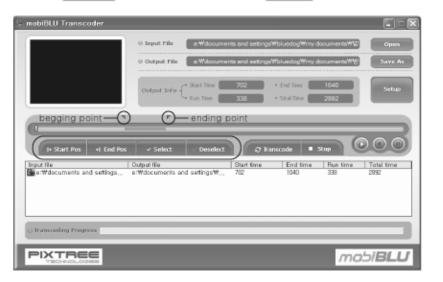


Converting Multiple Files

Software

The Transcoding can be done for multiple file at a time.

Use Open to select files → press Open to transcode the files


To cancel a registered file, click on the file in List Box and choose Delete Selected List using the right mouse button. Click on Delete All List in the box to cancel all registered files.

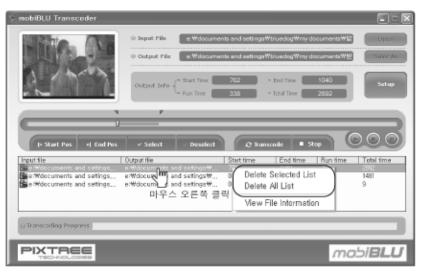

Viewing File Information

Software

You can see file information by choosing View File Information by double-clicking on one of key-registered file lists or by using the right mouse button. (The file information dialog box will disappear when clicking on ESC.)

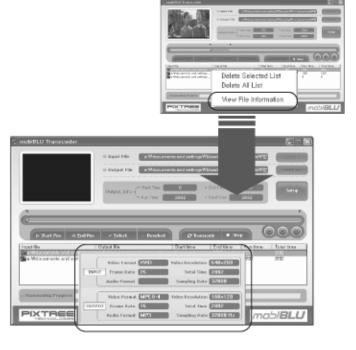


Option Setting

Software

Press




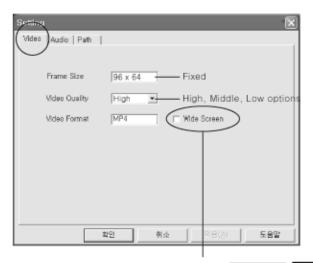

In case with Divx file, many of films were set for 720×480 screen and, if you convert them for 176×144 screen, the images will be widened. Choose this option to see these films with their original screen settings.





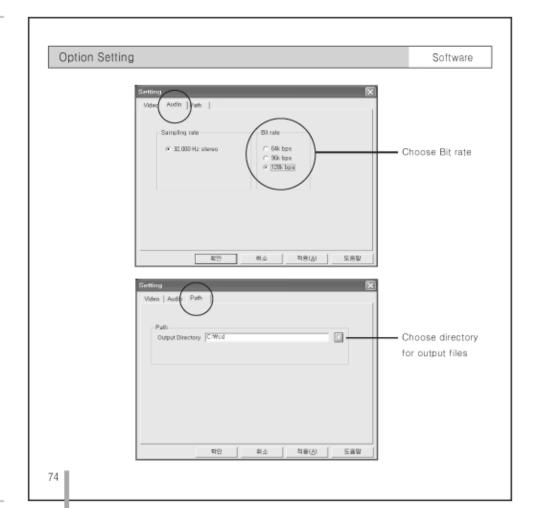

Playing mobiBLU Player

Software

Encoded files can be played in mobiBLU Player.





Double Click on press to select the file you desire to play



to play the file



[in playing]

11. Others

This may not be a trouble!	78
2. Warranty Services	80
3. FCC RF INTERFERENCE STATEMENT	81
4. Warranty Card	82

This may not be a trouble!

Others

Followings may not be troubles, please carefully examine symptoms.



Can not turn the Power on? .



- Check the battery capacity. Recharge the battery with USB cable.
- 2. Check if the product is in HOLD.



Button is not functioning?



Check if the product is in HOLD.



Can not hear sound sources properly with much noise?



- Check if any foreign material applied on earphone tip and, if yes, remove it.
- Completely push the earphone tip into the product.
- 3. Check if the file is damaged.
- 4. Check the volume.

This may not be a trouble!

Others



Too much noise with interrupted FM receiving?



- Check the earphone. It functions as an antenna.
- Use the product away from peripheral electric devices



Trouble with file downloading?



- Check USB cable connection.
- 2. Check the available memory capacity.



LCD is not activated?



- Check LCD brightness set. (Menu => Screen Set => Brightness Set)
- Check the battery. Recharge it with a USB cable if needed.

Warranty Services

Others

 The purchaser of this product is entitled to receive warranty services for one year from the date of purchase. This warranty is not applicable to those troubles made by improper use, accident or act of god.

The warranty does not cover the following:

- Any foreign material (water, beverage, coffee, sand or others) penetrated or introduced into the product.
- Damaged or functionally abnormal product resulted by external shocks including dropping.
- Damaged or deformed frame resulted by the use of organic solvents such as benzene or thinner.
- Unauthorized modifications carried out for the product using the parts or component produced by other manufacturers.
- Loss of damaged parts or components resulted by unauthorized disassembly of the product.
- Troubles related with the repairs performed by unauthorized service personnel or center.

FCC RF INTERFERENCE STATEMENT

Others

Note

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures.

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio, TV technical for help.
- Only shielded interface cable should be used.

Finally, any changes or modifications to the equipment by the user not expressly approved by the grantee or manufacturer could void the users authority to operate such equipment.

CAUTION


Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOW-ING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRED OPERATION.

WARRANTY FORM

Warranty Term: 1 year from the date of purchase Product

Model:			
Date of Purchase:	(month)	(day)	(year)
Name of purchaser:		Phone Number:	
Address:	وملي ومل		ومني ومنيا
Place Purchased:		Phone Number:	desin desin
Address		######################################	3

 

Hyurwon incorporated

- You need to show this Warranty Certificate with the date of purchase when requesting service, in order to receive satisfactory services. Please keep the Warranty Certificate in a safe place.
- The warranty service on this product is provided based on the information contained in the Warranty
 Certificate.
- The warranty service takes effect from the date of purchase, so please make sure you enter the date of purchase on the Warranty Certificate at the time of purchase. (If the date of purchase cannot be verified, the date 6 months from the date of manufacturing will be use instead.)
- This Warranty Certificate is not reissued.

The exterior or dimensions are subject to change without prior notice to the customer in order to improve the product quality.



User Manual

