


| | | | |
|--|---------------------|----------|------------|
|  <small>A Phoenix Mecano Company</small> | Issue Department: | Date: | 2018.11.15 |
| | System Instruction | Author: | |
| | Instruction of RF28 | | |
| | | Edition: | 1.1 |
| Page 1 of 4 | | | |

Instruction of RF28

1 Key description

1.1 appearance

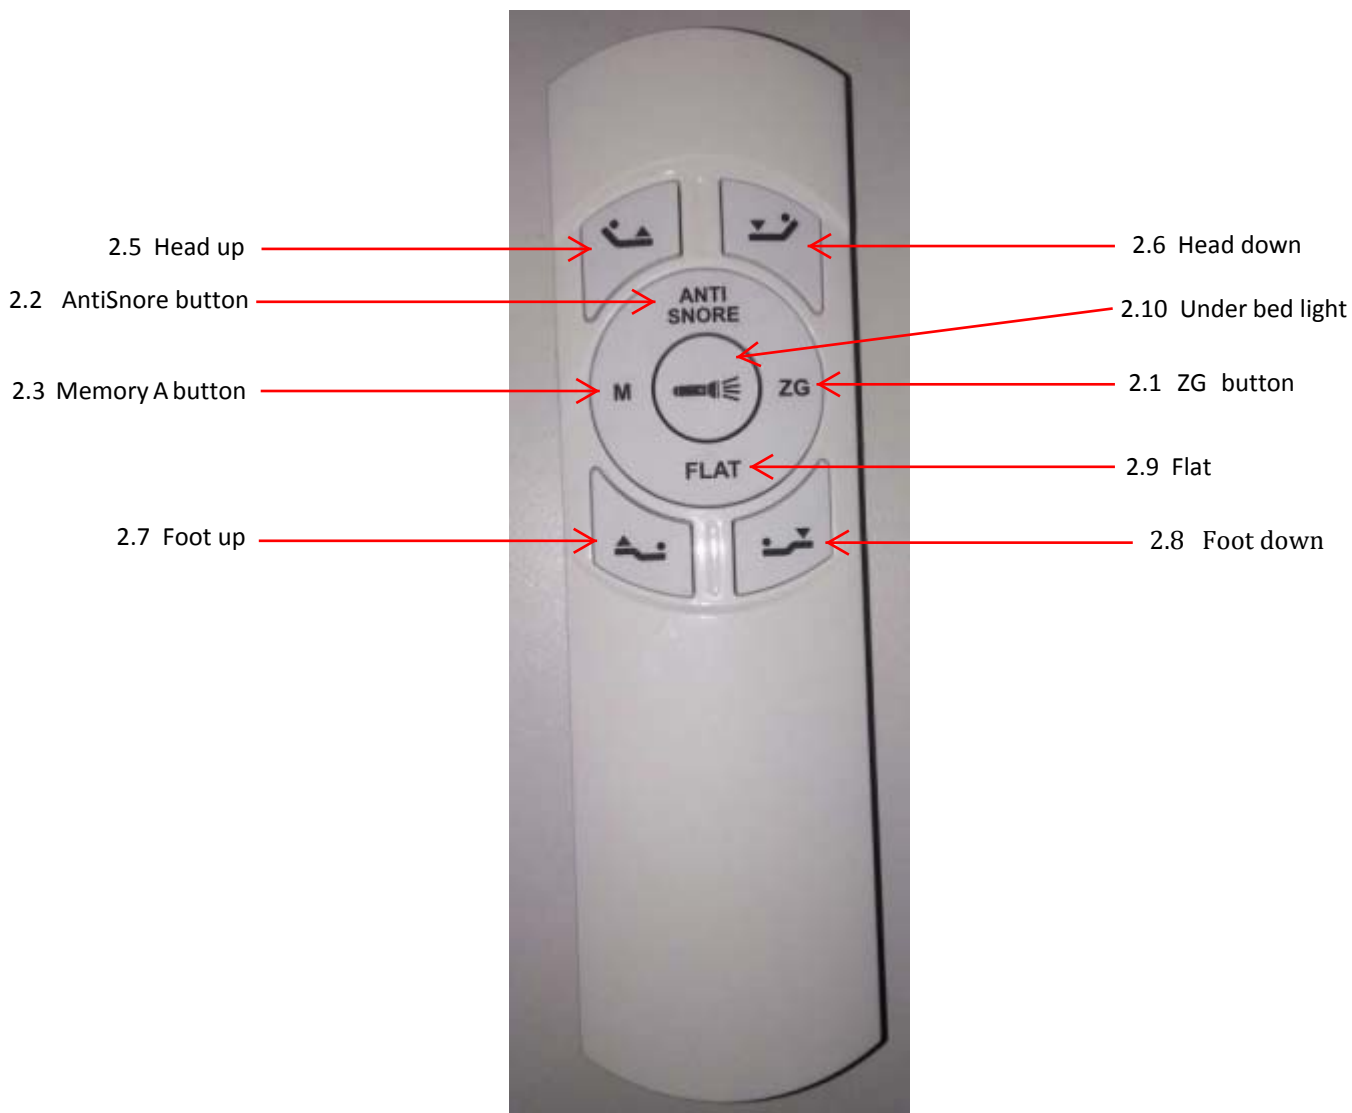



Figure 1 button of remote

| | | | |
|--|----------------------------|---------|-------------|
|  <small>A Phoenix Mecano Company</small> | Issue Department: | Date: | 2018.11.15 |
| | System Instruction | Author: | |
| | Instruction of RF28 | | |
| | | | Page 2 of 4 |

2 Key description

2.1 ZG button

Click the ZG button, the actuator moves to ZG position, stop when click any button during the movement;

Press and hold the ZG button for 5s, timer LED of remote flashes, the control box records current position as ZG position;

When in the process of moving to memory positions, the head and foot actuators move first, then the tilt and lumbar actuators move;

2.2 AntiSnore button

Click AntiSnore button, actuators move to AntiSnore position, stop when click any button during movement;

Press and hold AntiSnore button for 5s, timer LED of remote flashes, the control box records current position as AntiSnore position;

When in the process of moving to memory positions, the head and foot actuators move first, then the tilt and lumbar actuators move;

2.3 Memory A button


Click MA button, actuators move to MA position, stop when click any button during movement;

Press and hold MA button for 5s, timer LED of remote flashes, the control box records current position as MA position;

When in the process of moving to memory positions, the head and foot actuators move first, then the tilt and lumbar actuators move;

2.4 Reset all memory positions to default settings

Press and hold ZG+FLAT buttons for 5s, timer LED of remote flashes, the control box reset all memory positions to default settings;

| | | | |
|--|---------------------|-------------|------------|
|  <small>A Phoenix Mecano Company</small> | Issue Department: | Date: | 2018.11.15 |
| | System Instruction | Author: | |
| | Instruction of RF28 | | |
| | | Edition: | 1.1 |
| | | Page 3 of 4 | |

2.5 Head up

Press and hold HEAD UP button of remote, head actuator moves out, stop when released;

2.6 Head down

Press and hold HEAD DOWN button of remote, head actuator moves in, stop when released;

2.7 Foot up

Press and hold FOOT UP button of remote, foot actuator moves out, stop when released;

2.8 Foot down


Press and hold FOOT DOWN button of remote, foot actuator moves in , stop when released;
When moving to flat position, lumbar actuator and tilt actuator move first, after 500ms, head and foot actuators start moving;

2.9 Flat

Click FLAT button, the bed goes flat, stop when click any button during the process of going flat;

2.10 Under bed light

Click the under bed light button, the under bed light switch its on/off state; After the under bed light opens, if do not manually close, it will automatically turn off after 5 minutes;

| | | | |
|---|---------------------|---------|-------------|
|  | Issue Department: | Date: | 2018.11.15 |
| | System Instruction | Author: | |
| | Instruction of RF28 | | |
| | | | Page 4 of 4 |

FCC Statement :

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

ISED RSS Warning:

This device complies with Innovation, Science and Economic Development Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions:

- (1) this device may not cause interference, and
- (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'ISED applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

- (1) l'appareil ne doit pas produire de brouillage, et
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

ISED RF exposure statement:

This equipment complies with ISED radiation exposure limits set forth for an uncontrolled environment. The device has been evaluated to meet general RF exposure requirement.

Le matériel est conforme aux limites de dose d'exposition aux rayonnements énoncés pour un autre environnement. ce dispositif a été évalué à satisfaire l'exigence générale de l'exposition aux rf.

