Lenovo IdeaPad Y550P User Guide v1.0

New World. New Thinking.[™]

www.lenovo.com

©Lenovo China 2009

P/N: xxxxxxxx

Printed in China

lenovo

lenovo

idea pad

- Not

- Before using this information and the product it supports, be sure to read the following:
- Chapter 6. Safety, Use and Care Information on page 55.
- Appendix D. Notices on page 106.

lenovo



If your product is not working correctly, DO NOT RETURN IT TO THE STORE.

For technical assistance, contact a Lenovo support specialist 24 hours a day by calling toll free **1-877-4** LENOVO (1-877-453-6686).

Additionally, you can find support information and updates on the Lenovo Web site located at <u>http://consumersupport.lenovo.com.</u>

* Only for the users from the United States.



© Copyright Lenovo 2009. All rights reserved.

U.S. GOVERNMENT USERS – RESTRICTED RIGHTS: Our products and/or services are provided with RESTRICTED RIGHTS. Use, duplication or disclosure by the Government is subject to the GSA ADP Schedule contract with Lenovo, if any, or the standard terms of this commercial license, or if the agency is unable to accept this Program under these terms, then we provide this Program under the provisions set forth in Commercial Computer Software-Restricted Rights at FAR 52.227-19, when applicable, or under Rights in Data-General, FAR 52.227.14 (Alternate III).

ENERGY STAR model information



ENERGY STAR[®] is a joint program of the U.S. Environmental Protection Agency and the U.S. Department of Energy aimed at saving money and protecting the environment through energy efficient products and practices.

Lenovo[®] is proud to offer our customers products with an ENERGY STAR compliant designation. Lenovo computers of the following machine types, if the ENERGY STAR mark is affixed, have been designed and tested to conform to the ENERGY STAR 5.0 program requirements for computers.

- 20035
- 3241

By using ENERGY STAR compliant products and taking advantage of the power-management features of your computer, you reduce the consumption of electricity. Reduced electrical consumption contributes to potential financial savings, a cleaner environment, and the reduction of greenhouse gas emissions.

For more information about ENERGY STAR, visit <u>http://www.energystar.gov</u>.

Lenovo encourages you to make efficient use of energy an integral part of your day-to-day operations. To help in this endeavor, Lenovo has preset the following power-management features to take effect when your computer has been inactive for a specified duration:

Table 1. ENERGY STAR power-management features, by operating system

Windows[®] 7

Power plan: Energy Star

- Turn off the display: After 10 minutes
- Put the computer to sleep: After 25 minutes
- Advanced power settings:
- Turn off hard disks: After 20 minutes
- Hibernate: After 1 hour

To awaken your computer from a Sleep mode, press any key on your keyboard. For more information about these settings, refer to your Windows Help and Support information system.

Explanation of hard disk capacity

Dear user,

While using your computer, you may discover that the nominal hard disk capacity indicated is somewhat different from the disk capacity displayed by the operating system. For example, a nominal 40GB hard disk will appear as less than 40GB in the operating system. This discrepancy is not an error in hard disk installation nor any other problem, but a normal phenomenon of computers. This phenomenon is primarily due to the following reasons:

I. Different standards used by the manufacturer and operating system when calculating hard disk capacity

Hard disk manufacturers use a radix of 1000, i.e. 1G = 1,000MB, 1MB = 1,000KB, 1KB = 1,000 bytes. However, when identifying hard disk capacity, operating systems use a radix of 1024, i.e. 1GB = 1,024MB, 1MB = 1,024KB, 1KB = 1,024 bytes. The standard adopted by your computer is that of the hard disk manufacturers. Since the standards adopted by the hard disk manufacturer and operating system are different, the hard disk capacity displayed by the operating system will be different from the nominal hard disk capacity.

For example, if the hard disk is nominally X G, even when it is completely empty, the capacity displayed by the operating system will be: $X \times 1000 \times 1000 \times 1000 / (1024 \times 1024 \times 1024) \approx X \times 0.931 \text{ G}$ If a portion of the hard disk space has been used for some specific purpose, then the capacity indicated by the operating system will be even less than $X \times 0.931$ G.

II. A portion of the hard disk space is used for specific purposes

Lenovo computers come with preinstalled OneKey Rescue System, so the hard disk has a special portion partitioned before delivery, which is used to store hard disk mirror and OneKey Rescue System program files. The size of the reserved space for this partition varies according to the model, operating system and software of the computer. For the sake of safety, this partition is not evident, which is commonly referred to as a "hidden partition".

In addition, after the hard disk is partitioned or formatted, the system will assign a certain amount of hard disk space for the system files.

For the above reasons, the available hard disk space indicated by the operating system is always less than the computer's nominal hard disk capacity.

Contents

Chapter 1. Getting to Know Your Computer

Top view	1
Left-side view	
Right-side view	5
Front view	6
Bottom view	7

Chapter 2.

Jsing Your Computer.	9
Using the touchpad	9
Using the keyboard	11
Special keys and butt	ons14
Using the optical driv	re 16
Using memory cards.	16
Using lenovo remote	control
(specific models only))18
Using the integrated of	camera 18
Using the internet	19
Securing your compu	ter24
Installing device drive	ers26
Using battery and	
AC adapter	

i

Contents

ii

Getting help and service	55
Getting help on the Web	56
Calling the customer support	
center	56
Getting help around the	
world	59
Chapter 7. Safety, Use and Car	е
Chapter 7. Safety, Use and Care Information	
• • •	
Information	. 60
Information Important safety	60 60

Appendix A. Lenovo Limited

Warranty	92
Warranty information	
Lenovo warranty service	
telephone numbers	106
Annendix B. Customer	


Appendix B. Customer Replaceable Units (CRUs) 108

Appendix C. Specifications 109 Specifications 109
Appendix D. Notices 111
Notices 111
Wireless related
information114
TV tuner information 117
Electronic emissions notices 120
WEEE and recycling
statements 127
Turkish statement of
compliance 127
Türkiye EEE Yönetmeliğine
Uygunluk Beyanı 127
EU WEEE Statements 128
Japan Recycling Statements 129
Notice for Users in the
U.S.A
Notice on deleting data from
your hard disk
Trademarks 133
Index 134

Top view



* The illustrations in this manual may differ from the actual product. Please refer to the actual product.

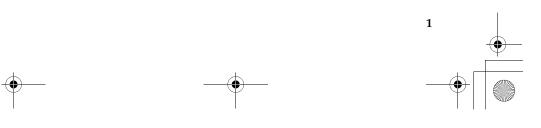

Attention:

- Do NOT open the display panel beyond 127 degree. When closing the display
 panel, be careful NOT to leave pens or any other objects in between the display
 panel and the keyboard. Otherwise, the display panel may be damaged.

Turn up/down or mute the volume with volume buttons.


Built-in array microphone

The built-in microphone (with noise reduction) can be used for video conferencing, voice narration, or simple audio recordings.





2

+ -

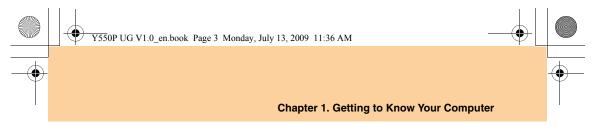


Left-side view

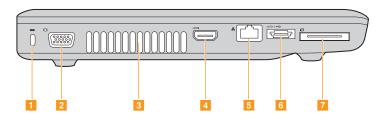


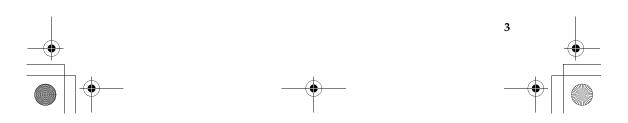

1	Security keyhole
	Your computer comes with a security keyhole. You can purchase a security cable and lock to fit this keyhole.
	Note:
	Before purchasing any security product, verify that it is compatible with this type of security keyhole.
2	VGA port
3	Fan louvers
	Important:
	Make sure that none of the fan louvers are blocked, otherwise, overheating of the computer may occur.
4	HDMI port
5	RJ-45 port
6	eSATA/USB port
7	ExpressCard [®] slot

 

+ -•

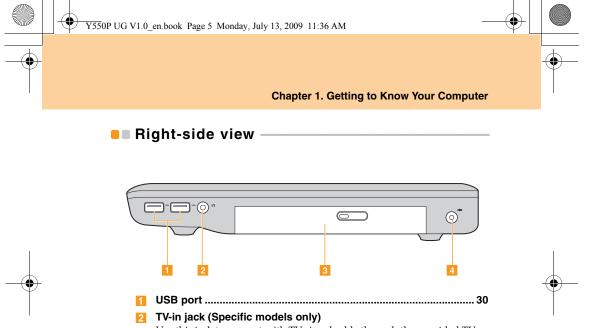

Use this jack to connect with TV signal cable through the provided TV adapter (Analog/digital input supported).

3 Optical drive 16

 
AC power adapter jack

Connect the power adapter here to supply power to the computer and charge the battery pack.


Note:

To prevent damage to the computer and battery pack, use the supplied AC adapter only.

5



Front view -

 

1 Integrated wireless device switch

Use this switch to disable the wireless radio of all the wireless devices on your computer.


2	Card reader socket1	6
3	Microphone jack (external)	9
4	Headphone jack (S/PDIF) (external)	57
5	CIR port1	8
_	CIR port, used for lenovo remote control.	


6 System status indicators



6

 + -

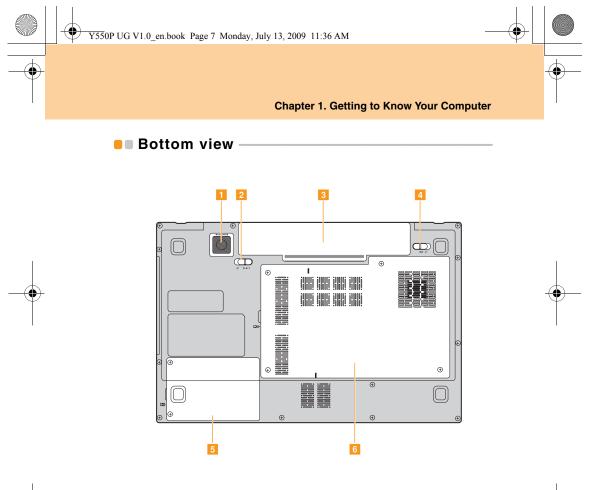



Subwoofer

The multimedia subwoofer features a super bass effect while you are watching movies or enjoying music.

2 Battery latch - spring loaded

The spring-loaded battery latch keeps the battery pack secured in place. When you insert a battery pack, this latch automatically secures the battery in place. To remove the battery, hold this latch in the unlocked position.

3 Battery pack......26

Battery latch - manual

 
The manual battery latch is used to keep the battery pack secured. Move the manual battery latch to the unlocked position to insert or remove the battery pack. Move the manual latch to the locked position after inserting the battery pack.

5 Hard Disk Drive compartment

Central Processing Unit (CPU)/ Memory (DDR 3 RAM)/ Wireless LAN Card/ TV card (Specific models only) compartment


Important:

Do not disassemble or replace any component by yourself! If you do need to, ask a Lenovo authorized service center or dealer to disassemble or replace it.



Using the touchpad

The touch pad consists of a pad 1 and two click buttons below the keyboard. To move the cursor 2 on the screen, slide your fingertip over the pad in the direction in which you want the cursor to move. The functions of the left 3 and right 4 click buttons correspond to those of the left and right mouse buttons on a conventional mouse.

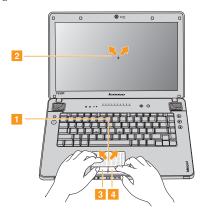

Note:

You can also attach and use a USB mouse through the USB connector. For details, see "Connecting a Universal Serial Bus (USB) device" on page 30.

9

Gestures


The touch pad can recognize some gestures and make actions like zoom in/out, or scroll up/down easily.

Pinch

Use two fingers and make a pinch gesture on the touch pad to zoom out; reverse the gesture to zoom in.

Palm Check

To prevent mis-touch, the touch pad ignores big active area motions, like any movement at the touch pad with your palm, you may set the area size by "Synaptics Pointing Device" in the lower right corner of the desktop.

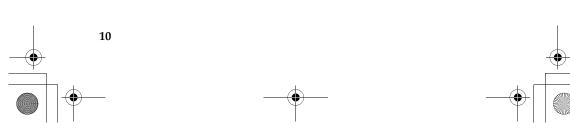

Using the keyboard

Your computer has a numeric keypad and function keys incorporated in the standard keyboard.

Numeric keypad

The keyboard has keys that, when enabled, work as a 10-key numeric keypad.


To enable or disable the numeric keypad, press Fn+F8.



* The illustrations in this manual may differ from the actual product. Please refer to the actual product.

Function key combinations

Through the use of the function keys, you can change operational features instantly. To use this function, press and hold the **Fn** key 1; then press one of the function keys 2.

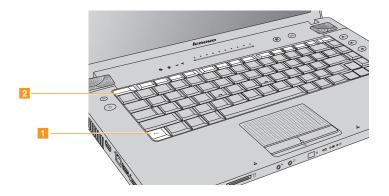



13

The following describes the features of each function key.

Fn + Esc: Turn on/off the integrated camera.

Fn + F1: Put your computer in sleep mode.

Fn + F2: Turn on/off the LCD screen.

Fn + F3: Shift to other connected display devices.

Fn + F4: Open the interface for display resolution settings.

Fn + F5: Open the interface for integrated wireless devices settings (enable/disable).

Fn + F6: Enable/disable the touch pad.

Fn + F8: Enable/disable the numeric keypad.

Fn + F9: Activate the pause function.

Fn + F10: Activate the break function.

Fn + F11: Enable/disable Scroll Lock.

Fn + F12: Turn on/off the insert input.

Fn + PrtSc: System request.


Fn + up/down arrow: Increase/decrease display brightness.

Fn + right/left arrow: Increase/decrease sound volume.

Special keys and buttons

Your computer has several special keys and buttons.

Touch inductive panel and volume buttons

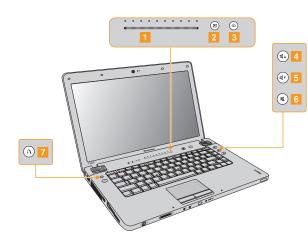



15

Touch inductive panel (1 ~ 3)

1 Lenovo SlideNav bar:

Quick launch customized applications by the slide and release at the Lenovo SlideNav bar when "Lenovo SlideNav" is installed.

- 2 OneKey Theater: Open OneKey Theater to select Normal mode or Movie mode as prefered.
- 3 Open Dolby function setup screen.

Volume buttons (4 ~ 6)

- 4 Volume up
- 5 Volume down
- 6 Mute

OneKey Rescue System button (7)

- When the computer is powered-off, press this button to enter the OneKey Rescue System if Lenovo OneKey Rescue System has been preinstalled.
- In Windows operating system, press this button to start Lenovo OneKey Recovery.

Note:

For details, see "OneKey Rescue System" on page 41.

Using the optical drive

Your computer comes with an optical drive, such as a CD/DVD drive.

Using memory cards

Your computer comes with one Multi-media Card reader socket used to insert a memory card, such as an SD Card, a MultiMedia Card, a Memory Stick, an xD-Picture Card, an SD pro card or a Memory Stick Pro.

