

Accessories


After opening the box, please check to ensure that the following accessories are provided with the monitor

.....

(Option) Pivot Software



User's Guide

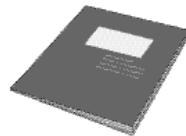

Power Cord



D - Sub Signal Cable



The actual monitor and accessories may appear differently from those shown on the above figure.

Table of Contents

Before Use

| | |
|-------------------------------|---|
| Features | 1 |
| Instructions for Safety | 2 |

How do I Use the Monitor ?

| | |
|---|---|
| How do I Connect the Computer Cables ? | 6 |
| How do I Connect with the IBM computer ? | |
| The Name and Function of Each Individual Part | 7 |
| Front view | |
| Back view | |
| The name and function of each individual part in the screen adjusting block | |
| How to Select and Adjust the OSD (On Screen Display) | 9 |
| To adjust the brightness and contrast of the screen ? | |
| To select / adjust the color of the screen ? | |
| To adjust the up/down/left/right position of the screen ? | |
| To adjust the horizontal size of the screen or focus the phase? | |
| To get information on the current mode ? | |

Information for Your Convenience

| | |
|-----------------------------|----|
| Troubleshooting | 12 |
| Product Specification | 15 |

Please keep the user 's guide in a place where product users can refer to it.

15.1 "LCD Panel Adopted

-Adopted the 15.1 "LCD (Liquid Crystal Display) Panel which allows you efficient use in a small space due to the slim design.

A Dynamic Convenient Design

-Uses a specially manufactured hinge (ATEC System patent) to adjust the screen freely up and down, left to right, and back and forth. This function is provided with thoughtful consideration to the user 's convenience.

Plug & Play Function

-The Plug & Play function is available, freeing the user from having to reboot or set up the system during operation.
-The user does not have to adjust the monitor to computer connection, as optimal screen settings are automatically provided through the DDC (Display Data Channel) system.

Power Consumption Economy Function

- The VESA DPMS (Display Power Management Signaling) function is available to reduce power consumption by automatically switching the computer into the power saving mode if the system doesn't operate for a fixed period of time.

AUDIO Function

- A speaker is embedded so that the user can hear sound without separate speakers.

EMI/EMS

- This equipment has been registered through compatibility tests with electromagnetic waves, and can therefore be used everywhere including residential districts.

OPTION

- Software pivoting to the vertical size of A4 paper is available, making Word work easier.
- USB 4Port can be embedded to use the USB without an external Hub.

Matters that demand special attention are divided into 'Warning' and 'Caution', and are detailed as follows



Warning

In case of the possibility that a serious injury or death may occur during a violation of the instructions.



Caution

In case of the possibility that a slight injury or product damage may occur during a violation of the instructions.

FCC INFORMATION TO THE USER

Changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.

The sign on the product and user's guide instructs as following.

A sign signifies the need for particular attention in order to avert potential danger under certain conditions.



Warning


No one but trained repair engineers may disassemble the monitor. Please contact the appropriate sales agency or customer counsel window for check-ups, adjustment and repair.

A fire or electric shock accident may be caused.



Please note not to allow liquids such as chemicals, water etc to contact the monitor.

A fire or electric shock accident may be caused.

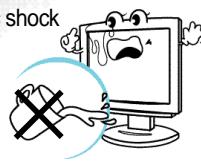


Don't place or drop metals (such as coins, hair pins, or ironware) or flammable items (such as paper, or matches) onto the monitor.

A fire or electric shock accident may be caused.



Don't place the monitor near to heat sources (such as a fireplace), and keep out of the sun.

A fire or electric shock accident may be caused.

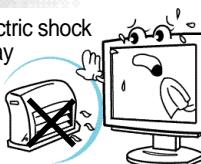

Before Use

2

3

Before Use



Warning


Please be careful to keep the panel from being scratched or damaged when you transport the monitor.

The panel may be damaged, causing a failure.



Please insert the two pins of the plug completely so that the power supply unit can be connected tightly.

Unsafe power connections may cause a fire.

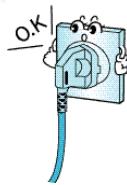

Don't set up the equipment in a humid environment (such as bathroom, rainy or windy area, etc).

Accidents of electric shock, fire or failure may occur.



Please stop using in case of smoke or abnormal odors. Immediately switch off the power, and pull out the power cord from the wall. Contact the service center.

Continuity of use in such a state may cause a fire or electric shock.



Don't sprinkle water directly on any part of the monitor body.

An electric shock or fire accident may occur.



Please keep the power cord from proximity to a heating instrument.

The covering material of the cord may melt, causing a fire or electric shock.






Warning


Never touch the power plug with wet hands.

An electric shock accident may occur.

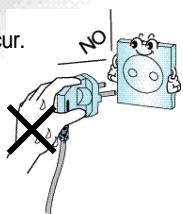


Don't use a power cord or plug that is damaged or has a loose connection.

An electric shock or ignition may be caused.

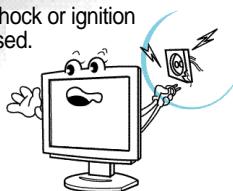

Please set up the monitor at a proper distance (over 10 cm) away from the wall for sufficient ventilation.

A fire may be caused due to an increase in internal temperature.

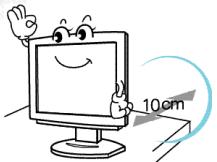

Please grasp the power plug at the base to remove it from the wall, and pull firmly but gently.

If you yank at the cord the wire may be broken, causing ignition or heat generation.



Please note that air-flow holes must not be blocked by a table cloth or curtain.

A fire may be caused due to an increase in internal temperature.



Don't set up the equipment on an unsupported shelf or angled surface, nor on an area subject to serious vibration.

Fall or displacement of the equipment may cause an injury.





Warning

You must switch the power off and pull the power cord out before moving the monitor. You should also check as to whether external connection cords - such as the connection cords between component parts - are all pulled out before the movement.

A damaged cord may cause a fire or electric shock.




Pull the power cord out when the monitor is not used for a long time, or while you are away.

A dust covering may cause an electric shock, electric leakage, or fire by heat generation, ignition, and insulation degradation.



Don't set the monitor in a narrow place with poor ventilation such as a bookcase

A fire may be caused due to an increase in internal temperature.

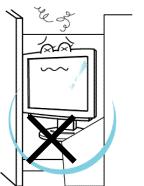

When you clean the panel surface, pull the power cord out first, and wipe the surface with a clean, dry and soft cloth. Don't use a damp cloth.

Such action may be the main cause of an electric shock accident and failure.



Caution

Don't put pressure upon the panel or score the surface with your hands or sharp items (nails, pencils, pens, etc).

Damage or failure of the panel may be caused.



When you move the monitor, take hold of it with both hands setting the panel forward.


If you drop the monitor, contact the service center to check it for a susceptibility to fire or electric shock.



How do I connect the computer cables?

How do I connect with the IBM computer ?

1. Ensure that the computer, monitor and peripheral equipment power is turned off.
2. Connect signal cables with the D-sub signal input connector and the monitor signal input connector respectively.
3. Connect one DC power jack of DC power supply unit to the 12V terminal, and the other to the power cord. Next connect the power cord to the concert.
4. Turn the monitor power on after switching the computer power on..
5. If the message "No Signal" appears, check connections of the signal input cable or connector.
6. Switch the monitor and computer power off at the end of use.

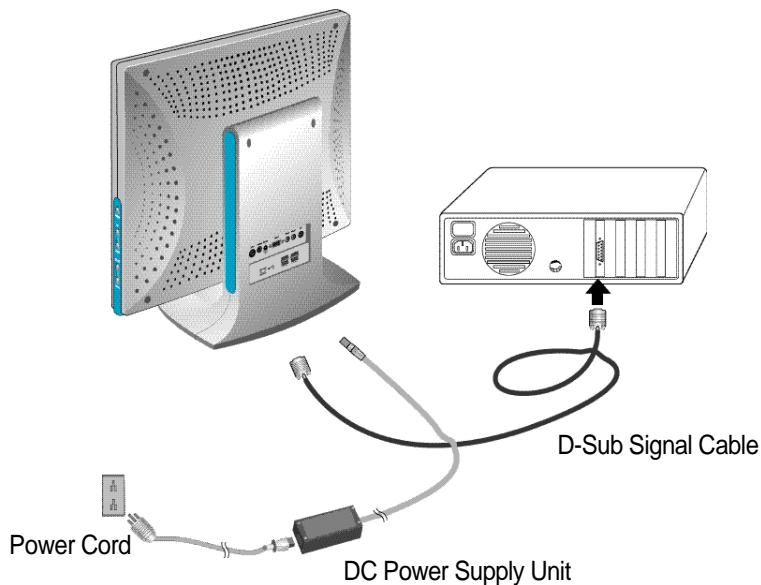

No signal message

If the signal input cable between the monitor and computer isn't correctly connected, this message will be displayed on the screen. For more information, please refer to 'Troubleshooting'.


Attention for the use of 110V

If a consumer, lives in a district where the 220V power supply is unavailable, a 110V adapter can be used. Purchase a standard product rated above 15A and 250V with the mark of "KS" or "Chun" (in Korean) in a sales agency specializing in electric parts. Using a non-standard product may cause an electric shock accident.

How do I use the monitor

The Name and Function of Each Individual Part

Front View

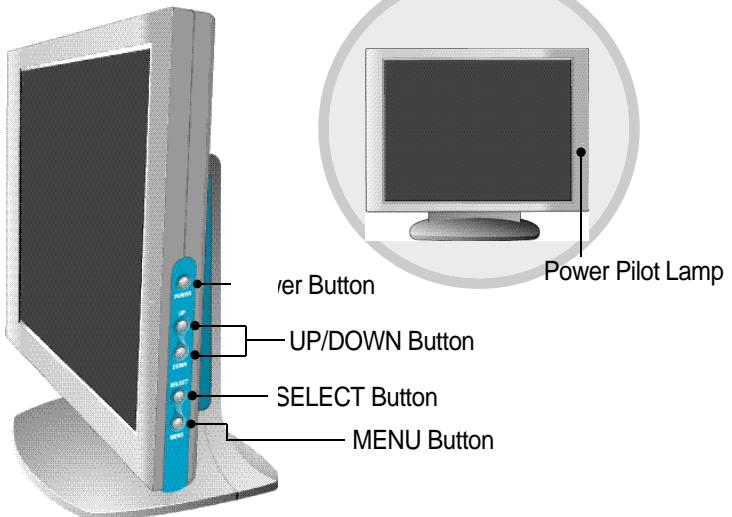


Back View



The Name and Function of Each Individual Part

The Name and Function of Each Individual Part in the Screen Adjusting Block

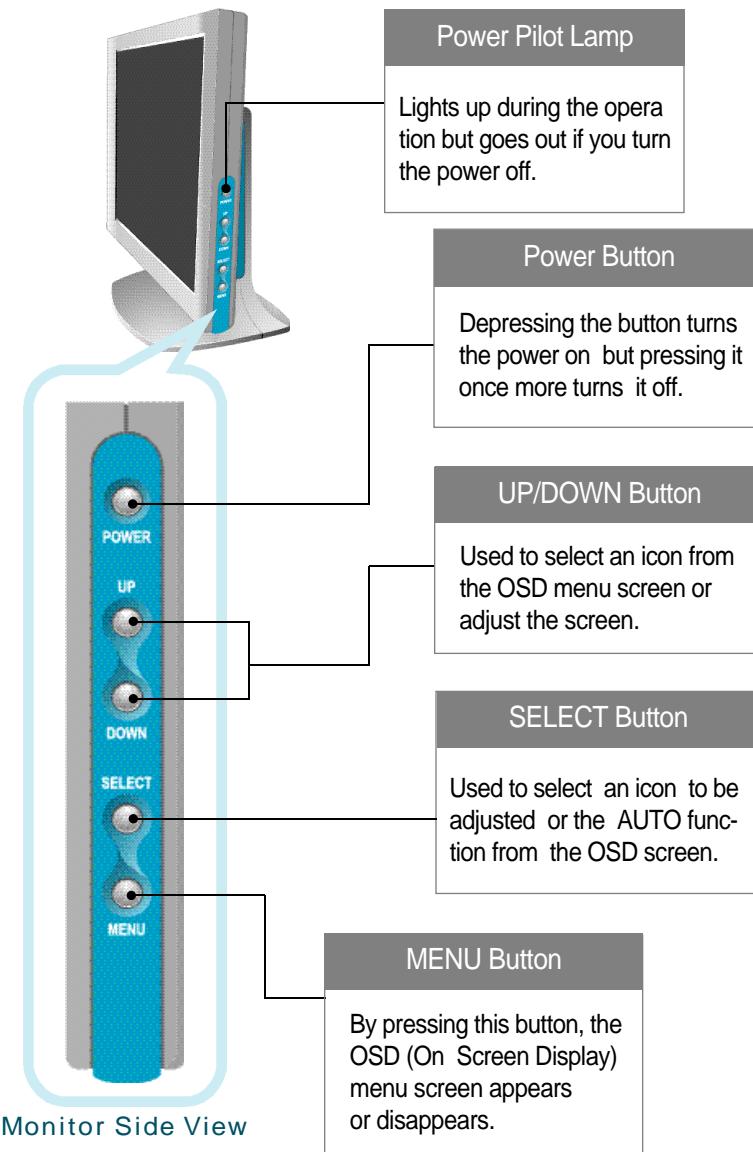

AUTO Function

If you select the SELECT button before using the OSD menu, the screen is automatically adjusted to the optimal display state applicable to the current mode, while the following message appears.

PROCESSING
AUTO CONFIGURATION


If you don't like the auto adjustment, you have to manually adjust the H/V Position, Clock, and Phase of the OSD menus. (For more information, please refer to pages 9 - 11.)

How do I use the monitor

How to Select and Adjust the OSD (On Screen Display) Screen

Use the OSD adjustable buttons on the front of the monitor to set/adjust to the best screen and operating environment.

If you have to adjust the screen, please adhere to the following procedure.

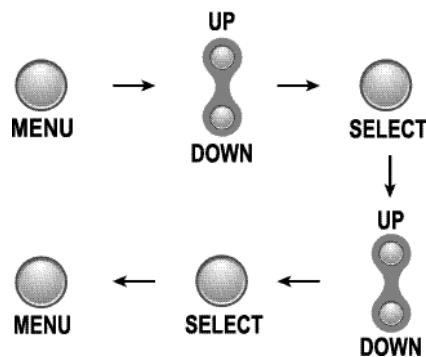

Press the **MENU button** which displays the OSD menu screen.

Select the icon you desire by pressing the **UP/ DOWN button**.

Then press the **SELECT button**.

Adjust the screen with the **UP/DOWN buttons**.

Save the adjustment by pressing the **SELECT button**.

The OSD menu screen disappears after pressing the **MENU button**.

How to Select and Adjust the OSD (On Screen Display)

Descriptions of OSD adjustment and functions

To adjust the brightness and contrast of the screen?




Brightness

Adjusts the brightness of the screen. Pressing the ∇ button darkens the background screen. Pressing the Δ button brightens the background screen.




Contrast

Adjusts the contrast of the screen. Pressing the ∇ button darkens a screen picture. Pressing the Δ button brightens a screen picture.

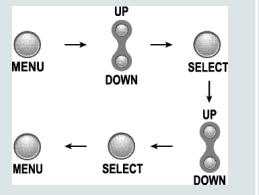

To select/adjust the color of the screen?
(9300K, 6500K, user definition etc)

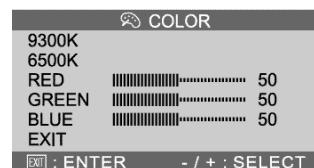

Factory-specified


Select a screen color as desired by selecting one of the two temperature options.
- 9300K: Selects the bluish screen.
- 6500K: Selects the reddish screen.

Red Green Blue

Red, Green, or Blue is optionally variable to select/adjust the color concentration of the background screen.

How do I use the monitor

10

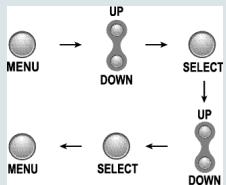

How to Select and Adjust the OSD (On Screen Display)

Descriptions of OSD Adjustment and Functions

To adjust the up/down/left/right position of the screen?



Moves the screen up and down.




Moves the screen left and right.

To adjust the horizontal size of the screen or focus the phase?



Horizontal Size (CLOCK)


Adjusts the horizontal size of the screen by increasing / decreasing the number of pixels. Please adjust the display to the Full Screen size.

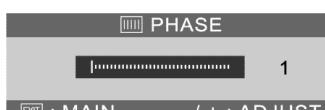

Focus (PHASE)

Brings the phase into focus. This function is used if noise or overlapped letters trouble normal screen functions. You are advised to use the function after adjusting the Horizontal Size (CLOCK).

To get information on the current mode?

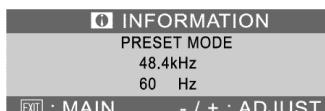

INFORMATION

Informs you of the horizontal / vertical frequencies in the current mode.

Troubleshooting. Please read before notifying our repair officers of a failure

Please check the below particulars before you contact the service center to notify an abnormality of the monitor.

Check these points

- Is the monitor power cord inserted ?
- Is the power turned off ?
- Is the power turned on with the power pilot lamp lit green?
- Is the power turned on with the power pilot lamp lit orange ?
- Is the message " Out Of Range " shown ?



- Is the message " No Signal " shown?



Take these respective actions

- Please connect the power cord correctly to the concent.
- Please press the power button.
- Please adjust the brightness () and contrast () again.
- The monitor is in the power saving mode. Please therefore move the mouse or press any key on the keyboard.
- The frequency of PC (Video Card) is out of range (i.e., horizontal: 31-60KHz, vertical: 56-75KHz). Please therefore see [Product Specification] in this guide to reset it in conformity with monitor specifications.
- The signal cable isn't connected between PC and monitor, or is missing. Please check and connect it properly.

This symptom can be discovered


The screen doesn't show anything.



Information for Your Convenience

**This symptom can
be discovered**

The color of the screen
is not normal

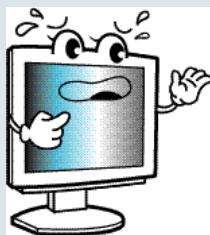

Check these points

- Has a discoloration (into 16 colors) of the screen occurred?
- Is the screen color unstable or does it seem to be a single color?
- Do you see a spot on the screen?

Take these actions

- Set the number of colors to more than 256 colors. On the Windows 95/98, perform the following process
[Control Panel] -> [Display] -> [Setting] -> [Color Table] -> [256 Colors] -> [OK]
- Check the connection of the signal cable, and correct it if any abnormality is found. If you selected "Composite" for the monitor input signal during the PC operation, the screen may be seem abnormal. In such a case, you are recommended to select "Separate" which is the default option.
- You may see a few spots (in red, green, white, and black) on the screen during the operation. Occurrence of such a phenomenon is not a failure but a characteristic of the LCD panel, and therefore has no relation to the performance of the monitor.

**Troubleshooting. Please read before
notifying our repair officers of a failure**

Troubleshooting. Please read before notifying our repair officers of a failure

Check these points

Take these actions

Is the positional adjustment made correctly?

Selecting the SELECT button automatically adjusts the screen in the best state applicable to the current mode.

If you are not satisfied with the auto adjustment, you can directly adjust the H Position (Horizontal Position), V Position (Vertical Position), and Clock (Horizontal Size) of the OSD menus.

Is the phase adjustment made properly?

Selecting the SELECT button automatically adjusts the screen in to the optimal state applicable to the current mode.


If you are not satisfied with the auto adjustment, you may manually adjust the Phase (Focus) of the OSD menus.

Is the screen set in the best state?


While you are using this product in the mode of 1024X768 and 60Hz, the best condition of the screen is available. In the mode of VGA(640x480) or SVGA(800x600), the outline of a letter may be seen dimly or unevenly.

These symptoms can be discovered

The screen is under a bias toward one side, or is not centrally positioned.

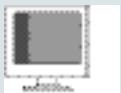

A faint letter is shown, or the phase is out of focus. Noise is also generated horizontally.

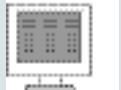

Information for Your Convenience

Product Specification

The details of product specification can be changed without notice to improve the product.

| | | |
|-----------------------------|--|--|
| LCD Panel | panel type screen size pixel size contrast color resolution brightness | a-Si active matrix TFT-LCD 15.1 "(38cm) diagonal 0.3mm x 0.3mm 300:1(Typical) 8-bit(16,777,216 Colors) XGA 1024 x 768 250cd/m ² (Typical) |
| Picture Signal | horizontal frequency vertical frequency view angle input picture signal | 31.5 - 60kHz 56 - 75Hz U/D: ± 60 °, R/L: ± 75 ° Analog RGB |
| AUDIO | output | 1W x 2 on the stand cover |
| Input Connector | input terminal user 's control | 15Pin D-Sub Auto Configuration, Brightness, Contrast, H-Position, V-Position, Color RGB, Clock Adjustment, Phase Adjustment |
| Dimension and Weight | body size(WxDxH) weight | 387 x 215 x 355mm 7.2kg(Unit), 8.3kg(Packed) |
| Power | power managing system power consumption input power | VESA DPMS standard <30 Watt AC 110-220V, 50-60Hz |
| Options | USB 4Port, Pivot Software | |

Product Specification

Factory-specified Mode

| | Factory-specified Mode | Horizontal Frequency(kHz) | Vertical Frequency(Hz) |
|----|------------------------|---------------------------|------------------------|
| 1 | VGA | 640 x 350 | 31.47 |
| 2 | MAC | 640 x 480 | 35.00 |
| 3 | VESA | 640 x 480 | 31.47 |
| 4 | VESA | 640 x 480 | 37.86 |
| 5 | VESA | 640 x 480 | 37.50 |
| 6 | VGA | 720 x 400 | 31.47 |
| 7 | VESA | 800 x 600 | 35.16 |
| 8 | VESA | 800 x 600 | 37.88 |
| 9 | VESA | 800 x 600 | 48.68 |
| 10 | VESA | 800 x 600 | 46.88 |
| 11 | MAC | 832 x 624 | 49.73 |
| 12 | VESA | 1024 x 768 | 48.36 |
| 13 | VESA | 1024 x 768 | 56.48 |
| 14 | VESA | 1024 x 768 | 60.02 |

Information for Your Convenience