



# **GENESIS**

# **GT-7240**

ANDROID 4.0

# **USER MANUAL**

---

## TABLE OF CONTENTS

<b>TABLE OF CONTENTS.....</b>	<b>2</b>
<b>1 OUTLOOK DESCRIPTION.....</b>	<b>4</b>
<b>2 POWER BUTTON USAGE.....</b>	<b>5</b>
<b>3 TOUCH-SCREEN NAVIGATION.....</b>	<b>5</b>
<b>4 External Memory.....</b>	<b>6</b>
<b>5 USING MICRO-SD CARD.....</b>	<b>6</b>
<b>6 GETTING STARTED.....</b>	<b>6</b>
Charge the device .....	6
Turn the device on .....	7
Wi-Fi Network Setup.....	7
HDMI video play.....	7
USB device mode options .....	7
<b>7 DESKTOP .....</b>	<b>8</b>
<b>8 SCREEN LOCK.....</b>	<b>9</b>
<b>9 PRE-LOADED APPLICATIONS.....</b>	<b>10</b>
<b>10 STATUS AND NOTIFICATION AREA .....</b>	<b>11</b>
<b>11 APPLICATION MANAGEMENT.....</b>	<b>12</b>
Install Android Applications.....	12
Download Android Applications direct from a Website.....	13
Uninstalling Android Applications.....	13
<b>12 WEATHER.....</b>	<b>13</b>
<b>13 CLOCK.....</b>	<b>14</b>
Alarm .....	14
<b>14 PLAY STORE .....</b>	<b>15</b>
Download Applications.....	15
Play Store Function Menu.....	15
<b>15 BROWSER .....</b>	<b>16</b>
<b>16 CALENDAR.....</b>	<b>16</b>
Add Event.....	16
<b>17 CAMERA .....</b>	<b>17</b>
Take Pictures.....	17
Take Videos.....	17
Single-motion Panorama.....	18
<b>18 CALCULATOR .....</b>	<b>18</b>
<b>19 MY RECORDER .....</b>	<b>18</b>
<b>20 EMAIL.....</b>	<b>19</b>
Add Email accounts .....	19
Email Inbox .....	19


<b>Edit Email Accounts .....</b>	20
<b>Delete Email Accounts.....</b>	20
<b>21 FILE BROWSER .....</b>	21
<b>Copy Media between Computer and Tablet.....</b>	21
<b>Connected to the local area network shared folders.....</b>	22
<b>Delete files .....</b>	22
<b>22 MY MUSIC .....</b>	22
<b>Play Music.....</b>	22
<b>Create Music Widget .....</b>	23
<b>The Operation with Music and Playlist.....</b>	23
<b>Sort by title or date added .....</b>	24
<b>23 MY VIDEO .....</b>	24
<b>Play Video .....</b>	24
<b>Create Video Widget.....</b>	24
<b>The Operation with Video.....</b>	24
<b>The Operation with Playlist .....</b>	25
<b>24 MY PHOTO.....</b>	25
<b>The operation with picture list.....</b>	25
<b>Slide show and settings .....</b>	25
<b>Doodle .....</b>	26
<b>Create Photo Widget .....</b>	26
<b>25 Gallery .....</b>	26
<b>The operation with photo and video list .....</b>	26
<b>26 SCREEN CAPTURE .....</b>	27
<b>27 TASK MANAGER .....</b>	27
<b>Stopping Applications .....</b>	27
<b>Uninstall Applications .....</b>	28
<b>Install Applications .....</b>	28
<b>28 WI-FI .....</b>	28
<b>29 3G NETWORK .....</b>	28
<b>30 GPS.....</b>	29
<b>31 PPoE SETTINGS.....</b>	29
<b>32 ETHERNET .....</b>	29
<b>33 SETTINGS .....</b>	30
<b>FREQUENTLY ASKED QUESTIONS .....</b>	33
<b>BATTERY MANAGEMENT.....</b>	34
<b>Charge battery .....</b>	34
<b>IMPORTANT SAFETY PRECAUTIONS .....</b>	34
<b>Appendix : The optional parts and models .....</b>	35

# 1 OUTLOOK DESCRIPTION

Front:



Right side:

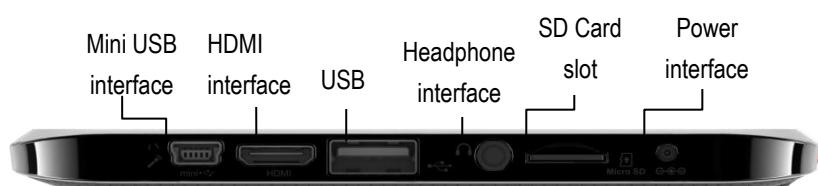

**Top:**



## 2 POWER BUTTON USAGE

**Turn On:** Press the power button and hold for 2 seconds.

**Turn Off:** Press the power button and hold for 2 seconds → Tap **Power off** → Tap **OK**.

**Reboot:** Press the power button and hold for 2 seconds → Tap **reboot**.

**Quickly Hibernate/wake-up:** Press the power button and hold for 2 seconds → Tap **Hibernate** enable the device to hibernate.

**Airplane mode:** Press the power button and hold for 2 seconds → Tap **Airplane mode**.

**Silent mode:** Press the power button and hold for 2 seconds → Tap .

**Vibrate mode:** Press the power button and hold for 2 seconds → Tap .

**Normal mode:** Press the power button and hold for 2 seconds → Tap .

**Force Off:** If device does not respond, press and hold the power button for 5 seconds.

**(Warning: Force off could lead to unpredictable system errors!)**

**Reset:** Press the reset button to reset the device. It will clear the all data, please be careful with the function. (**Note:** you can't restart your device after the current reset function, your device can only be turned off. You need to press the power button to restart the device after reset.)

---

## 3 TOUCH-SCREEN NAVIGATION

The touch-screen allows quick, easy and convenient navigation for all applications.

Refer to the following method to operate the touch screen by the finger pulp:

**Tap:** Quick tap & release on an item on the screen.

**Touch & hold:** Touch and hold in place approx 2 seconds, and then release to display an options window.

**Finger slide:** Touch & slide your finger across the screen and then release.

**Two points to zoom in or out:** Press and hold any two points relative or opposite direction to drag in desktop, video play interface, picture view interface and so on .it will zoom in or out the interface.

☆ To avoid scratching or crushing, do not place objects on the touch screen surface.

---

## 4 External Memory

### Insert External Memory

Insert your external memory into the device via USB host transfer cable. When ready for use, enter into the file browser, switch to the USB folder to view it.

### Remove External Memory

Close all applications or documents which have been opened on the external

memory. Tap  → **Settings** → **Storage** → **USB storage** → **Unmount this storage device**. When it displays **mount this device**, you can unplug the external memory.

☆ *Don't insert or remove the external memory repeatedly in a short time, as this may cause damage to the external memory.*

---

## 5 USING MICRO-SD CARD

☆ *The device supports a maximum 32GB Micro SD card.*

Insert your card into the Micro SD slot until it clicks into place. It's OK.

### Remove Micro SD Card

Close all applications or documents which have been opened on the card. Tap

 → **Settings** → **Storage** → **SD card** → **Unmount this storage device**.

When it displayed **Mount this device** and then press the card lightly; it is partially ejected allowing you to pull the card out.

☆ *Don't insert and remove the U-disk repeatedly in a short time, as this may cause damage to the card.*

☆ *We recommend using major brands of memory cards to avoid incompatibility.*

---

## 6 GETTING STARTED

### Charge the device

★ It is not recommended to use the device while charging.

Plug the power adapter into an electrical wall outlet, and then connect to the device to fully charge the battery before use (A full charge takes about 6 hours in the off status).

### Turn the device on

Press the power button briefly.

### Wi-Fi Network Setup

Since many features require a Wi-Fi connection, we recommend you set up your Wi-Fi network now.



1. Tap → **Settings**.

2. Slide **Wi-Fi** switch to turn on.

The device automatically scans and lists all local Wi-Fi Network found.

A lock indicates secure **Wi-Fi** networks that require input password to connect.

3. Tap the desired network to which you want to connect → enter the **Network Password** if applicable → tap **Connect**.



4. Tap to return to the Desktop screen.

★ If your Wi-Fi network is set as hidden, it won't be found by the auto scan. Tap **Add Wi-Fi network** and follow the prompts to add your network.

### HDMI video play

This device support through the Mini HDMI connected with TV, it makes TV and device displayed synchronic. For using this feature, insert the Mini HDMI cable into the right side of the device interface to connect with TV.

### TV screen adjustment

After connecting HDMI, enter into **Settings** → **Display** → **TV screen adjustment**, by adjusting the drag strips in the interface to change the width and height of the TV side.

★ After connecting HDMI, you can press the power button to turn off the screen, in order to get longer battery life.

### USB device mode options

Before using this feature please connect to PC via the Mini USB cable.

### USB debugging

Debug mode used to debug program for developers. ADB driver needs to be installed before using this mode. Installation method as follows:

(1) First switch on the device to **Install Driver** mode, And then find the "CD driver"(such as F:)on your PC, Use the resource manager to open the CD drive , then copy all files in the folder(\adb\_driver) to your PC;

(2) And then switch to **USB debugging** mode on the device, If the PC-side prompts to install the driver, select manual installation, and specify the drive path to the location where you save the ADB driver.

### Mass Storage

**Mass Storage** mode is used to synchronize transmits data and the users can copy, paste or delete the files in the device. The first time you use this mode on your PC, you need to install the driver. Installation method as follows:

Firstly, switch to **Install Driver** mode on the device, and then your PC will automatically pop-up driver installation interface, users only need follow the prompts, and reboot the system after the installation completed. (If not, please visit the official Microsoft website and download Media Player 11 upgrade package)

### Install Driver

Install driver mode is used to install the driver for USB debugging and mass storage mode, and mass storage mode driver only for Windows XP, Windows 7 supports default, you don't need to install.

☆ You can also refer to the *readme.txt* in the "CD drive".

## 7 DESKTOP



1. Back.
2. Home.
3. Recent Apps.
4. Menu.
5. Current time.

6. Screen capture.
7. Volume.
8. Wireless network
9. Battery Status.
10. Google search.
11. Voice search.
12. Add Widgets/Apps shortcuts or setting wallpapers and more.
13. Tap to view the applications screen

Tapping the add icon  on the desktop or operating **two points to zoom in** on the desktop can make many personalized operation, such as, add widgets, application shortcuts, set wallpaper, add bookmarks, email accounts and set up the shortcut.


- ☆ Tap on any application icon to launch it.
- ☆ Touch, hold and then slide icons to reposition them on the screen.
- ☆ Touch, hold and slide icons onto  to remove them from the **Desktop** screen.

---

## 8 SCREEN LOCK

Can be set to automatically lock screen or quickly press the power button to manually lock screen. The system provides four lock screen styles for users. You can enter **Settings → Security → Lock Screen** to switch.

Lock screen displays the following:

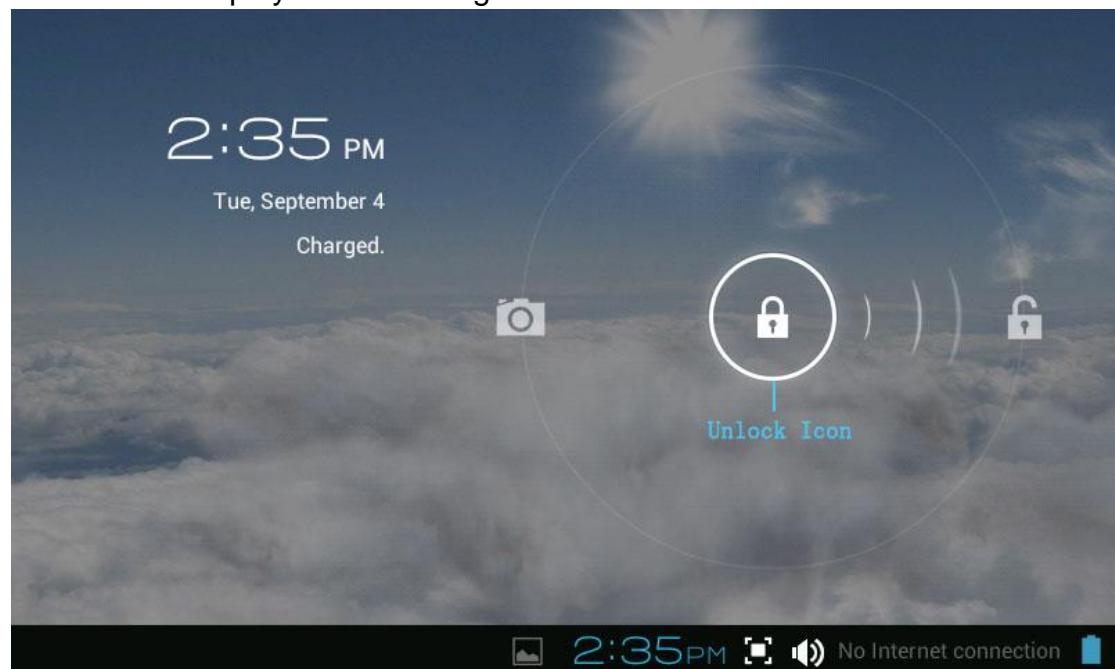

Tap the unlock icon and drop it to the right and out of the circle to unlock.

---

## 9 PRE-LOADED APPLICATIONS

	<b>Weather</b>	Set up the degree of temperature, weather auto-refresh rate, add city and view the city's weather.
	<b>Clock</b>	It can display the time and set the alarm.
	<b>Play Store</b>	Downloaded applications quickly & easily.
	<b>Browser</b>	Access internet.
	<b>Calendar</b>	Calendar.
	<b>Camera</b>	Take normal photos, panoramic photos and take video.
	<b>Calculator</b>	Do calculation.
	<b>Email</b>	Send/Receive email using your existing email addresses.
	<b>File Browser</b>	File manager application for viewing and managing files and apps. Use to install Android apps, and to backup files to your SD card.
	<b>My Music</b>	Play and manage audio files.
	<b>My Video</b>	Play and manage video files.
	<b>My Photo</b>	View and manage photo files.
	<b>My Recorder</b>	Voice record.

	<b>Screen Capture</b>	Capture image of the screen.
	<b>Task Manager</b>	Application manager for managing processes.
	<b>Voice search</b>	Voice search.
	<b>Flash player settings</b>	Flash player settings.
	<b>Downloads</b>	View the downloads and the download progress.
	<b>Gallery</b>	Play, view, and manage video and photo files.
	<b>Search</b>	Local search and online search.
	<b>Settings</b>	Multiple settings for personalizing and enhancing your Device.
	<b>Gravity Calibration Utility</b>	Gravity calibration and reset calibration.

- ★ To move an icon to the Desktop screen, touch & hold the icon, and then release it when it appears on the Desktop screen, or click  icon , Then click on the icon which you want to add to desktop in the App shortcuts below this interface , the icon will automatically move to the desktop.
- ★ Touch, hold and then slide icons to reposition them on the screen.
- ★ Touch, hold and slide icons onto  to remove them from the Desktop screen.

## 10 STATUS AND NOTIFICATION AREA

On the **Desktop** screen, click the icons which in the state bar to view more state information and events.



<b>Airplane mode</b>	Switch airplane mode.
<b>Wi-Fi</b>	Access to Wi-Fi settings interface.
<b>Auto-rotate screen</b>	Auto-rotate switch. After opening, and the screen will automatically rotating screen with gravity induction.
<b>Brightness</b>	Setting screen brightness.
<b>Notifications</b>	Open or close the notification.
<b>Settings</b>	Access to settings.

## 11 APPLICATION MANAGEMENT

### Install Android Applications

★ There are many interesting and free Android applications that can be found on the web. Such as launch your web browser and do a search for “Android applications”.

Purchased or free Android applications that you have downloaded to your

computer can be installed quickly & easily on your Tablet using the  **File Browser or task manager** application.

1. Copy the **.apk** files that you want to install onto a SD card or USB device → insert or connect to your Device.
2. Tap the  **File Browser** application icon.
3. Tap **SD** or **USB** and locate the folder in which the **.apk** application files were saved.
4. Tap on a **.apk** file → **Install**.  
The application is installed and the application icon is added to the **Applications** screen.
5. Tap **Open** to launch the application now, or tap **Done** to return to the **File Browser** screen.

## Download Android Applications direct from a Website

You can download Android applications directly from websites, and then quickly and easily install them on your device.

1. Tap the  **browser** application icon to launch the internet.
2. Enter the desired website URL, and tap the **download** link for the application you want to install on your device.
3. After the download is completed, tap  → **Downloads**. Open the applications from app list.

## Uninstalling Android Applications

You can also quickly and easily uninstall the Android applications that you have installed.

1. Tap  → **Settings** → **Apps** → **All**.
2. Tap the application you want to uninstall → **Uninstall**.
3. Tap **OK** to confirm the Uninstall.



## 12 WEATHER

Tap the  **Weather** application icon.

### General setting

You can set Temperature Unit(°C), Update frequency .

### About

View software version number and relevant legal information.

### Add city

You can add city to **Weather** and view the city's weather information.

### Select city

In the list of cities, click the city to view the weather information. After selected

the city, tap  delete the city, tap  refresh the weather information.

You can make the weather displayed on the **Desktop** through adding widget.

The way is: tap  → **Widgets** → **Weather Widget**.



## 13 CLOCK

 


Tap the  **Clock** application icon. You can see the time and date.

### Alarm

You can use your device as an alarm clock by setting multiple alarms.

#### Add Alarm



1. Tap the  **Clock** application icon.



2. Tap  **Set alarm** → **Add alarm**.

3. Set up your alarm as desired.

4. Tap **OK**.

5. Selected the alarm clock.

#### Shut Off Alarm Alert

When a scheduled alarm is activated, a pop-up window with the alarm title appears.

Tap **Snooze** if you want to be reminded again in 10 minutes.

 
Tap **Dismiss** to cancel the alert.

#### Turn Alarm on

1. In the Alarm list, find the desire alarm.



2. Click the  on the left.



3. After the  change to , tap **Done**.

#### Edit Alarm



1. Tap the  **Clock** application icon → **Click** .

 
2. Tap on the alarm you want to edit → make desired edits.

3. After editing, tap **OK**.

## Delete Alarm

1. Tap the  **Clock** application icon → **Click** .
2. Tap on the alarm you want to delete.
3. Tap **Delete** → **OK**. Tap **Done**.

Tap  to return to the **Desktop** screen.



## 14 PLAY STORE

The Play Store has many applications that you can quickly and easily download to your Tablet.

### Download Applications



1. Tap the  **Play Store** application icon.  
★ *The first time, it will prompt “Existing” and “New” options. If you have not yet registered an account, tap **New**. Otherwise, tap **Existing** and enter your login information and then tap **Sign in**. Tap **Continue** and it prompts Google Play Terms of Service. Tap **Accept** to enter **Play Store**.*
2. You can select applications from the default **Featured** group, by **Categories**, **Top** (latest, hottest, random), or search by name.
3. Tap on an application → **Download** → **Accept & download**.
4. After the app is downloaded, tap **Install**.
5. Tap **Open** to launch now, or **Done** to return to the **Play Store** screen.

### History

After downloading apps, tap on **History** to manage the installed applications. You can add and/or view comments from other users, launch apps, and uninstall them.

### Play Store Function Menu



Tap  to display the Play Store Function Menu.

### Profile

Tap to access your profile information. You can Change Password, Change Email and Save Password. Tap **Logout** on the top right corner of **Profile** to exit your account.

### About


Display **Play Store** version and support information.




## 15 BROWSER

Users can connect to the Internet through browser.

Click the browser icon on the Desktop , and then you can open the Web browser.

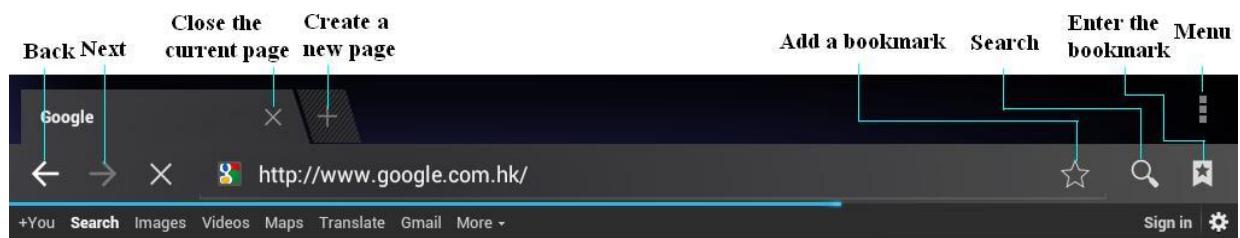

 Google.com.hk offered in: 中文 (繁體) 中文(简体)



## 16 CALENDAR

Tap the  **Calendar** application icon.

For the first time using the **Calendar**, you need to add an Exchange account. Enter account email address and password. Enter the system **Settings** → **Account & sync** → **Add account**. According to the prompts complete the setting. After then you can use the calendar. Only to view the calendar need not to add Exchange account.

**Add Event**

1. On the **Calendar** screen, tap on the date to which you want to add an event.

2. Tap on the event time → tap .

3. In each field, enter the details of the related activities.

4. Tap **Done**.

Click the date time in the upper left to choose the calendar you want, such as DAY, WEEK, MONTH and AGENDA display mode.

★ *Dates with gray bars indicate scheduled events.*



## 17 CAMERA



Tap the  Camera application icon.

### Take Pictures

1. Tap  switch to video, and you can take picture.

2. Tap  take picture.

3. The picture will be saved.



4. Tap the picture thumbnail  to enter **My Photo** to scan the picture.

5. Press  to the **Camera**.

6. Tap  to exit the **Camera** and back to the **Desktop**.

### Take Videos

1. Tap  switch to video, and you can take videos.

2. Tap  to begin and tap  to stop.

3. The video will be saved.



4. Tap the video thumbnail  to play the video.

5. Press  to the **Camera**.

6. Tap  to exit the **Camera** and back to the **Desktop**.

## Single-motion Panorama

For capturing larger scenes, tap  icon and switch to single-motion panorama mode. In this mode, the user starts an exposure and then slowly turns the Camera to encompass as wide a perspective as needed. The Camera assembles the full range of continuous imagery into a single panoramic photo.

**Note:** You can tap  on the top left of the interface to choose the files are stored in the ROM, SD card or USB storage.



## 18 CALCULATOR

1. Tap the  Calculator application icon.
2. Tap the numbers and sign of operation to do the calculation.
3. Tap **C** to clear all the calculated result.
4. Tap  to exit the **Calculator** and back to the **Desktop**.



## 19 MY RECORDER

1. Tap the  recorder icon.
2. Tap the  record icon to start recording.
3. Tap the  record icon to stop record.
4. Tap the  play button to play the voice of recording.
5. Tap  and it prompts ARE YOU SURE TO QUIT, click OK to exit **my recorder**.



## 20 EMAIL

★ POP3, SMTP and Exchange accounts are supported.

### Add Email accounts

You can enter one or more personal email addresses that you would like to access through your Tablet.



1. Tap the  **Email** application icon.
2. On the **Account setup** screen, Tap in the **Email address** entry field → enter your email address.
3. Tap in the **Password** entry field → enter your email password.
4. Tap **Next**.
5. **Manual Setup (optional):** The server settings are automatically populated based on your email account provider (i.e., *gmail.com*, etc). However, if you need to change the server settings tap **Manual Setup** and make necessary changes.
6. According to the selected mailbox server, enter or select the parameter and server type ,and then Tap **Next**.
7. Optional: Enter a name for the account.
8. Enter name for outgoing message → tap Done.

★ *After setup, if you are unable to connect to a free email account, check with your email provider to make sure their servers support free accounts on Post Office Protocol (POP) or Simple Mail Transfer Protocol (SMTP).*

### Email Inbox



 
 
1. Tap the  **Email** application icon.
2. If you set up only one email account, it opens immediately. If you set up multiple accounts, they are listed in the **Accounts** screen.
3. Tap on the desired email account → tap **Inbox**.

### Open Email Message

1. On the **Inbox** screen, tap on an email to open it.
2. For attachments, tap **Open** to launch appropriate application, or tap **Save** to save attachment to a SD card.
3. To replay, tap  **Reply** or  **Reply all**.
  - a. Tap in the Compose Mail entry field to enter your reply message.
  - b. Tap **Send** to send immediately, **Save as draft** to save without send or **Discard** to discard without saving or sending.

4. To delete the email immediately, tap **Delete**.

### Compose New Email Message

1. On the **Inbox** screen, tap .
2. Enter the e-mail address in the recipient field. If you want to add Cc or Bcc recipients, tap  → , and then enter the recipient's email address.
3. Tap in the **Subject** entry field to enter your desired subject title.
4. Tap in the **Compose Mail** area to enter your personal message.
5. If desired, tap  →  to attach a file.
6. When ready to send the email, tap .

### Edit Email Accounts

1. Tap the  **Email** application icon.
2. On the **Inbox** screen, tap  → **settings**.
3. Set your desired preferences to customize your email account.
4. Tap  to return to the **Inbox** screen.

### Delete Email Accounts

★ If you have multiple accounts, and you delete the account designated as the default account, the next email listed is automatically set as the default.

1. Tap the  **Email** application icon.
2. On the **Inbox** screen, tap  → **Settings**.
3. Click the account you want to delete.
4. In the pop-up **Account options** window, tap **Delete**.
5. Tap **OK** to confirm the deletion.

### Set Default Email Account

You must always have one account designated as the default account, so if you have multiple email accounts, you can select any one as the default.

1. Tap the  **Email** application icon.
2. On the **Inbox** screen, tap  → **Settings**.
3. Tap the desire account.
4. In the right settings list, tap **Default Account** to select it.

If you delete the account that was designated as the default account, the next email listed is automatically designated as the default.



## 21 FILE BROWSER



Tap the **File Browser** application icon to view the files on all storage devices (*Internal memory, SD card, USB device*), and to quickly & easily install Android application on your Tablet.

Use the icons across the top of the screen as follows:



Internal Flash (ROM)



SD Card



USB Storage



Paste



Back to the previous folder



Switch folder display mode.



Menu

### Copy Media between Computer and Tablet

You can use the File Browser to copy files between an external storage devices and your computer. You can first copy the desired files onto a SD card or USB device.

- ★ *The internal device storage is titled “ROM”, a memory card “SD”, and a USB storage device is titled “USB”.*
- ★ *The instructions below are for copying from a SD card or USB storage device into the device. You can use the same method to copy from the device to a SD card or USB storage device, and then connect the storage device to your computer to transfer the files into the desired folder on your computer.*

1. Tap **GoTo** on the top of the left side of the screen, select **SD** or **USB** to display the contents of your storage device.
2. Tap and hold a folder/file and enter into the multi-select mode, select the folder/file as desire → tap **Copy**.

3. Tap **GoTo**, select **ROM** Internal Memory → tap on the folder into which you want to copy the file → tap .

### Connected to the local area network shared folders

You can view all of the LAN shared folders.

1. Connect to LAN.
2. Tap  **Net share** → **Add new sharing point** → **Choose the mode used of sharing** → **Using the folders shared by NFS**
3. After connecting successfully, enter **network sharing settings** and open the list of shared folder directly.

### Delete files

Tap and hold a folder/file and enter into the multi-select mode, select the folder/file as desired → tap **Delete** → **OK** to confirm the deletion. → tap **Delete** → Tap **OK** to confirm the deletion.



## 22 MY MUSIC


★ *Audio file formats supported: MP2, MP3, WAV, AAC, WMA.*

### Play Music

1. Tap the  **My Music** application icon.
2. Select an audio file from All/Albums/Artists/Directories/My Favorites/User Defined Playlists to play it.
3. To stop the music, tap the **Pause**  icon.
4. When you playing the music you can tap  or  return to the previous screen.



Click  switch to the currently playing interface, It is shown as follows:

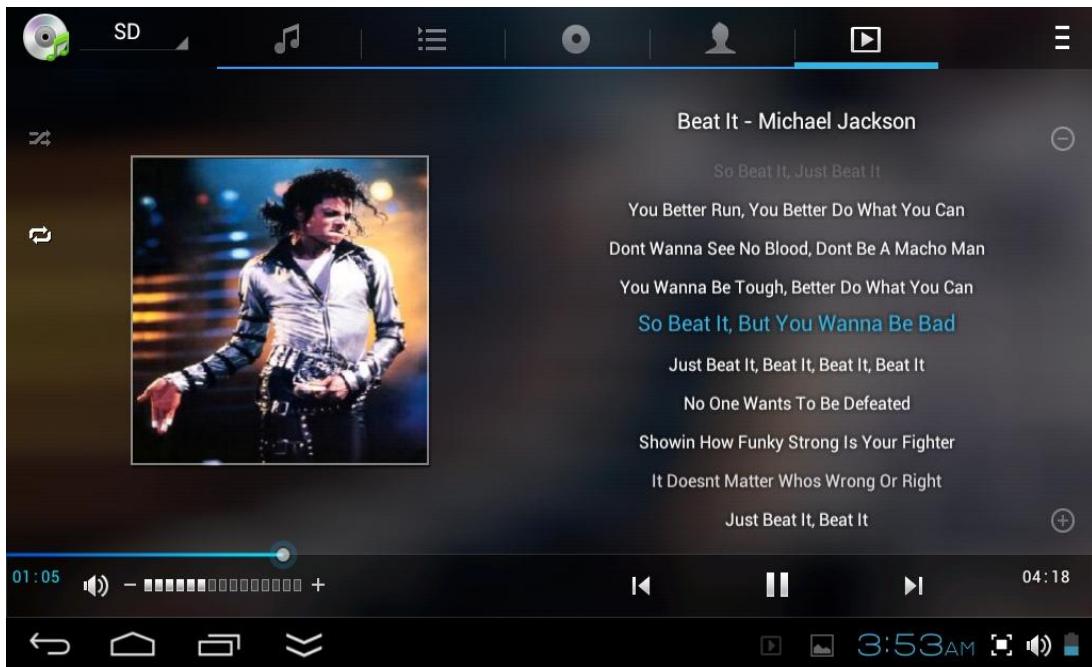

At this interface, you can do: view /download the lyrics, display album photo or spectrum, play / pause, switch to the previous / next, loop and random operation etc.

### Create Music Widget

Through the Music Widget can be quickly play the music.

On the desktop tap icon, In the pop-up list select **Widgets** → Select **Music Widget**.

### The Operation with Music and Playlist

#### Add playlist

1. Enter Play list interface → click .
2. Input the playlist name.
3. Tap **Save**.

#### Rename or Delete playlist

Switch to **display mode**, Tap the playlist → tap → Enter a new name in the dialog box, and click **Save**. If you want delete the playlist, click → click **save**.

#### Add music

1. In the **all song, album, and artist** list, Tap the music and hold for switch to multi-select mode.
2. Select the music which you want to add to the list (if you don't want to add, tap it again to cancel).

3. Tap **Add to playlist**, and then select a playlist.

#### **Delete music**

Tap and hold on the music you want to delete → tap **Delete**.

#### **Sort by title or date added**

In the all song interface, on the upper right click the , in the pop-up list select **sort by title**, and then click the alphabetical of the right hand, the interface will quickly jump to the songs match the first letter (including the first letter of the pinyin) in the alphabetical list. If you select **Sort by date added**, all songs will be sorted by add date.



## **23 MY VIDEO**

★ *Video file formats supported: MPEG1/2/4, H263, H264 VC1, RealVideo, MotionJPEG. The largest video format is supported 1080P(1920×1080) resolution.*

#### **Play Video**

1. Tap the  **My Video** application icon.
2. Select the video from ROM, SD card or USB.
3. Tap screen and click the related icon to adjust the video, (including volume, pause/play, brightness, track, subtitle, and display scale).
4. Tap **Back button** or  to return to the **My Video** screen.

#### **Create Video Widget**

Through the **Video Widget** can be quickly play the video.

On the desktop tap  icon, In the pop-up list select **Widgets** → Select **Video Widget**.

#### **The Operation with Video**

##### **Zoom video screen**

In the video player interface, drag two fingers on the screen with reverse / opposite direction can zoom in / zoom out the video screen.

##### **Setting video display mode**

Tap  icon, the video screen can be switched within full screen, actual size, best fit three modes.

## Audio track and subtitle switching

In the video player interface, in the top right click  icon switch **audio track** and **subtitle**.

## The Operation with Playlist

### Classification of video list

In the root directory, on the top left click the **album (times)** classify the video.

### Switch display mode in the classification folder

In the classification folder, click  and  icon switch to list display mode or album display mode.

☆ *In the classification folder, users can click  classify the video by time or name.*

### Send or delete the video in the list

Tap and hold the video, → on the top right of the screen, click the **options** or **delete** button to send or delete the video.



## 24 MY PHOTO

☆ *Photo file formats support: JPG, JPEG, BMP, and PNG.*

1. Tap the  **My Photo** application icon.
2. Tap on the desired photo, to view individual photo.
3. On the top right screen click  to operate the corresponding photos.(including zoom in/zoom out, share, rotate, trim, photos set to, adjust the current display scale, show details)

### The operation with picture list

#### Classification of photo list

In the root directory, on the top left click the **album (times, Locations, people, or tags)** classify the photo.

#### Delete the photo in the list

Tap and hold the video → on the top right of the screen , click the **delete** button to delete the photo.

#### Slide show and settings

##### Enter the slide's setting

1. Tap the  **My Photo** application icon.
2. In the root directory, on the top right click the  → **setting**.
3. In the settings interface, set the **Filter photo by file size, slideshow speed**, and **slideshow mode**.

### Slide show

1. Tap the  **My Photo** application icon. Click the photo folder.
2. click  → **slide show**.

★ *In the classification folder, users can click  and classify the photo by time, color or name.*

### Doodle

★ In **My Photo** you can do doodle.

1. Open the picture.
2. Click the  icon → Select **My Photo**.
3. In the doodle interface, user can choose the different doodle function, such as brush, shadow, FX, board, or crop. (Note: It will missing brush function if you choose the **Gallery**)
4. After finishing the doodle, click the **save** icon.
5. Click the  icon return to picture browsing interface.

### Create Photo Widget

Through the Photo Plug-ins can be quickly open the photos.

on the desktop tap , In the pop-up list select **Widgets** → Select **Photo Widget**.



## 25 Gallery

### The operation with photo and video list

#### Classification of photos and videos list

In the root directory, on the top left click the **album (times, Locations, people, or tags)** classify the photos and videos.

#### View, play the photos and videos

**Photo:** In the classification folder, click on the photo thumbnails to open

the photo, and on the top right of the folder interface tap  icon to playing slide.

**Video:** In the classification folder, click on the video preview, enter to the video preview interface, and click the play button in the video preview to play the video.

#### Delete the photos and videos in the list

On the top right of the screen, Tap  icon → Tap **select album** or **Select item**, And then select the photo or video which you want to delete, tap  → **Delete**.

★ *Gallery only supports the display and manages photos and videos in the default reading/writing storage. To toggle the display of the storage area, go to Settings → storage → default reading/writing storage to make changes. The device default storage area is SD card.*



## 26 SCREEN CAPTURE

You can capture a screen image by tapping  at any time.

Tap the  **Screen Capture** application icon to set options for a screen capture.

- Select a delay timer to capture the screen (seconds) .
- Select the default storage device.
- Show screen capture icon in status bar.

After the images are saved, they can be viewed through  **My Photo** application.



## 27 TASK MANAGER

Use PK Manager to manager applications and widgets.

#### Stopping Applications

Android does not automatically stop applications after they are loaded, so you can manually stop the applications as desired.



1. Tap the **Task Manager** Application icon.
2. Tap **Running** to display all running applications.
3. Tap on an application you want to stop operation → tap **Force stop** → **OK**.

### Uninstall Applications



1. Tap the **Task Manager** Application icon.
2. Tap **All** to display all applications.
3. Tap on an application you want to uninstall → tap **Uninstall** → **OK**.

### Install Applications



1. Tap the **Task Manager** Application icon.
2. Tap **Install** to display all applications and folders.
3. Find and tap on an application you want to install → tap **Install**.

---

## 28 WI-FI

Tap **Settings** → **Wi-Fi**, enter into Wi-Fi settings.

1. Slide the Wi-Fi switch to turn on Wi-Fi.
2. All the AP in the vicinity will be listed, click to select the name you want to connect to AP;
3. If the AP is connected successful before, the AP information will be saved in the pop-up window, select "Connect" starts to connect, choose "forget" to remove AP information;
4. If the AP is not encrypted, in the pop-up window, select "Connect" Start Connection;
5. If the AP is encrypted, enter the password in the pop-up window, and click "Connect" Start Connection;
6. When internet connections are successful, the wireless connection icon in the bottom status bar appears.

---

## 29 3G NETWORK

First of all you need to buy 3G wireless network card according to China Telecom, China Mobile or China Unicom. The currently supported on the 3G card type please refer to **3G dongle support list or appendix**.

We strongly recommend on buy the 3G Network Cards, in order to ensure normal 3G Internet access. Please come to the prepaid card into the purchase of 3G Network Cards, put the 3G network card insert into the USB host transfer cable and then insert OTG interface. At this time it will be bright lights

on the 3G network card, which indicated that it could begin to connect the 3G network.

Tap **Settings** → **3G network**, And tap “**Add 3G network**”, in the popup dialog box, Fill the **name**, **Device number**, **APN**, **user** and **password** information.

**Name:** In the popup dialog box, Name field enter the name you want free you can.

**Device number and APN:** Please fill in the information provided by carriers. (As in China: If you use China Unicom and China Mobile's 3G network card, **device number** field need to fill in "\*99#", **APN** need to fill in the "cmnet"; if China Telecom formats 3G on the card, phone number need to fill in the column "T#777", **APN** do not need to fill in the name of column.)

**User and Password:** If you use the standard of China Unicom and China Mobile's 3G network card, user and password fields are free to fill or not fill; if you use the standard of China Telecom's 3G network card, **user and password** fields need to fill in( **user**: card, **password**: card).

**Note:** If enter the above user and password does not work properly. Please make try to fill in (**user**: ctne@mycdma, **password**: vnet.mobi) or (**user**: ctne, **password**: vnet.mobi), also you can request to China Telecom.

Fill then click the link, and you will see the bottom of status bar 3G symbol  appears, indicating the completion of 3G is connected, and then you can get online.

---

## 30 GPS

GPS functionality requires the use of a USB interface external GPS receiver. (It access to device via the USB host transfer cable). Users need to download the navigation software and map from the internet, through the SD card installation (please refer to the Application Management section of this User Guide). The currently supported on the GPS receiver type please refer to Appendix.

---

## 31 PPPoE SETTINGS

Before using this feature, connect the USB network card via the USB host transfer cable access to device.

1. Tap **Settings** → **PPPoE settings** .
2. Input name and password then click connect to access the broadband network.

---

## 32 ETHERNET

Before using this feature, connect the USB network card via the USB host transfer cable access to device. When the USB network cable is plugged into

the USB network card, you will see the bottom of status bar ETH symbol  appears

1. Tap **Settings** → **Ethernet**.
2. The device can automatically obtain IP address to connect to the network. You can also choose to manually set the IP address to get connected.



## 33 SETTINGS

<b>Wireless &amp; networks</b>	<b>Wi-Fi</b>	Turn on /off Wi-Fi, Set up & manage wireless access points.
	<b>Bluetooth</b>	Turn on /off Bluetooth
	<b>Ethernet</b>	<b>DHCP</b> Automatic assign IP address
		<b>Use Static IP</b> Manual assign IP address
	<b>PPPoE settings</b>	Set up ADSL network
	<b>Data usage</b>	View of data usage
	<b>More...</b>	<b>Airplane mode</b> Disable all wireless connections.
		<b>VPN</b> Add Virtual Private Networks (VPNs).
		<b>Portable hotspot</b>
		<b>Mobile network</b> Set up 3G network.
<b>Device</b>	<b>Sound</b>	<b>Volumes</b> To adjust the Media volume.
		<b>Default notification</b> Select desired ringtone sound.
		<b>Vibrator</b> Turn on/off vibrator
		<b>Touch sounds, screen lock sound</b> Turn on/off operate sounds.
	<b>Display</b>	<b>Brightness</b> Adjust the screen brightness as desired.
		<b>TV screen adjustment</b>
		<b>Wallpaper</b> Set up wallpaper
		<b>Auto-rotate screen</b> Auto-rotate switch.
		<b>Allow hiding the status bar</b> Allow hiding the status bar
		<b>Use Metro-style UI</b> Metro-style status bar. Swipe from the top edge of screen to simulate BACK key.
		<b>Screen-edge gestures</b> Swipe from the left/right edge of screen to open recent apps

			list/notification bar.
		<b>Show full-screen gesture tip</b>	Full-screen gesture prompts
		<b>Sleep</b>	Adjust the delay before the screen automatically turns off.
		<b>Font size</b>	Set the system font size
	<b>Storage</b>		View, uninstall, and format the internal memory, SD card and USB storage.
	<b>Battery</b>		View the usage of the battery.
	<b>Apps</b>		View and uninstall applications
<b>Personal</b>	<b>Account &amp; sync</b>		Add sync account.
	<b>Location services</b>	<b>Google's location service</b>	Let apps use data from source such as Wi-Fi and mobile network to determine your approximate location
		<b>GPS satellites</b>	Let apps use GPS to pinpoint your location.
		<b>Location &amp; Google search</b>	Let Google use your location to improve search results and other service.
	<b>Security</b>	<b>Screen lock</b>	
		<b>Owner info</b>	
		<b>Encrypt tablet</b>	Require a numeric PIN or password to decrypt your tablet each time you power it on.
		<b>Make passwords visible</b>	
		<b>Device administrators</b>	View or deactivate device administrators
		<b>Unknown sources</b>	Allow installation of non-Market apps.
		<b>Trusted credentials</b>	Display trusted CA certificates.
		<b>Install from SD card</b>	Install certificates from SD card.
		<b>Clear credentials</b>	Remove all certificates.
		<b>Language</b>	Setting system language.
			Spelling correction, personal dictionary, keyboard and input methods, Voice search , text to speech (TTS) output, and pointer speed.

	<b>Backup Reset</b> &	<b>Back up my data</b>	Back up app data, Wi-Fi passwords, and other settings to google servers.
		<b>Backup account</b>	Backing up to debug-only private cache.
		<b>Automatic restore</b>	When reinstalling an app, restore backed up settings and data.
		<b>Factory data reset</b>	Erases all data on tablet.
<b>System</b>	<b>Date &amp; Time</b>	<b>Automatic date &amp; time</b>	Use network-provided time
		<b>Set date</b>	Set date
		<b>Set time</b>	Set time
		<b>Select time zone</b>	Select time zone
		<b>Use 24-hour format</b>	Choose 24-hour format or 12-hour format.
		<b>Select date format</b>	Select date format.
	<b>Accessibility</b>		Large text, power button ends call, auto-rotate screen, speak passwords, touch & hold delay, and install web scripts
	<b>Developer options</b>		USB debugging, development device ID, stay awake, allow mock locations, HDCP checking, desktop backup password, strict mode enabled, pointer location, show touches, show screen updates, show CPU usage, Force GPU rendering, window animation scale, transition animation scale, don't keep activities, background process limit, and show all ANRs.
	<b>About tablet</b>		System updates, Status, legal information, model number, android version, kernel version and build number.

---

## FREQUENTLY ASKED QUESTIONS

### Android

**Q: What Android OS version is on my Device?**

A: 4.0.3

### Basic Device Functionary

**Q: Do I have to charge the battery before use?**

A: You should charge the battery for at least 6 hours in the off status, but you can use the device while it's charging. Use the include power adapter to charge; this device does not charge via the USB cable.

### Email

**Q: Can I use any of my personal email addresses to send/receive email?**

A: The device supports POP3 and SMTP accounts. Some free email accounts are not supported on mobile devices. Check with your email provider to see if your account is supported.

### Media Cards

**Q: Which media cards are compatible with my Device?**

A: micro SD cards.

### Music

**Q: What type of music files can I play on my device?**

A: MP2, MP3, WAV, AAC, WMA

**Q: How do I add music files to my device?**

A: Copy the music files from your computer onto a SD card or USB storage device, and then use the File Browser application to copy the files into the device.

### Photos

**Q: What type of photo files can I view on my device?**

A: JPG, JPEG, BMP and PNG.

**Q: How do I add photo files to my device?**

A: Copy the photo files from your computer onto a SD card or USB storage device, and then use the File Browser application to copy the files into the device.

### Video

**Q: What type of video files can I play on my device?**

A: Video file formats supported: MPEG1/2/4, H263, H264, VC1, RealVideo, MotionJPEG.. The largest video format is supported 1080P(1920x1080) resolution.

**Q: How do I add video files to my device?**

A: Copy the video files from your computer onto a SD card or USB storage device, and then use the File Browser application to copy the files into the device.

## Wi-Fi

**Q: Do I need a Wi-Fi adapter to connect to the Internet?**

A: No. The Wi-Fi adapter is built-in to the device.

Inconsistent with the physical specifications, please prevail in kind.

---

## BATTERY MANAGEMENT

The battery is not fully charged out of the box, so it is recommended that you charge the battery for at least 6 hours before you start to use the device.

The rechargeable battery is designed and manufactured to be used and recharged frequently. As with all batteries, the capacity of the battery reduces each time it is charged/depleted. However, you can still try to prolong the battery's lifetime by following the suggestions below:

- Use your Tablet at least once a week.
- Charge the battery regularly and fully.
- Never leave the battery fully discharged for a long period of time.
- Always keep the device and the battery away from heat.

### Charge battery

Plug the power adapter into an electrical wall outlet, and then connect to the device to fully charge the battery before use (A full charge takes about 6 hours in the off status).

 *You cannot charge the battery using the USB cable.*

When fully charged, the battery icon displays as .

A fully discharged battery takes approximately 6 hours to fully charge in the off status, but you can use the device while plugged in when desired.

---

## IMPORTANT SAFETY PRECAUTIONS

Always follow these basic safety precautions when using your Tablet. This reduces the risk of fire, electric shock, and injury.

- Do not expose this product to rain or moisture.
- Keep the device out of direct sunlight and heat sources.
- Protect the power cord. Route power cords so that they are not likely to be walked on or pinched by items placed on or against them. Pay particular attention to the point where the cord attaches to the device.
- Only use the AC adapter included with the device. Using any other power adapter voids your warranty.
- Do not remove the cover. There are no user-serviceable parts inside.

### Cleaning your device

Treat the screen gently. To clean fingerprints or dust from the screen, we recommend using a soft, non-abrasive cloth such as a camera lens cloth.

---

## Appendix : The optional parts and models

Data Dongle Vendor	Model Name
HUAWEI	E173s-6
	E153u-3
	E180
	E261
	E122
ZTE	MF190
	MF180
	MF180S

---

## FCC STATEMENT

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
  - (1) This device may not cause harmful interference.
  - (2) This device must accept any interference received, including interference that may cause undesired operation.
2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.