

# Clear T730

## Quick Start Guide

Thank you for purchasing Clear T730.

This device will provide you with high quality mobile entertainment and communication.

Before you start, familiarize yourself with the icons you will see in this guide.



Warning – situations that could cause injury to yourself or others, damage to your device or other equipment.



Note – notes, usage tips, or additional information for using your device.

Copyright

Copyright ©2012 Wintec Industries.

This guide is protected under international copyright laws.

No part of this guide may be used in any form without the permission of Wintec Industries.

## Trademarks

Clear logo is registered trademark of Wintec Industries.

The Android logo, Google™ are the trademark of Google, Inc.

Bluetooth is a registered trademark of the Bluetooth SIG, Inc. worldwide.


Windows Media Player is a registered trademark of the Microsoft Corporation.

Wi-Fi and the Wi-Fi logo are registered trademarks of the Wi-Fi Alliance.

All other trademarks and copyrights are the property of their respective owners.


## Device Layout

### Front View

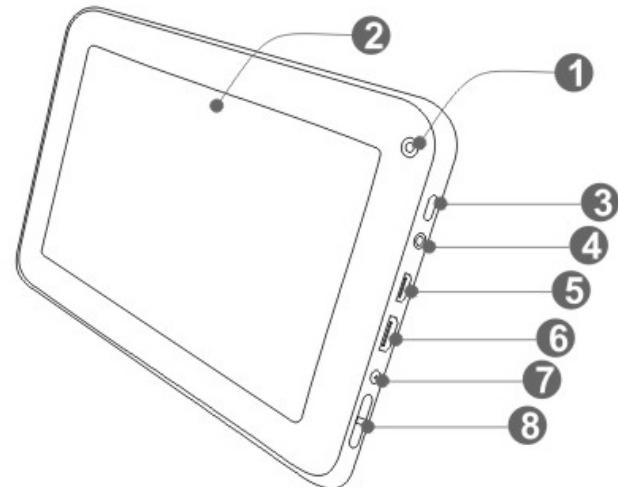

Item	Description
1	Front Camera
2	LCD & Touch Screen
3	Power key
4	Headset jack
5	Micro USB jack
6	HDMI jack
7	DC jack
8	Volume key

### Rear View

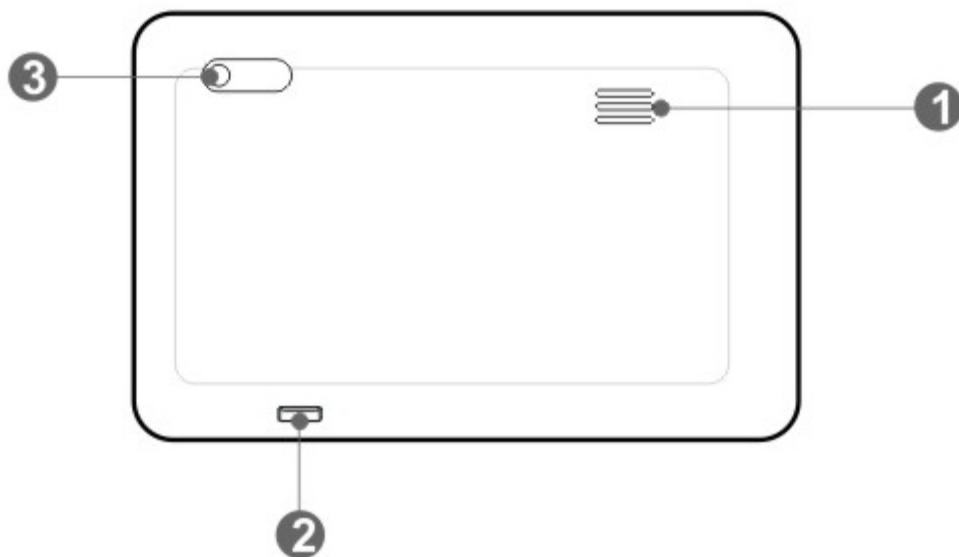

Item	Description
1	Speaker
2	microSD Slot
3	Rear Camera

## Getting started

### Turn your device on and off

To turn on your device, press and hold the Power key.

If you turn on your device for the first time, some on screen instructions will be displayed. You need to follow the instructions to set up your device.

You have to sign in Google or create a Google account to use the applications that need to interact with Google Server.

To turn off your device, press and hold the Power key and select **Power off** and then **OK**.

### Using Applications

Select [■■■] to open the application list on the home screen,

Scroll left or right to another application list or widget list screen.

Select an application to be run.

Select [←] to return to the previous screen in bottom bar.

Select [→] to go to the home screen in bottom bar.

Select [≡] to view the recently used application list and select an application to use among the list.

### Notification Panel

Tap the right bottom bar to open notification panel.

You can expand the opened notification panel by tap it, and then can shrink by tap it again or other area of screen.

### Volume control

You can adjust the volume of device by a couple of methods.

One is by volume key on side of your device.

The other is by tap the volume down or volume up icon in bottom bar of LCD.

## Charging the battery

Before using this device for the first time, you must charge the battery.




Use only **Wintec Industries** approved charger for this device and cables.  
Unapproved charger or cable can cause batteries to explode or damage this device.



If the battery is completely discharged, you can't turn on the device even with the charger connected. Allow a depleted battery to charge for a few minutes before you try to turn on the device.

Connect the charger to an electrical socket and plug the charger cable into the DC jack of your device

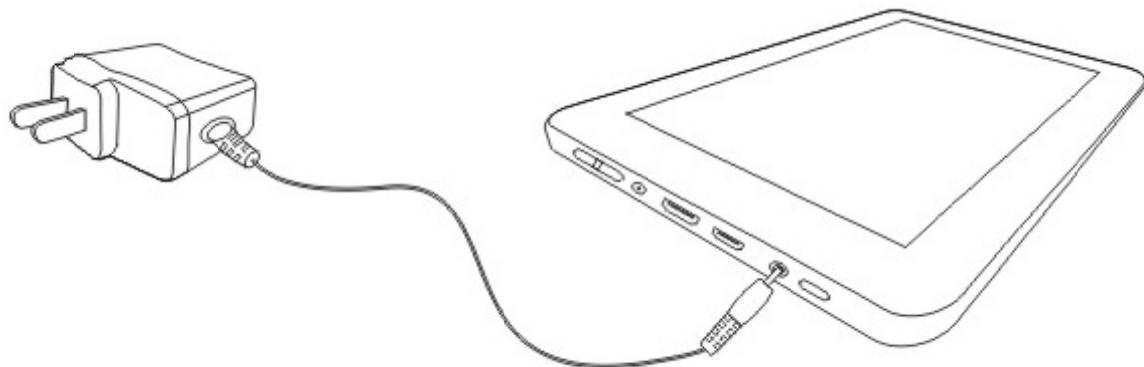

Connecting the charger cable into the DC jack of your device improperly can cause serious damage to your device or charger. Any damage caused by misuse is not covered by the warranty.

When the battery is fully charged, unplug the charger cable from your device first, and then unplug the charger from the electrical socket.

## Safety Information

To prevent injury to yourself and others or damage to this device, read all of the following information before using this device.

Prevent electric shock and explosion.

Do not use unauthorized or damaged power cords or plugs, or loose electrical sockets.

Do not touch the power cord with wet hands, or disconnect the charger by pulling on it.

Do not damage or bend the power cord.

Do not use this device while charging or touch device with wet hands.

Do not drop or impact to the charger or the device.

Do not use the device during thunderstorm.

Do not short-circuit the charger.

Handle of the device and chargers with care

- Use only manufacturer approved charger designed for the device. Unapproved charger can cause serious damage to the device.
- Never dispose of the device in a fire.
- Never place the device on or in heating devices, such as stoves, microwave ovens, radiators. The device may damage when overheated.
- Never place the device on the dashboard in a car without any care. If it is exposed to the sun light for a long time, the inside temperature of the car may damage the device.

Do not use the device near any other electronic devices. Most electronic devices use radio frequency signals, the device may interfere with other electronic devices.

Do not use the device in a hospital or near medical equipment including pacemaker that can be interfered with by radio frequency.

Do not use the device in a place that is not allowed.

## **FCC STATEMENT**

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference.

(2) This device must accept any interference received, including interference that may cause undesired operation.

2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

#### FCC RF Exposure Information and Statement

The SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of tissue.

Device types: T730 (FCC ID:PDT-ST7222-T730 ) has also been tested against this SAR limit. The highest SAR value reported under this standard during product certification for use at when properly worn on the body is 1.45W/kg.

This device was tested for typical body-worn operations with the back of the handset kept 1.5cm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain a 1.5cm separation distance between the user's body and the back of the handset. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly.

The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided