



FLUANCE®

Fi30

INSTRUCTION MANUAL

iPod® not included.

Thank you for your purchase of this Fluance® product. Please read this instruction manual carefully before using product to ensure proper use. Keep this manual in a safe place for future reference.

www.fluance.com





FLUANCE®



NEED HELP?

**DO NOT RETURN THIS
PRODUCT TO THE STORE**

Please contact a FLUANCE® customer support representative first regarding any additional information on product features, specifications or assistance with setup.

You may contact us via one of the methods below:



Email:
sales@fluence.com

Online live web chat:
Visit www.FLUANCE.com



Telephone:
1.888.61.SOUND (1.888.617.6863)

For more product information visit www.fluance.com





TABLE OF CONTENTS

NEED HELP?..... 2

TABLE OF CONTENTS 3

WHAT'S INCLUDED 3

FEATURES 3

IMPORTANT SAFETY INSTRUCTIONS..... 4

BUTTONS AND CONNECTIONS 6

SETUP 9

OPERATION 13

SPECIFICATIONS 15

FLUANCE WARRANTY 16

WHAT'S INCLUDED



- High Performance Music System for iPod/iPhone®
- Remote Control (Battery included)
- 4 Metal Foot Spikes
- 4 Metal Foot Protection Coins
- 4 Rubber Foot Pads
- 4.5ft RCA Audio Composite Connection Cable
- 4.5ft RCA Video Composite Connection Cable
- 2 Year Parts and Labour Warranty
- Lifetime Live Customer Support



FEATURES

- High fidelity sound quality.
- Experience room filling music that you can feel.
- Premium components ensure serious performance.
- Audiophile grade wood construction.
- Innovative design and high gloss finish.
- Allows you to recharge your iPod/iPhone.
- Full function of iPod/iPhone with remote control.
- Separate treble and bass adjustment controls.
- LED display.



 


IMPORTANT SAFETY INSTRUCTIONS

WARNING: To reduce the risk of fire or shock hazard, do not expose this product to rain or moisture.

CAUTION: Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.

The CAUTION marking is located on the bottom panel.

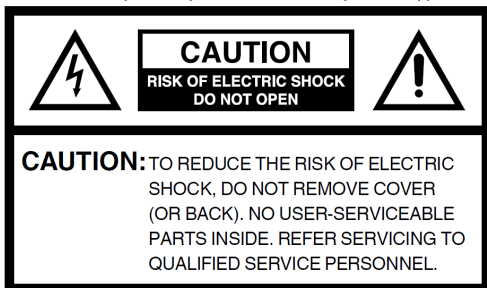

The lightning flash with arrowhead symbol, within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.



This symbol means that this unit is double insulated. An earth or ground connection is not required.

1. Read all instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with a dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged. Liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
15. Apparatus shall not be exposed to dripping or splashing, and that not objects filled with liquids, such as vases, shall be placed on the apparatus.
16. The MAINS plug is used as the disconnect device, which shall remain readily operable.
17. **WARNING:** To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.



S3125A

This class[B] digital apparatus complies with Canadian ICES-003.



IMPORTANT SAFETY INSTRUCTIONS

FCC statement on regulation

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio TV technician for help.

This equipment complies with FCC/IC RSS102 radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

FCC AND IC NOTICE

This device complies with Part 15 of the FCC rules and Industry Canada license-exempt RSS 210. Operation is subject to the following two conditions: (1) This device may not cause harmful interference; and (2) this device must accept any interference received, including interference that may cause undesired operation.

Cet appareil est conforme à la partie 15 des règles de la FCC, ainsi qu'à la norme RSS 210 exempte de licence d'Industrie Canada.

Son fonctionnement est soumis aux deux conditions suivantes : (1) Cet appareil ne doit pas provoquer d'interférences nuisibles; et

(2) cet appareil doit accepter toutes les interférences reçues, y compris celles susceptibles d'entraîner un dysfonctionnement de l'appareil.

FCC CAUTION

caution the user that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.



Don't throw away the battery with general house waste, dispose of it correctly as chemical waste.



This marking indicates that this product should not be disposed with other household wastes throughout North America. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

 
 


SETUP

Setting up the Music System:

Installing the Metal Foot Spikes:

1. Screw in one Metal Foot Spike into each of the four holes on the bottom of the Music System.
2. To protect hard surfaces from any scratches, it is recommended to use the included Metal Foot Protection Coins.
3. Place a Metal Foot Protection Coin under each one of the Metal Foot Spikes as shown in the diagrams below.

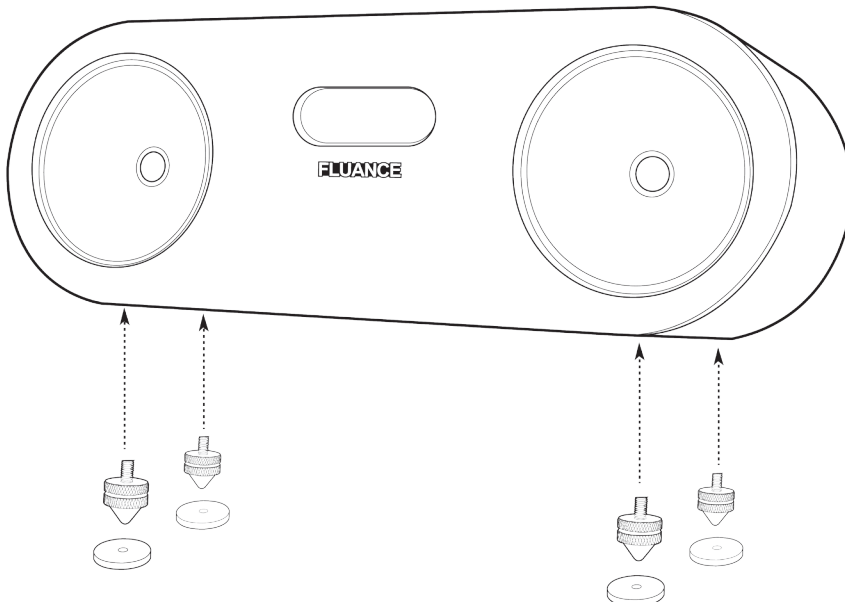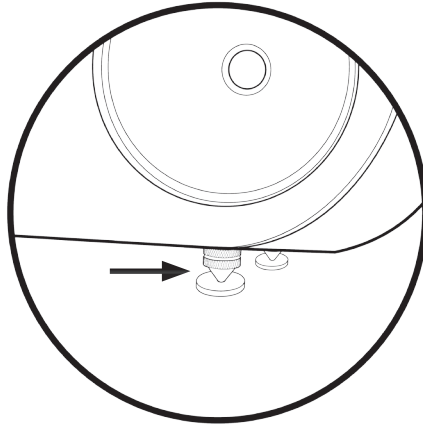

 


SETUP

Installing the Rubber Foot Pads:

You may also use the Rubber Foot Pads instead of using the Metal Foot Spikes. The rubber pads have self-adhesive which holds them in place on the bottom of the Music System.

1. Remove one Rubber Foot Pad from the adhesive backing.
2. Place the pad approximately 1 inch beside the screw hole on the bottom of the Music System as shown in the diagrams below.
3. Repeat steps 1 and 2 for all of the remaining Rubber Foot Pads.

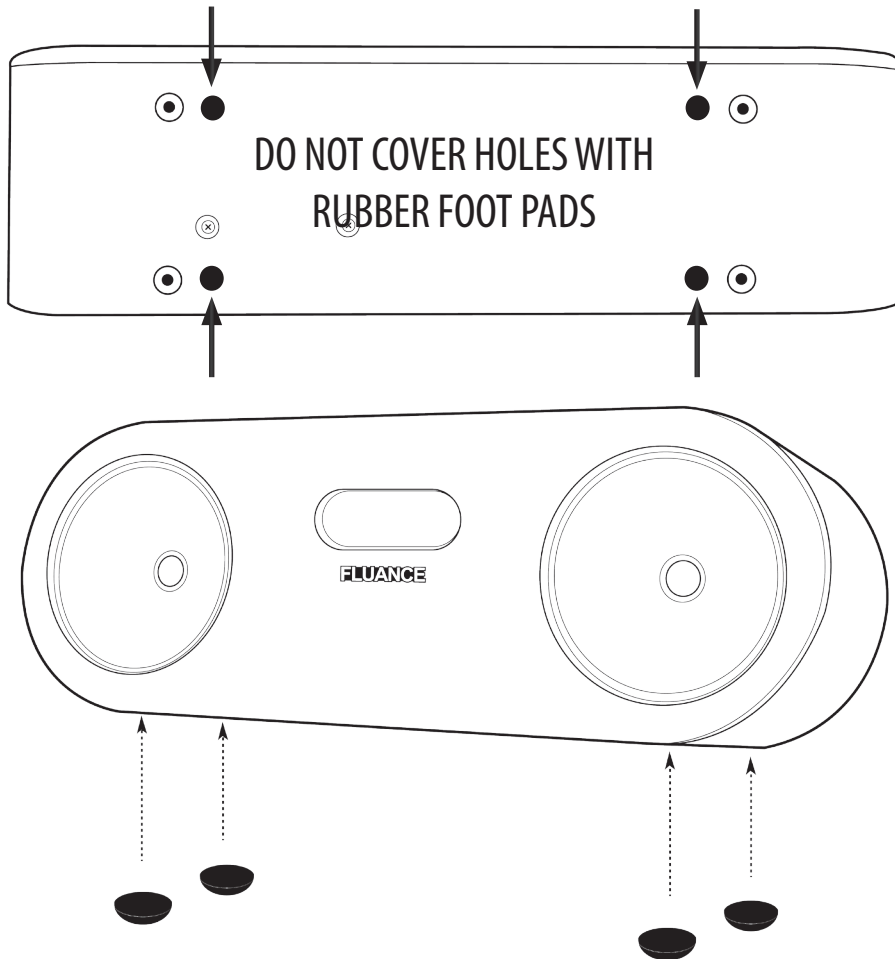



OPERATION

Turning on the Music System:

- Ensure that the AC power cord is plugged in and the ON/OFF switch at the back of the Music System is in the ON position. The VOL information will then be displayed in the LED window.

STANDBY MODE:

1. Press this button to enter into STANDBY mode.
2. While in STANDBY mode, no information will be displayed in the LED window.
3. Press the STANDBY button again to quit the STANDBY mode.
4. The VOL information will appear in the LED window and power will be restored.

INPUT MODE:

1. Press the INPUT button to choose different input signals. Pressing this button allows you to toggle between Auxiliary Audio Input and iPod/iPhone. AUX and IP will appear in the LED window to display your selection.
2. Press the AUX button on the remote control to switch the input signal to Auxiliary Audio Input, AU will appear in the LED window.
3. Press the iPod/iPhone button on the remote control to switch the input signal to iPod/iPhone, IP will appear in the LED window.

VOLUME:

1. Press the VOL + button on the remote control or on top of the Music System to increase the volume.
2. Press the VOL - button on the remote control or on top of the Music System to decrease the volume.
3. The LED window will display the volume level you have selected.

NOTE: The maximum volume is 40dB and the minimum volume is 0dB. The Music System is set to 20dB by default when turning on the system.





OPERATION

TREBLE:

1. Press the TREBLE + button on the remote control to increase the treble.
2. Press the TREBLE - button on the remote control to decrease the treble.
3. The LED window will display the TREBLE level you have selected.
4. If the TREBLE levels are not adjusted within 5 seconds, the display will revert to the main level.

NOTE: The TREBLE adjustment range is ± 10 dB and increases/decreases in increments of 2.

BASS:

1. Press the BASS+ button on the remote control to increase the bass.
2. Press the BASS - button on the remote control to decrease the bass.
3. The LED window will display the BASS level you have selected.
4. If the BASS levels are not adjusted within 5 seconds, the display will revert to the main level.

NOTE: The BASS adjustment range is ± 10 dB and increases/decreases in increments of 2.

iPod/iPhone CONTROL:

- The iPod/iPhone control buttons on the remote control work similarly to the iPod/iPhone's menu system. For more information, please refer to the iPod or iPhone instruction manual.





SPECIFICATIONS

Tweeter	2 x 3/5" Coaxial Mounted Silk Soft Dome Ferrofluid Cooled
Woofers	2 x 5" Woven Fiberglass Drivers with Butyl Rubber Surrounds
Input	iPod/iPhone , Auxiliary Audio Input
Volume	40dB
Frequency Response	40Hz-20KHz /±2dB
Crossover Frequency	3500 Hz PCB Mounted Circuitry
Amplifier Power (RMS)	20 Watts Continuous Average Output
System Type	2 Way 4 Driver with Integrated Amplifier
Enclosure/Cabinet	Bass Reflect Design/Precision Crafted MDF Internally Braced
Dimensions	20.4 × 5.8 × 7.1 inches (51.8 × 14.7 × 18 cm)
Weight	13.4 lbs (6.1 kg)

Specifications are subject to change without notice. Measurements and weights may vary slightly.



FLUANCE® WARRANTY

Thank you for choosing FLUANCE® Consumer Electronics Products!

FLUANCE® GIVES THE FOLLOWING WARRANTY TO THE ORIGINAL CUSTOMER OF EACH NEW FLUANCE® PRODUCT PURCHASED FROM A DEALER AUTHORIZED BY FLUANCE®. FLUANCE® WARRANTS THAT EACH NEW PRODUCT, UNDER NORMAL USE, IS FREE FROM DEFECTS, SUBJECT TO THE TERMS AND CONDITIONS SET FORTH. IF A DEFECT SHOULD OCCUR WITHIN THE WARRANTY PERIOD, REPAIRS WILL BE MADE FREE OF CHARGE FOR PARTS AND LABOR WHEN SUCH DEFECTS ARE DETERMINED BY US TO BE ATTRIBUTABLE TO FAULTY MATERIALS OR WORKMANSHIP AT TIME OF MANUFACTURE.

WARRANTY PERIOD: THE FLUANCE® PRODUCTS LISTED BELOW ARE WARRANTED FOR PARTS AND LABOR FOR THE STATED PERIOD FROM THE DATE OF ORIGINAL PURCHASE AND ARE SUBJECT TO THE TERMS AND CONDITIONS OF THE WARRANTY.

HOME AUDIO PASSIVE SPEAKERS: LIFETIME WARRANTY

ACTIVE/POWERED SPEAKERS: 2 YEAR WARRANTY

WARRANTY EXCLUSIONS: PRODUCTS PURCHASED FROM A DEALER NOT AUTHORIZED BY FLUANCE®. PRODUCTS WITH THE SERIAL NUMBER DEFACED, ALTERED OR MISSING. DEFECTS RESULTING FROM DISASTER, ACCIDENT, ABUSE, MISUSE, LIGHTNING, POWER SURGES, NEGLIGENCE, UNAUTHORIZED MODIFICATION OR WATER DAMAGE. DEFECTS OR DAMAGE AS A RESULT OF REPAIRS PERFORMED BY A PERSON OR PARTY NOT AUTHORIZED BY FLUANCE®. DEFECTS OR DAMAGE OCCURRING DURING SHIPPING (CLAIMS SHOULD BE MADE WITH THE SHIPPING COMPANY).

TO OBTAIN WARRANTY SERVICE: SHOULD YOUR FLUANCE® PRODUCT NEED WARRANTY SERVICE, PLEASE CONTACT YOUR FLUANCE® AUTHORIZED DEALER AND SEND YOUR PRODUCT, FULLY INSURED AND FREIGHT PREPAID TO THE NEAREST FLUANCE® AUTHORIZED SERVICE CENTER. BEFORE SENDING TO FLUANCE®, YOU WILL BE REQUIRED TO GET A RETURN AUTHORIZATION NUMBER FROM YOUR DEALER. PRODUCTS SHIPPED WITHOUT A VALID RETURN AUTHORIZATION NUMBER WILL BE REFUSED. TO AVOID POSSIBLE SHIPPING DAMAGE, MAKE SURE THE PRODUCT IS PROPERLY PACKAGED AND WELL PROTECTED. INCLUDE A COPY OF YOUR ORIGINAL BILL OF SALE (INCLUDING DATE OF PURCHASE AND INVOICE NUMBER), SERIAL NUMBER, YOUR NAME, EMAIL ADDRESS, HOME AND/OR WORK TELEPHONE NUMBER(S), A COMPLETE RETURN ADDRESS AND A DETAILED DESCRIPTION OF THE FAULTS. PRODUCTS REPAIRED WITHIN WARRANTY WILL BE RETURNED FREIGHT PREPAID. WHEN APPLYING FOR WARRANTY REPAIRS, YOU MUST PRESENT THE ORIGINAL COPY OF YOUR BILL OF SALE.

TO OBTAIN THE NAME AND ADDRESS OF THE NEAREST AUTHORIZED FLUANCE® SERVICE CENTRE OR FOR MORE INFORMATION ON THIS WARRANTY

- **Contact FLUANCE® Support by Email: sales@fluence.com**
- Visit www.FLUANCE.com
- Mail your inquiry to:
FLUANCE® Customer Service, 4080 Montrose Road, Niagara Falls, ON L2H 1J9
- Call toll free **1.888.61.SOUND (1.888.617.6863)**

FLUANCE® is a registered trademark.
07.2011

