

CTE-310X

USER MANUAL

Draft Version 1.0

October 9, 2001

TABLE OF CONTENTS

CHAPTER 1 BEFORE USING YOUR PHONE	4
Handset Description	5
Basic Functions	6
The Function Keys	6
Display Indicators	6
Screen Status, Display and Function	6
Important Battery Information	6
 CHAPTER 2 BASIC OPERATION	 7
Turning the Phone On and Off	8
Turning the Phone On	8
Turning the Phone Off	8
How to Use the Menu	8
Menu Summary	9
Basic Functions	10
Making a Call	10
Pause Feature	10
How to Answer Calls	11
Caller ID Function	11
Call Waiting Function	11
Missed Call Display	11
How to Adjust Volume	11
Functions During a Call	12
Sending Your Number to a Pager	12
Scratch Pad	12
Mute	12
 CHAPTER 3 MEMORY FUNCTION	 13
How to Store a Phone Number	14
How to Enter Letters and Characters Using the Dial Buttons	15
How to Make a Call Using A Stored Phone Number	15
One Touch/Two Touch Dialing	15
How to Find Your Call Logs	16
Missed Calls.....	16
Answered Calls.....	16
Dialed Calls.....	16
How to Find Your Phone Book	17

TABLE OF CONTENTS (CONT'D)

Recalling by Memory Location Number	17
Recalling by Name	17

CHAPTER 4 MENU18

Settings	19
Auto Retry	19
Auto Answer	19
One Touch Dialing	19
Voice Privacy	20
Backlight	20
Lighting Length	20
Display	21
LCD Contrast	21
Logo Display	21
Volume	21
Ringer Mode	21
Ringer Type	21
Keypad	22
Call Timers	22
Last Call	22
All Calls	22
Home Calls	22
Roam Calls	22
Alerts	23
Min Alert	23
Roam Alert	23
Fade Alert	23
Low Signal Alert	23
Phone Info	24
Checking My Number	24
Checking the Phone Version	24

CHAPTER 5 SECURITY FEATURES 24

How to Lock Your Phone	25
Auto Lock	25
Lock Code Change	25
How to Change Your Banner	26
Banner Change	26
How to Restrict Your Phone	26
Restriction Functions	26

TABLE OF CONTENTS (CONT'D)

To Restrict Incoming Calls	26
Restricting Outgoing Calls	27
Restricting the Phone Book	27
Restricting Long Distance Calls	27
Restrict Calls to 900 Numbers	27
How to Reset Your Phone	28
How to Clear Your Phone Memory	28
Clearing Stored Phone Numbers	28
Memory Clearing Function	29
Clearing Dialed Number in Call Logs	29
Clearing Air Time In Home Service Area	29
Clearing Roam Calls	29

CHAPTER 6 SUPPLEMENTARY FUNCTIONS30

Melody Setup Function	31
Write Melody	31
To Enter Melody	31
Hear Melody	32
Melody Speed	32
Stopwatch	33
Calculator	33
Bio-Rhythm	34

CHAPTER 7 VOICE MAIL AND TEXT MESSAGES... 34

Receiving a Message	35
Direct View Set	35
Direct View Release	35
Checking Received Message	35
Checking Received Voice Mail Message	35
Checking Received Text Message	36
Sending Message	36
Sending Message	36
Direct View	37
Direct View Setting	37
Bell Type	37
Bell Type Setting	37

TABLE OF CONTENTS (CONT'D)

CHAPTER 8 EMERGENCY CALL.....	38
Making an Emergence Call.....	39
E911 in Lock Mode	39
E911 Using Any Available System	39
 CHAPTER 9 SAFETY	40
Safety Information for Wireless Handheld Phones .	41
Driving Safety	41
Electronic Devices	41
Other Safety Guidelines	42
Precautions	43
Warning	43

CHAPTER 1

BEFORE USING YOUR PHONE

Please read this chapter before using this product.

- ❶ Package Includes
- ❷ Handset Description
- ❸ Basic Functions
- ❹ Display Icons
- ❺ Using the Battery
- ❻ Charging the Battery
- ❼ Important Battery Information

FCC RF EXPOSURE INFORMATION

WARNING! Read this information before using your phone



In August 1996 the Federal Communications Commission (FCC) of the United States with its action in Report and Order FCC 96-326 adopted an updated safety standard for human exposure to radio frequency electromagnetic energy emitted by FCC regulated transmitters. Those guidelines are consistent with the safety standard previously set by both U.S. and international standards bodies. The design of this phone complies with the FCC guidelines and these international standards.



Use only the supplied or an approved antenna. Unauthorized antennas, modifications, or attachments could impair call quality, damage the phone, or result in violation of FCC regulations.

Do not use the phone with a damaged antenna. If a damaged antenna comes into contact with the skin, a minor burn may result. Please contact your local dealer for replacement antenna.

Body-worn Operation

This device was tested for typical body-worn operations using the belt-clip placed 2.5 cm. from the body. To comply with RF exposure requirements, a minimum separation distance of 2.5 cm. must be maintained between the user's body and the belt-clip/holster, including the antenna. The use of other belt-clip/holsters and other non-tested accessories may not comply with FCC RF Exposure requirements and should be avoided.

For more information about RF exposure, please visit the FCC website at www.fcc.gov

HANDSET DESCRIPTION

LED

Blinks when you
make a call or
receive a call

Volume Button

Used to adjust



the volume of
the earpiece and
ringer volume.

Antenna

For best call
quality, extend
the antenna during
the call

Earpiece

LCD Screen

Function

Keys

Keypad

Microphone

BASIC FUNCTIONS

THE FUNCTION KEYS



This key is used to make or receive a call.



This key is used to terminate a call or exit the
current menu. This key is used to turn the handset on or off.
It also releases the Key Lock function.

These keys(also called as the Navigation keys) are used to scroll
through the contents of the menu.



(Soft 1)This key is used to access the Menu when
pressed and held for more than 1 second.



(Soft 2)This key is used to access voice or text messages.



This key is used to access the web ..



This key is used to clear character

DISPLAY INDICATORS

SCREEN STATUS, DISPLAY AND FUNCTION



Signal Strength

Indicates current signal strength. More lines mean better signal strength.



Roaming

Indicates the Phone is outside of its home area.

Service Indicator

When a call is in progress,  is displayed.

When  is displayed, the phone is not receiving a signal from the system.



Message

Indicates a text message or voice mail message is waiting.



Digital mode

Displayed when the line is busy or standby in the digital mode.



Battery

Indicates battery charge level status. The more black

CHARGING THE BATTERY

STATUS OF CHARGER LED

Charging Slot	Charging on Safety Mode (Green Color On)	Charging in Progress (Red Color On)	Charging Completion (Green Color On)
Front Charging Slot (Charging Slot for Handset Only) Charging Slot			



If the red LED does not come on after the handset or battery has been inserted into the charging slot, re-insert or check power.

IMPORTANT BATTERY INFORMATION

Use only batteries and chargers approved by the phone manufacturer. When a charger is not in use, disconnect it from the power source. Do not leave the battery connected to a charger for longer than a week; overcharging may shorten its life.

If left unused, a fully charged battery may completely drain (discharge) in 1 - 4 weeks.

Never use any charger or battery that is damaged or worn out.

Use the battery only for its intended purpose.

Do not short circuit the battery. Accidental short circuiting can occur when a metallic object (e.g. coin, clip or pen) causes direct connection of the two terminals of the battery (metal strips on the back of the battery),

for example, when you carry a spare battery in your pocket or purse. Short circuiting the terminals may damage the battery or the connecting object.

Leaving the battery in hot or cold places, such as in a closed car in summer or winter conditions, reduces the capacity and lifetime of the battery. Always try to keep the battery between 41 °F and 95 °F (5 °C and 35 °C). A phone with a hot or cold battery may temporarily not work (or charge) even if the battery is fully charged.

Temperature extremes affect the ability of your battery to charge; allow it to cool down or warm up first.

When the battery is not in use, store it uncharged in a cool, dark and dry place.

The battery is a sealed unit with no serviceable parts. Do not attempt to open the case.

It is recommended that you allow your battery to fully discharge before you recharge it.

The battery can be charged and discharged hundreds of times but will eventually wear out. When the operating time is shorter than normal, it is time to buy a new battery.

Do not dispose of a battery in a fire!

Dispose of used batteries in accordance with local regulations.
Recycle!

CHAPTER 2

BASIC OPERATION

1. Turning the Phone On and Off

2. How to Use the Menu

3. Menu Summary

4. Basic Functions

5. Functions During a Call

TURNING THE PHONE ON AND OFF

TURNING THE PHONE ON

- 1 Press [END/P]
The phone is locked if "PASSWORD" is displayed on the screen. When "PASSWORD" is displayed, enter the 4-digit password to unlock the phone.

The default password is the last 4 digits of your phone number.

TURNING THE PHONE OFF

- 1 Press [END/P] until "Power Off" is displayed.



- If the "LOW BATTERY WARNING POWER OFF"s displayed and the power goes off, there is a possibility of damaging the memory. Change or charge the battery immediately
- If the battery is removed while the phone is on, it may erase last call information.

HOW TO USE THE MENU

- 1 In the standby screen, press and hold [••].
- 2 Use the navigation keys or the volume keys to view the menu
Press and hold down the keys to scroll through the menu
- 3 To go back to previous screen, press [••].
To the exit menu, press [END/P]
- 4 To go into submenu press the corresponding number or select the desired item using the scroll key.
- 5 [••], [•••], and [^ / v / < / > / * / #] can be used while using the menu.

MENU SUMMARY

1:Wireless Web

2:Call History

- 1: Outgoing Calls
- 2: Incoming Calls
- 3: Missed Calls
- 4: Air Time

- 1: Last Call
- 2: Home Calls
- 3: Raom Calls
- 4: All Calls

5: Erase History

- 1: Outgoing Calls
- 2: Incoming Calls
- 3: Missed Calls
- 4: All Calls

3:Phonebook

- 1: Find Name
- 2: New Entry
- 3: My Phone#

4:Schedule

1: Schedule

- 1: Add&List
- 2: Erase

2: To-Do

- 1: Add To-Do
- 2: To-Do List

3: Calulator

4: Stopwatch

5:Sounds

1: volume

- 1: Ringer
- 2: Key Beep
- 3: Earpiece
- 4: Message

- 2: Ring Type
- 3: Ring Mode

MENU SUMMARY

4: Alerts

- 1: Service Alert
- 2: Fade Alert
- 3: Minute Alert
- 4: Roaming Alert

5: BeepLength

6:Setup

- 1 : AutoAnswer
- 2: AutoRetry
- 3: One - Touch
- 4: Privacy
- 5: SIO Config

- 1: port map
- 1: Portmap Diag
- 2: Portmap Data
- 2: DS Baud

7:Security

- 1: Lock Mode
- 2: New Code
- 3: Limit Use
- 4: Emergency #s
- 5: ErasePhonebook
- 6: Reset

8:Display

- 1: Backlight
- 2: Banner
- 3: Contrast
- 4: Version
- 5: Language

 
9:System

- 1: Select
- 2: Force Mode
- 3: Data/Fax

BASIC FUNCTIONS

MAKING A CALL

- 1 Enter the phone number.
How to modify the phone number
You have entered:
To erase the last number entered:
Press [CLR].
To erase all numbers entered and
start again: Press [CLR] and hold
for more than half of a second.

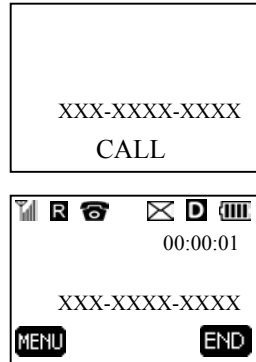


- 2 Press [SEND].
"CALL FAILED" message is displayed
when the call does not connect.
If the line is busy, press [END/P].
Retry by pressing [SEND].
If you select the AUTO RETRY
function, the call will be retried
automatically for the time you
have selected.
Press [END/P] to end the call.

BASIC FUNCTIONS

PAUSE FEATURE

Pauses are used for automated systems (i.e., voice mail and calling cards). To insert Pauses:

 - 1 Enter phone number,
then press [· ·] .

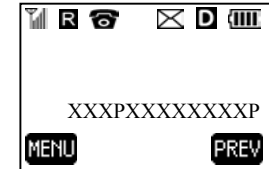

- 2 Select desired pause.

- When idling status; 1 : STORE 2 : BY NUMBER 3: HARD PAUSE 4:ONE HYPHEN	- When Receiving call status; 1:STORE 2:SEND PHONE# 3:SCRATCH PAD 4:MUTE 5:VIEW PHONE# 6:HARD PAUSE 7:ONE HYPHEN 8:VOICE PRIVACY
--	--

Pause Definitions

HARD PAUSE: If you enter the pause character (P).
the number entered after the Pause character will be sent
after the number dialed.

- 3 Press [SEND] to dial or [1] to store.

BASIC FUNCTIONS

HOW TO ANSWER CALLS

1 When phone rings or LED blinks press any key except Volume or up , down.

2 To end the call, press **[END/P]**.

If you set up the AUTO ANSWER function in advance, the call will be answered after the selected number of rings. (Refer to page 22)

CALLER ID FUNCTION

when there is an incoming call, the caller's phone number is displayed on the screen.



The Caller ID number is saved in the call log.

CALL WAITING FUNCTION

This function notifies you there is an incoming call when you are on the phone.

To answer the call, press **[SEND]** when you hear the beep.

To switch back to the first caller, press **[SEND]** again.

BASIC FUNCTIONS

MISSED CALL DISPLAY

1 Displays the number of missed calls and the time the call was missed. The message will be cleared when you press the **[...]** or **[END/P]** key.



HOW TO ADJUST VOLUME

You can adjust the volume in two ways: by using the volume control keys on the side of the handset, or by using the menu.

1 Adjust volume by using the volume control keys during the following operation.

During a Call: Earpiece volume adjustment.

Standby Status : Ringer volume adjustment.

When the Phone Rings : Ringer volume adjustment.

Call status in hands-free : Hands-free volume adjustment. Press **[END/P]** when the phone rings and it will mute the ringer.

VIBRATE

Not an option-needs to be added to the phone.

This function disables the ringer and vibrates the phone any time an incoming call is in process. To enable this function press **[··]**, **[3]**, **[1]** and select VIBRATE or by pressing the “up” and “down” keys at the left upper side of the phone.

FUNCTIONS DURING A CALL

SENDING YOUR NUMBER TO A PAGER

This function enables the phone number of the handset to be transmitted automatically to a pager, depending on pager service.

- 1 After calling a pager, when you are asked to enter your number, press and hold [∅ ∅] then [1] “SEND PHONE #”

SCRATCH PAD

 
- 1 While in a call press and hold [∅ ∅], then [2] “SCRATCH PAD”

- 2 Enter the phone number, then press [∅ ∅]

FUNCTIONS DURING A CALL

MUTE

- 1 Press [∅ ∅], then [3] “Mute”.

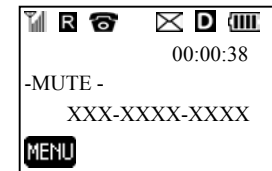

To unmute, press [∅ ∅], then [3] “Mute” again.

CHAPTER 3

MEMORY FUNCTION

- 1 How to Store a Phone Number
- 2 How to Make a Call Using a Stored Phone Number
3. How to Find Your Call Logs
- 4 How to Find Your Phone Book

//the chapter 3 is not corrected yet

HOW TO STORE A PHONE NUMBER

You can store up to 100 frequently used phone numbers in memory.

- 1 Enter the phone number(more 3 digits) you want to store and press [· ·] . then [1] “Store”. The first available Initial empty memory location number is displayed.
If there is no empty location, “MEMORY IS FULL!” is displayed with a warning sound.
If there is a desired memory location number, enter the number.

LOCATION : XX	
XXX-XXXX-XXXX	
STO	PREV

- 2 If the “XX LOCATION IS USED” message appears after entering the memory location number, it means there is another stored phone number in that location already.

XX LOCATION IS USED	
SEL	PREV

- 3 Enter the person's name and press [· ·] .

LOCATION : XX NAME?	
STO	PREV

- 4 Search mobil/office/home type and then press [· ·]

PHONE_NUM	TYPE ?
▶ MOBILE	
SEL	PREV

HOW TO STORE A PHONE NUMBER

- 5 To make secret, select Yes. It can then be displayed only when the lock only code entered.

MAKE SECRET
▶ NO

SEL **PREV**

CHECKING MY NUMBER

This is a function to check the telephone number of the handset currently in use.

- 1 Press [**••**] then [**3**] then [**3**]
(enter [PASSWORD] then [**7**])

DIGITAL 000
000-0000

OK **PREV**

HOW TO STORE A PHONE NUMBER

HOW to enter letters and characters using the dial buttons

1. Select characters you wish to enter using the keypad.

Key Pad	1Repetition	2Repetition	3Repetition	4Repetition	5Repetition
1	l				
2ABC	A	B	C	2	
3DEF	D	E	F	3	
4GHI	G	H	I	4	
:	:	:	:	:	:
9WXYZ	w	x	Y	Z	9

Press [**^**] to toggle between upper and lower case.

When entering special characters such as 0.,?!@_+*=()*#;:/, press [**▼**] repeatedly. The special characters will be displayed in order.

2. Press [**▶▶**] to enter the next character.

Cursor moves to the next column automatically in two seconds after the next character.

3. Repeat until all the characters you want are entered.

You can store up to 16 characters.

4. Erasing Entry:

To erase one letter, press [**CLR**]

To erase the entire entry, press and hold [**CLR**]

HOW TO MAKE A CALL USING A STORED PHONE NUMBER

ONE TOUCH/TWO TOUCH DIALING

This feature allows the phone book entries to be dialed via the keypad.

ONE TOUCH DIALING:

1-9 : Press corresponding memory number and hold for more than 1 second.

TWO TOUCH DIALING:

00, 10-99 : press the first digit and second digits of the memory number short and long respectively.

If no phone number is stored in the location depressed, "Empty Location" will appear on the screen.

If a phone number is stored in the secret location, the number is not displayed when making a call.

 
One touch dialing must be turned on in the handset. See page 34.

HOW TO FIND YOUR CALL LOGS

Your phone can display the 10 most recent missed, incoming, outgoing calls. You can call those numbers without dialing their whole number.


MISSED CALLS

- 1 Press [**••**] then [**2**] then [**1**] then [**1**]
- 2 Press [**••**] to check the detail information about phone number.
The last missed call, its phone number, time and date are displayed.

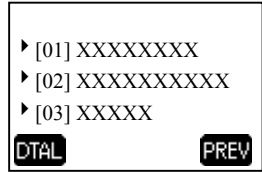

▶ [01] XXXXXXXX
▶ [02] XXXXXXXXXX
▶ [03] XXXXX
DTAL PREV

 - 3 To check your missed calls using the scroll keys:
[◀] Scrolls up the phone numbers.
[▶] Scrolls down the phone numbers.

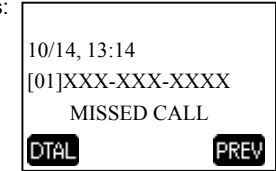

10/14, 13:14
[01]XXX-XXX-XXXX
MISSED CALL
DTAL PREV

- 4 Press [**SEND**] to dial desired missed call number

HOW TO FIND YOUR CALL LOGS

ANSWERED CALLS

- 1 Press [••] then [2] then [1] then [2]. (Refer to previous page)
Press [SEND] to dial desired answered call number
(Refer to previous page)
 - The last answered call, its phone number, time and date are displayed.

DIALED CALLS

- 1 Press [••] then [2] then [1] then [3].
Press [SEND] to dial desired dialed call number (Refer to previous page)
 - The last outgoing call, its phone number, time and date are displayed.

HOW TO FIND YOUR PHONE BOOK

RECALLING BY MEMORY LOCATION NUMBER

- 1 Press [••] then [2] then [2].
- 2 Enter the memory location number.
If you don't enter a specific memory location number, use the scroll key to search from the first memory location number.

SEARCH
LOCATION ?

STO PREV
- 3 Search phone numbers using scroll key.
[▲]/[▼] scrolls up the phone numbers.
[••] edit the phone #.
[⋮] erase the phone #.
[◀]/[▶] search mobil/office/home number.
- 4 Press [SEND] to dial desired phone book number.

HOW TO FIND YOUR PHONE BOOK

RECALLING BY NAME

1 Press [**••**] then [**2**] then [**3**]

2 Enter the alpha (or part of the alpha).
Then press [**••**].

SEARCH
RECALL NAME ?

STO

PREV

3 To locate the phone number using the scroll key.

[**◀**]/[**▶**] search phone number.

[**••**] edit the phone #.

[**...**] erase the phone #.

[**▲**]/[**▼**] search mobil/office/home number

4 Press [**SEND**] to dial

CHAPTER 4

MENU

Please read this chapter before using this product.

1. Setup

2. Display

3. Volume

4. Timers

5. Alerts

SETUP

AUTO ANSWER

This function answers an incoming call automatically after a number of rings that the user sets.

1 Press [**• •**] then [**6**] then [**1**]

2 Select the parameter

 
(off, 1ring, 3 rings, 5rings)

by using the up or down keys.

Press [**• •**] to set.

Auto answer function does not

work if you select lamp.

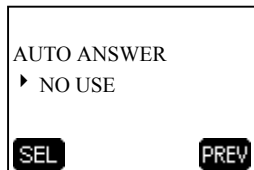

SETUP

AUTO RETRY

When a call is not connected, this function retries the call automatically at a set interval or amount or retries.

INTERVAL

1 Press [**• •**] then [**6**] then [**2**]

2 Select the parameter (OFF, every 10, 20, 30 secs) by using the scroll, Key Press [**• •**].

SETUP

ONE - TOUCH DIAL

This function allows the phone book entries to be dialed via the keypad.

-
- 1 Press [**• •**] then [**6**] then [**3**]
 - 2 Select the parameter(disable, enable)
by using the scroll keys. Press [**• •**].

VOICE PRIVACY

-
- 1 Press [**• •**] then [**6**] then [**4**]
 - 2 Select the parameter (standard, enhanced)
by using the scroll keys. Press [**• •**].

DISPLAY

BACKLIGHT

This function allows you to adjust time to light up the screen, so that you can conveniently use the phone even in dark places

-
- 1 Press [**• •**] then [**8**] then [**1**]
 - 2 Select the parameter
(always off, 10secs, 30secs, always on)
by using the scroll keys. Press [**• •**].

CHECKING THE PHONE VERSION

This function checks the version of the handset currently in use.

-
- 1 Press [**• •**] then [**8**] then [**4**]

PHONE VERSION
SW: XXXXX
HW : XXXX
OK **PREV**

DISPLAY

LCD CONTRAST

This function adjusts the LCD screen contrast

1 Press [**· ·**] then [**8**] then [**3**]

2 Select the contrast level
(highest, high, medium, low, lowest)
by using the scroll keys Press [**· ·**].

BANNER CHANGE

This function changes the banner displayed on the LCD.

You can enter a banner up to 16 characters long.

1 Press [**· ·**] then [**0**]
then [PASSWORD]
then [**3**]



2 Enter a banner using instructions for alpha keys on page 17.

SOUNDS

Ring Mode

1 Press [**· ·**] then [**5**] then [**2**]

2 Select the parameter (Ringing, Vibrating, Ring+Vib, Silent)
by using the scroll keys.
Press [**· ·**].

Ring Type

1 Press [**· ·**] then [**5**] then [**3**]

2 Select the parameter (1-4) by using
the scroll keys.
✕ Different tones (1-6).
✍ Different melodies (7-18).



3 Press [**· ·**]

SOUNDS

Key Beep

- 1 Press [**• •**] then [**5**] then [**1**] then [**2**]
the volume of for keypad

If the warning alarm sounds because of low
battery, the sound will not be heard even if
the user presses the button.

- 2 Select the volume level by using the scroll keys.
Press [**▲**] / side volume up key to increase volume.
Press [**▼**] / side volume down key to lower volume,
or setting to Silent.

- 3 Press [**• •**]

SOUNDS

Minute Alert

- 1 Press [**• •**] then [**5**] then [**4**] then [**3**]
This function sounds an alert in
every minute, letting you know
the call elapse time.

Select the parameter (off, on) by using the
scroll keys. Press [**• •**].

MIN ALERT
▶ SETTING

SEL

PREV

Roaming Alert

This function sounds an alert and gives out a message when the
handset enters a new service area, when it enters another service
area, or when it leaves the user service area.

- 1 Press [**• •**] then [**5**] then [**4**] then [**4**]

ROAM ALERT
▶ SETTING

SEL

PREV

- 2 Select the parameter (off, on) by using the
scroll keys. Press [**• •**].

SOUNDS

Fade Alert

This function sounds alert when the phone can make calls due to poor signal strength during an idle state.

1 Press [**• •**] then [**5**] then [**4**] then [**2**]

FADE ALERT
▶ SETTING

SEL

PREV

2 Select the parameter (off, on) by using the scroll keys. Press [**• •**].

Service Alert

This function sounds alert when the signal of a received call is weak during a call.

1 Press [**• •**] then [**5**] then [**4**] then [**1**]

LOW SIG ALERT
▶ SETTING

SEL

PREV

2 Select the parameter (off, on) by using the scroll keys. Press [**• •**].

Call History

LAST CALL

1 Press [**• •**] then [**2**] then [**4**] then [**1**]

HOME CALLS

1 Press [**• •**] then [**2**] then [**4**] then [**2**]

ROAM CALLS

1 Press [**• •**] then [**2**] then [**4**] then [**3**]

ALL CALLS

1 Press [**• •**] then [**2**] then [**4**] then [**4**]

CHAPTER 5

SECURITY FEATURES

1. How to Lock Your Phone
2. How to Restrict Your Phone
3. How to Reset Your Phone
4. How to Clear Your Phone Memory
5. Memory Clearing Function

Security

LOCK MODE

This function prevents any other person from using the handset without permission. When it is locked, the handset can not be used to dial or use any other function.

- 1 Press [**• •**] then [**7**] then enter [Lock Code] then [**1**]

The default password is the last 4 digits of your phone number.

AUTO LOCK ?
▶ OFF

SEL

PREV

- 2 Select the parameter (never, on power up, now) parameter by using the scroll keys. Press [**• •**].

"POWER ON?" locks the handset upon powering.

"OFF?" unlocks the handset and leaves it unlocked.

Incoming calls, emergency dialing and alarm functions are enabled when the handset is locked.

Security

NEW CODE

This function is used to change the 4-digit lock code.

-
- 1 Press [**• •**] then [**7**] then enter
[Lock Code] then [**2**]

The default password is the last 4 digits of
your phone number.

-
- 2 Enter 4-digit new "Lock Code".

-
- 3 Re-enter the new "Lock Code". Press [**• •**].

-
- 4 The display will read "Lock Code changed".

Security

HOW TO RESTRICT YOUR PHONE

RESTRICTION FUNCTIONS

You can restrict six different functions

- 1 Press [**0**] then [**0**] then enter [PASSWORD] then [**4**].
The default password is the last 4 digits of your phone number.

RESTRICT ?
▶ YES

SEL

PREV

- 2 Using the scroll buttons, select "YES"
Press [**0**].

TO RESTRICT INCOMING CALLS

When this function is enabled, the phone does not respond to incoming calls. However, outgoing calls can still be made.

- 1 Press key [**1**] "INCOMING"
- 2 Select the parameter by using the scroll keys.
RESTRICT: to restrict incoming calls.
ALLOW: to allow incoming calls.

INCOMING ?
▶ ALLOW

SEL

PREV

- 3 Press [**0**].

HOW TO RESTRICT YOUR PHONE

RESTRICTING OUTGOING CALLS

When this function is enabled, incoming calls can be answered, but outgoing calls cannot be made. It is still possible to make emergency calls.

- 1 Press key [**2**] "OUTGOING?"

OUTGOING ?
▶ ALLOW

SEL

PREV

- 2 Select the parameter by using the scroll keys.
RESTRICT: to restrict outgoing calls.
ALLOW: to allow outgoing calls.

- 3 Press [**0**].

RESTRICTING THE PHONE BOOK

This function blocks the storage of phone numbers or the use of stored phone numbers.

- 1 Press key [**3**] "MEMORY ONLY"
The default password is the last digits of your phone number.

MEMORY ONLY ?
▶ ALLOW

SEL

PREV

- 2 Select the parameter by using the scroll keys.
RESTRICT: restricts phone book.
ALLOW: allows phone book use.

- 3 Press [**0**].

HOW TO RESTRICT YOUR PHONE

RESTRICTING LONG DISTANCE CALLS

1 Press key [4] "LONG DISTANCE"

2 Select the parameter by using the scroll keys.

RESTRICT: restricts long distance calls.

ALLOW: allows long distance calls.

LONG DISTANCE ?
▶ ALLOW

SEL

PREV

3 Press [· ·].

RESTRICT CALLS TO 900 NUMBERS

1 Press key [5] "900 #'s"

2 Select the parameter by using the scroll keys.

RESTRICT: restricts 900 service.

ALLOW: allows 900 service.

900#'S ?
▶ ALLOW

SEL

PREV

3 Press [· ·].

*The message "THIS Phone's RESTRICTED" is
displayed on the screen.*

HOW TO RESET YOUR PHONE

This function resets each value set in the memory to its default value.

1 Press [· ·] then [0] then
[PASSWORD] then [5].

RESET SETTING ?
▶ NO

SEL

PREV

2 Select the parameter by using the scroll

keys. Press [· ·].

If you select "YES" the
following screen is displayed,
and then the phone will be
automatically turned off.

HOW TO CLEAR YOUR PHONE MEMORY

CLEARING STORED PHONE NUMBERS

This function clears all stored numbers.

- 1 Press [**• •**] then [**0**] then enter
[PASSWORD] then [**6**] then [**1**].
The default password is the last 4
digits of your phone number.

CLR PHONE NO ?
▶ NO

SEL

PREV

- 2 Select the parameter (NO, YES) by
using the scroll keys. Press [**• •**].

CLEARING SCHEDULES

This function clears air time used in other service areas

- 1 Press [**• •**] then [**0**] then enter
[PASSWORD] then [**6**] then [**2**].
The default password is the last 4
digits of your phone number.

CLR SCHEDULE?
▶ NO

SEL

PREV

- 2 Select the parameter (NO, YES) by
using the scroll keys. Press [**• •**].

MEMORY CLEARING FUNCTION

CLEARING DIALED NUMBER IN CALLLOGS

This function clears dialed number in call logs

- 1 Press [**• •**] then [**0**] then enter
[PASSWORD] then [**6**] then [**3**].
The default password is the last 4
digits of your phone number.

CLR CALL LOGS?
▶ NO

SEL

PREV

- 2 Select the parameter (NO, YES) by
using the scroll keys. Press [**• •**].

CLEARING AIR TIME IN HOME SERVICE AREA

This function clears air time used in home service area

- 1 Press [**• •**] then [**0**] then enter
[PASSWORD] then [**6**] then [**4**].
The default password is the last 4
digits of your phone number.

CLR HOME?
▶ NO

SEL

PREV

 
- 2 Select the parameter (NO, YES) by
using the scroll keys. Press [**• •**].

MEMORY CLEARING FUNCTION

CLEARING ROAM CALLS

This function clears air time used in other service areas

- 1 Press [**• •**] then [**0**] then enter
[PASSWORD] then [**6**] then [**5**].
The default password is the last 4
digits of your phone number.

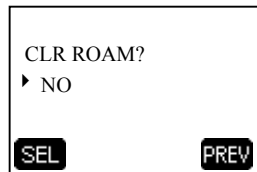

- 2 Select the parameter (NO, YES) by
using the scroll keys. Press [**• •**].

CHAPTER 6

SUPPLEMENTARY FUNCTIONS

 
2. Stopwatch
3. Calculator

SCHEDULE

STOPWATCH

1 Press [$\cdot \cdot$] then [4] then [4].

2 Press [$\cdot \cdot$]/[$\cdots$] to control the stopwatch.
 [$\cdot \cdot$] controls Start / Stop
 [$\cdots$] controls SPLIT/ INIT/ REL/ DONE
 The time unit displayed on the LCD in
 1/ 100 of a second.

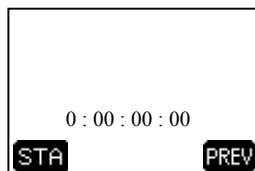

3 Press [END] to exit
 and return to the initial display.

SCHEDULE

CALCULATION

1 Press [$\cdot \cdot$] then [4] then [3].

2 Using the calculator.

Definitions

 
+ : [$\wedge$], - : [∇], $\times$: [$\triangleright$], $\div$: [$\triangleleft$],
 = : [$\cdot \cdot$], . : [$*$], +/- : [$\#$]

Up to 7 integer digits and up to 2 decimals

Can be displayed. If the calculated result
 has more than 7 digits, the result is displayed
 in 7 digit logarithm.

To express a negative number, press [$\#$] key

To initiate the calculation press [$\cdot \cdot$]

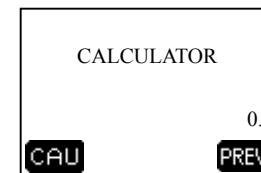

EXAMPLE

To calculate $128 \times 32 =$

1. Enter 128
2. Press [$\triangleright$]
3. Enter 32
4. Press [$\cdot \cdot$]

CHAPTER 7

VOICE MAIL AND TEXT MESSAGES

This chapter describes convenient functions that allow you to check voice mail and receive text messages with the handset.

1. Receiving a Message
2. Checking Received Message
3. Sending Message
4. Direct View
5. Bell Type

RECEIVING A MESSAGE

 
DIRECT VIEW SET

- 1 When message is received, displays the following message.
[▲][▼] [◀][▶] - display text
[·] - delete message



DIRECT VIEW RELEASE

- 1 When message is received, displays the following message.
You can view the message
in the sms menu

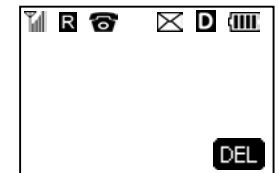

CHECKING RECEIVED MESSAGE

CHECKING RECEIVED VOICE MAIL MESSAGE

1 Press [...].

2 Press **[1]** "VOICE MAIL"
It displays the number of voice
mail messages currently received
in your voice mailbox.
To access your voice mailbox,
press **[SEND]**.

CHECKING RECEIVED MESSAGE

CHECKING RECEIVED TEXT MESSAGE

1 Press [...] then press **[2]** "TEXT MAIL"

2 To read new mail, press **[1]**
Then press **[· ·]** and you can view the details.
To read stored mail, press **[2]**
To erase stored mail, press **[3]**

Maximum number of messages : 22

1: XX NEW TEXT
2: XX STORED TEXT
3: ERASE STORED

PREV

01 : ABCEF
02: 333333
03: HI..

DTAL

DEL

● TEXT MESSAGE ●
ABCDEFGHIJKL.....

STO

DEL

SENDING MESSAGE

SENDING MESSAGE

1 Press [...] then press [3] "SEND MAIL"

2 For receiving phone number, press [1]..
Then press [INP]

RECEIVER NUM.?

INP

PREV

3 To write message, press [2].
Then press [STO].

MESSAGE?

STO

PREV

4 To send your phone number, press [3]
Then press [INP].

SENDER NUM?

000000000000

INP

PREV

5 Then press [SEND] to send message.
When displayed 'MESSAGE IS SENT',
succeed.

DIRECT VIEW

DIRECT VIEW SETTING

When text message is received, displays text directly on the screen

1 Press [...] .then press [4]

2 Select the parameter (SETTING/ RELEASE)
by using the scroll keys.
Press [· ·].

DIRECT VIEW
▸ SETTING

SEL

PREV

 
BELL TYPE

BELL TYPE SETTING

When text message is received, sounds selected bell.

1 Press [...] .then press [5]

2 Select the parameter
(ringer, vibrator, silent)
by using the scroll keys.
Press [· ·].

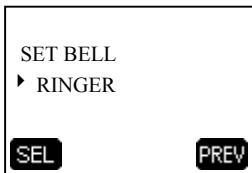

CHAPTER 8

 
MAKING AN EMERGENCY CALL

Making an Emergence call


This is the enhanced 911 feature.

E911 IN LOCK MODE


- 1 Enter 911 and press **[SEND]**.

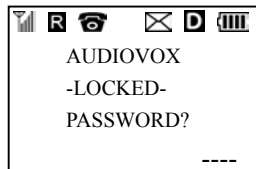

 - ☐ When a call ends, the phone returns to the emergency mode.

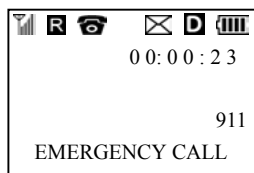

 
- 2 Reserve Emergency mode during 5 minutes.

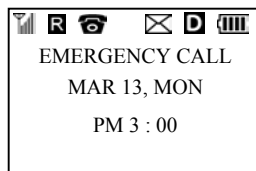


Making an Emergence call

E911 USING ANY AVAILBLE SYSTEM

 
- 1 Enter 911 and press **[SEND]**.

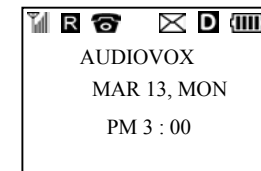

 - ☐ When a call ends, the phone returns to the emergency mode.
- ☐ The phone tries to make an emergency call using any available system.

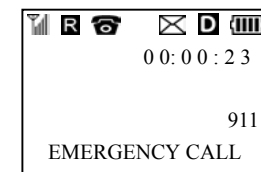

 - 2 Reserve Emergency mode during 5 minutes.

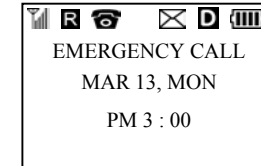

CHAPTER 9

SAFETY

SAFETY INFORMATION FOR WIRELESS HANDHELD PHONES
--

Read This Information Before Using Your Handheld Portable Cellular Telephone

EXPOSURE TO RADIO FREQUENCY SIGNALS

Your wireless handheld portable telephone is a low power radio transmitter and receiver. when it is ON, it receives and also sends out radio frequency (RF) signals.

In August, 1996, the Federal Communications Commissions (FCC) adopted RF exposure guidelines with safety levels for handheld wire-less phones. Those guidelines are consistent with the safety standards previously set by both U.S. and international standards bodies:

ANSI C95.1 (1992) *

NCRP Report 88 (1986) *

ICNIRP (1996) *

Those standards were based on comprehensive and periodic evaluations of the relevant scientific literature. For example, over 120 scientists, engineers, and physicians from universities, government health agencies, and industry reviewed the available body of research to develop the ANSI Standard (C951).

The design of your phone complies with the FCC guidelines (and those standards).★ ;

American National Standards Institute;

National Council on Radiation protection and measurements;

International Commission on Nonionizing Radiation Protection.

ANTENNA CARE

Use only the supplied or an approved replacement antenna.

Unauthorized antennas, modifications, or attachments could damage the phone and may violate FCC regulations.

SAFETY INFORMATION FOR WIRELESS HANDHELD PHONES

DRIVING SAFETY

Talking on the phone while driving is extremely dangerous and is illegal in some states. Remember, safety comes first. Check the laws and regulations on the use of phones in the areas where you drive. Always obey them.

Also, if using your phone while driving please:

Give full attention to driving. Driving safety is your first responsibility.

Use hands-free operation, if available.

Pull off the road and park before making or answering a call, if driving conditions require.

If you must use the phone while driving, please use one-touch, speed dialing, and auto answer modes.

An airbag inflates with great force. DO NOT place objects, including both installed or portable wireless equipment, in the area over the airbag or in the air bag deployment area. If in-vehicle wireless equipment is improperly installed and the air bag inflates, serious injury could result.

WARNING: Failure to follow these instructions may lead to serious personal injury and possible property damage.

SAFETY INFORMATION FOR WIRELESS HANDHELD PHONES

ELECTRONIC DEVICES

Most modern electronic equipment is shielded from RF energy.

However, certain electronic equipment may not be shielded against the RF signals from your wireless phone.

Pacemakers

The Health Industry Manufacturers Association recommends that a minimum separation of six (6) inches be maintained between a hand-held wireless phone and a pacemaker to avoid potential interference with the pacemaker. These recommendations are consistent with the independent research by and recommendations of Wireless Technology Research.

If you have a pacemaker:

ALWAYS keep the phone more than six inches from your pace-maker when the phone is turned on.

Do not carry the phone in a breast pocket.

Use the ear opposite the pacemaker to minimize the potential for interference.

If you have any reason to suspect that interference is taking place, turn your phone OFF immediately.

Hearing Aids

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may want to consult your service provider (or call the customer service line to discuss alternatives).

SAFETY INFORMATION FOR WIRELESS HANDHELD PHONES

ELECTRONIC DEVICES

Other Medical Devices

If you use any other personal medical device, consult the manufacturer of your device to determine if they are adequately shielded from external RF energy. Your physician may be able to assist you in obtaining this information.

Turn your phone OFF in healthcare facilities when any regulations posted in these areas instruct you to do so. Hospitals or healthcare facilities may be using equipment that could be sensitive to external RF energy.

Vehicles

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles. Check with the manufacturer or its representative regarding your vehicle. You should also consult the manufacturer of any equipment that has been added to your vehicle.

Posted Facilities

Turn your phone OFF where posted notices so require.

SAFETY INFORMATION FOR WIRELESS HANDHELD PHONES

OTHER SAFETY GUIDELINES

Aircraft

FCC Regulations prohibit using your phone while in the air. Switch OFF your phone before boarding an aircraft.

Blasting Areas

To avoid interfering with blasting operations, turn your phone OFF when in a "blasting area" or in areas posted: "Turn off two-way radio" Obey all signs and instructions.

Potentially Explosive Atmospheres

Turn your phone OFF when in any area with a potentially explosive atmosphere and obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death. Areas with a potentially explosive atmosphere are often, but not always, clearly marked. They include fueling areas such as gas stations; below deck on boats; fuel or chemical transfer or storage facilities; vehicles using liquefied petroleum gas (such as propane or butane); areas where the air contains chemicals or articles, such as grain, dust, or metal powders; and any other area where you would normally be advised to turn off your vehicle engine.

SAFETY INFORMATION FOR WIRELESS HANDHELD PHONES

PRECAUTIONS

Your Handheld Portable Telephone is a high quality piece of equipment. Before operating the equipment, read all instructions and cautionary markings on (1) AC Adaptor (2) Battery and (3) Product Using Battery.

1. DO NOT use this equipment in an extreme environment where high temperature or high humidity exists.
2. DO NOT abuse the equipment. Avoid striking, shaking or shocking. When not using the unit, lay down the unit to avoid possible damage due to instability.
3. DO NOT expose this equipment to rain or spilled beverages.
4. DO NOT use unauthorized accessories.
5. DO NOT disassemble the phone or its accessories. If service or repair is required, return unit to an authorized audiovox cellular service center. If unit is disassembled, the risk of electric shock or fire may result.
6. DO NOT short-circuit the battery terminals by metal items etc

SAFETY INFORMATION FOR WIRELESS HANDHELD PHONES

WARNING

The following offenses are punishable by fine, imprisonment, or both:

Using obscene, indecent, or profane language.

Using the unit to give off false distress calls.

Wiretapping or otherwise intercepting a telephone call, unless that person has first obtained the consent of the parties participating in the call.

Making anonymous calls to annoy, harass, or molest other people.

Charging to an account without authorization to avoid payment for service.

Refusing to yield a party line when informed that it is needed for an emergency call (It is also unlawful to take over a party line by stating falsely that it is needed for an emergency).