

1. When separated, the receiver will sound one long beep and follow one long & one short beeps, the LED on both receiver side and transmitter side will flash synchronously, then you can begin to use them.(When they cannot flash synchronously, it means this turn on procedure is fail, please repeat this operation 1. Again!).
2. Under normal operation, when the effective distance (about 5 to 10 meters) between the receiver and the transmitter is exceeded, the receiver's alarm will alert continuously per second.