 
 
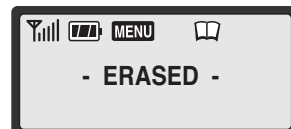 


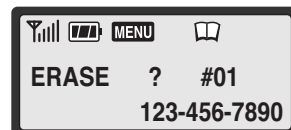

ERASING A NUMBER IN MEMORY

To Erase a Specific Number

 
- 1 Press (2) (Phone book), (3) (Erase), (3) (Memory)
- 2 Press one of search options, (1) (Name) or (2) (Number) or (3) (memory)
- 3 Enter name, address or phone number according to search option.
- 4 Select item to erase by pressing or , and press .
NOTE: 'ENTER LOCK CODE' appears when you try to access secretly saved number.
 Enter the lock code and press .
5. Press again to erase.
6. Press again to confirm erase.
 To cancel, press .

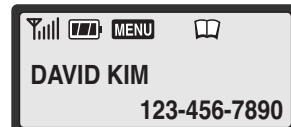

ERASING ALL NUMBER IN MEMORY

To Erase All Numbers in Memory


- 1 Press (6) (Security)
- 2 Enter lock code
NOTE: Lock code is set as 0000 from the factory.
 You can change lock code (see page ??)
- 3 Press (4) (Clear Memory)

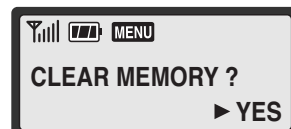



4 Select YES by pressing or , .

 5 Press to confirm.

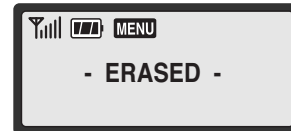



ONE-TOUCH CALLING

Memory locations 01 ~ 09 are special one-touch dialing locations. You can dial the numbers stored in 01~09 by pressing just one key.

1 Pick up the handset or press .

2 Press and hold the number of the location (1~9) containing the number to be called.

  3 The name and number displays and dials automatically.

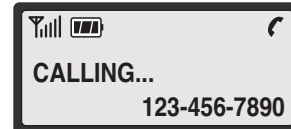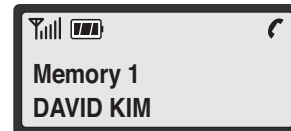


TWO-TOUCH CALLING

1 Pick up the handset or press .

2 Briefly press the first digit of the memory location number, then press the second digit and hold it down for a moment.

Example) To dial location 23, briefly press the , then press and hold for a moment.

 3 The number stored displays and dials automatically.

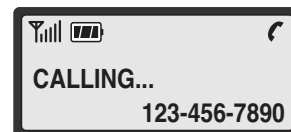

NOTE1: When you try one-touch or two-touch calling of the number secretly saved, the phone will prompt Lock code entry. Enter lock code to make a call.

NOTE2: 'EMPTY LOCATION' displays when you try One-touch or two-touch calling with empty location number.



Useful Features




- Call Logs**
- Display Your Phone Number**
- Mute Silent Scratchpad**
- Sending Your Phone Number**
- Selecting Time Mode**
- Setting the Alarm**
- Checking and Clearing Call Times**
- Setting Warning Beeps**



C ALL HISTORY


Your phone stores the last 10 outgoing calls and the last 10 incoming calls (only when Caller ID function is activated). You can display and redial these numbers.




Redialing Outgoing Calls



1 Press ,  (Call History),  (Outgoing).

NOTE: If there's no out going call history, "OUTGOING CALL MEMORY EMPTY!" displays.

2 Press  or ,  to select number to redial.




3 Press  to redial the number.

NOTE1: Press  to see time and date of the call made. Then press  to redial the number or press  again to save the number in memory.

NOTE2: To redial the last number called, just pick up the handset or press ,  press .


Returning Incoming Calls


 

To display a list of recently received calls.

1 Press ,  (Call History),  (Incoming).



NOTE: If there's no incoming call record, "INCOMING CALL MEMORY EMPTY!" displays.

2 Press  or ,  to select number to redial.

3 Press  to call back the number.

NOTE1: Press  to see time and date of the call arrival. Then press  to redial the number or press  again to save the number in memory.

  NOTE2: Incoming history is available only when caller ID is activated.

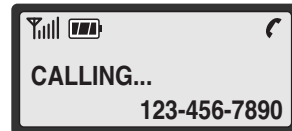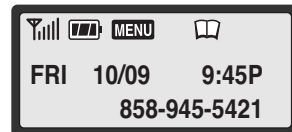




Erasing All Numbers in Call History

1 Press  (6) (Security)

 
 
2 Enter lock code

NOTE: Lock code is set as 0000 from the factory.
You can change lock code (see page ??)

3 Press (8) (Erase Logs)

4 Select YES by pressing  or , .

5 Press  to confirm.

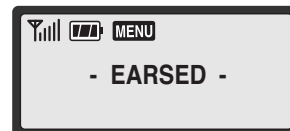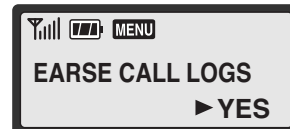

DISPLAYING PHONE NUMBER

You can display your own phone number.

 
Displaying Phone Number

1 Press  (6) (Security)

2 Enter lock code

NOTE: Lock code is set as 0000 from the factory.
You can change lock code (see page ??)

4 Press (7) (My Phone #)

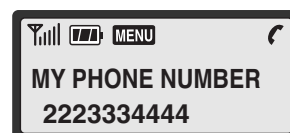


MUTE


This feature lets you mute the microphone, so that the other party cannot hear your voice or the sound of your surroundings. This function is available only during conversation.

1 Press  (1) (Mute) during conversation.

 The message 'MUTE' blinks to indicate the function

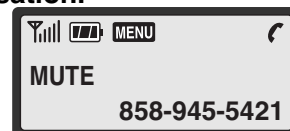






Is working. The other party can no longer hear you, but you can hear them.
2 Press , (1) again to resume the conversation..

SILENT KEYPAD

You can check your own phone number or save a number during a conversation without transmitting the dial tones to the other party. This function is available only during a telephone conversation.

 - 1 Press , (2) (Silent Key) during conversation. 'SILENT KEY' blinks to indicate the function is working.
- 2 Press , (2) again to disable the feature.

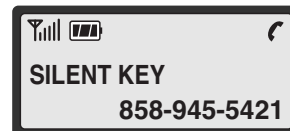


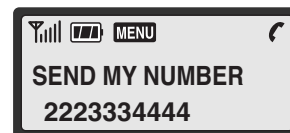 
NOTE: With SILENT KEY function on, you cannot response to ARS (Automatic Response System).

SENDING YOUR PHONE NUMBER


 
 
 
When you're prompted to enter your phone number by ARS, you can conveniently transmit your number by pressing two keys instead of the entire number.

If 'SILENT KEY' is set, you cannot use this feature. This function is available only during a telephone conversation.

- 1 When you're prompted to enter your phone number press , (3) (Send My #)
- 2 Your phone number is transmitted automatically.














S ELECTING TIME MODE

 
 
- 1 Press , **3** (Time), **5** (Time Mode).
- 2 Select time display mode by pressing  or .
- AM/PM: Display 0~12 hours with A or P indicator
- 24 Hour: Display 00~24 hours
- 3 Press  to save change.






 
S ETTING THE ALARM

You can set the alarm sound daily or one time only.

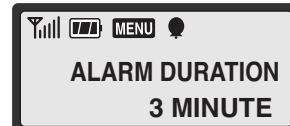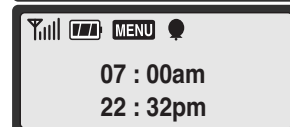- 1 Press , **3** (Time), **1** (Alarm).
- 2 Select "SET" by pressing  or  and press .
- 3 Enter alarm time and press .
- 4 Select alarm mode by pressing  or  and press .
Daily: Alarm sounds daily.
One time: Alarm sounds once.
- 5 Enter the duration of the alarm by pressing  or  and press  ..
A bell icon (alarm) appears in icon line.
On alarm time, the icon and "ALARM TIME" message blinks and alarm goes off.
The alarm stops if you touch any button.



Canceling the Alarm Time

- 1 Press , **3** (Time), **1** (Alarm).
- 2 Select "RELEASE" by pressing  or  and press . Bell icon displays and the alarm is set.

 


CHECKING AND CLEARING CALL TIMES




Checking the Last Call Time

- 1 Press , **3** (Time), **2** (Last Call).
- 2 Press to clear the display.

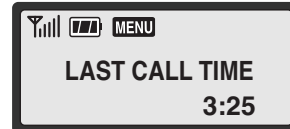


Checking Accumulated Air Time of Incoming Calls

 - 1 Press , **3** (Time), **3** (Air Time), **1** (Incoming).
- 2 Press to clear the display.

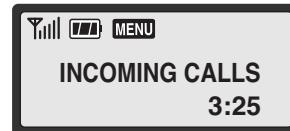

Checking Accumulated Air Time of Outgoing Calls

 - 1 Press , **3** (Time), **3** (Air Time), **2** (Outgoing).
- 2 Press to clear the display.

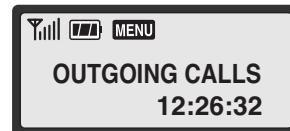

Reset Accumulated Air Time

- 1 Press , **3** (Time), **4** (Clr Air Time).
- 2 Select "YES" by pressing or , **#** and press .







SETTING WARNING ALERT

You can set your phone to sound warning beeps that indicate:

- each minute you are on a phone call
- when you are out of the service area





Setting/Releasing 1 Minute Alert

- 1 Press , **4** (Sound), **4** (1 Min Alert).
- 2 Select ON or OFF by pressing  or , **#**.
- 3 Press .

 
NOTE: When 1 minute alert is set, the phone gives alert sound each minute while you are on a phone call.



Setting/Releasing Service Alert

- 1 Press , **4** (Sound), **5** (SVC Alert).
- 2 Select ON or OFF by pressing  or , **#**.
- 3 Press .

NOTE: When service alert is set, the phone gives alert sound when the phone is acquiring or losing service signal.

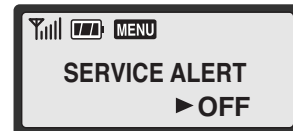



Advanced Feartures

- Changing Greeting Message**
- System Reset**
- Restricting Use of the Phone**
- Locking the Phone**
- Changing the Lock Code**
- Tone Length and Back Light**

CHANGING GREETING MESSAGE


This feature lets you change the greeting message that the phone displays while it's standby.

1 Press  (6) (Security).


2 Enter lock code.

NOTE: Lock code is set as 0000 from the factory.
To change lock code (see page ??)

3 Press (1) (Greeting). Current greeting displays.

4 Press  to change greeting.

 
5 Enter your new greeting message by pressing the alphanumeric keys.

NOTE: Press  to switch between capital and lower case letters.

Example) To enter "My Phone",

Press  (6)  (9)  (9)  (9)  (#)  (7)  (4)  (4)  (6)  (6)  (6)  (3)  (3)

6 Press  to save change.

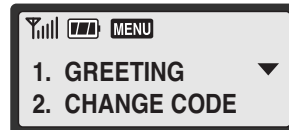

SYSTEM RESET




To reset your phone to the manufacturer's defaults, follow these steps:

1 Press  (2) (Security).

2 Enter lock code.

NOTE: Lock code is set as 0000 from the factory.
To change lock code (see page ??)

3 Press (5) (Reset Phone).

4 Select "YES" by press  or , .

5 Press .

'PHONE INITIALIZATION' blinks while the phone is reset.






RESTRICTING USE OF THE PHONE





You can restrict the use of the phone by unauthorized persons.

Restricting Outgoing Calls

 
 
 
- 1 Press  (6) (Security).
- 2 Enter lock code.

NOTE: Lock code is set as 0000 from the factory.






To change lock code (see page ??)

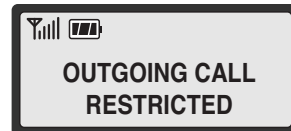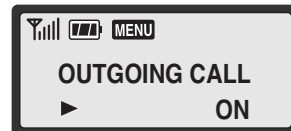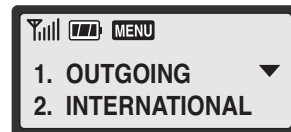- 3 Press (3) (Restrict), (1) (Outgoing).
- 4 Select "ON" by pressing  or , .
- 5 Press  to save change.

 
In this mode, when you try to call, 'OUTGOING CALL RESTRICTED' displays and no outgoing call goes through.








Restricting International Calls

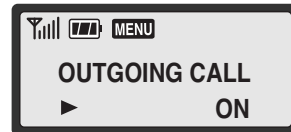- 1 Press  (6) (Security).
- 2 Enter lock code.
- 3 Press (3) (Restrict), (2) (International).
- 4 Select "ON" by pressing  or , .
- 5 Press  to save change.



In this mode, when you try to make an international call (headed by 00), 'INT'L CALL RESTRICTED' displays and no international call goes through.



   Restricting Long Distance Calls



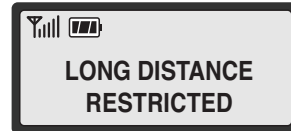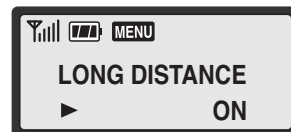

- 1 Press  (6) (Security).
- 2 Enter lock code.
- 3 Press (3) (Restrict), (3) (Long Distance).
- 4 Select "ON" by pressing  or , .
- 5 Press  to save change.

 
In this mode, when you try to make an international call (headed by 00), 'INT'L CALL RESTRICTED' displays and no international call goes through.



LOCKING / UNLOCKING THE PHONE

You can lock your phone so that calls cannot be made by unauthorized persons. You can still receive incoming calls. Turning the phone off does not erase this feature; the phone stays in mode until you reset it.

- 1 Press  (6) (Security)
- 2 Enter lock code
- 3 Press (6) (Auto Lock)
- 5 Select "ON" or "OFF" by pressing  or .
- 6 Press  to save the change.

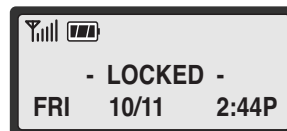


NOTE1: When locked, the phone display ?LOCKED-.

NOTE2: When locked, you have to enter lock code first to make a call.


NOTE3: You can still receive incoming calls.

CHANGING THE LOCK CODE

 
 
The lock code is preset to 0000 from the factory. You can change the lock code to any 4 digit numbers.

- 1 Press  (6) (Security)
- 2 Enter lock code
- 3 Press (2) (Change Code)
- 4 Enter your new lock code.

NOTE: The lock code must be four numeric digits.

- 5 Press .
- 6 Re-enter new lock code for verification
7. Press to confirm.

NOTE: 'CODE NOT MATCHED TRY AGAIN!' displays if the confirmation entries do not Match previous entries.

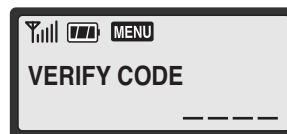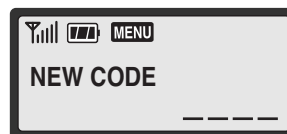



TONE LENGTH AND BACK LIGHT



Tone Length

Some ARS you call may be able to recognize only long tones.

You may have to change the tone length to LONG.

 
- 1 Press , (5) (Auto Setup), (1) (tone Length)
2. Select "NORMAL" or "LONG" by pressing or , .
- 3 Press to save the change.



Back Light

You can control the length of back lighting of the display and the keypad.

1. Press , (5) (Auto Setup), (2) (Back light)
2. Select "8 SECONDS" or "ALWAYS OFF" by pressing or , .
- 3 Press to save the change.

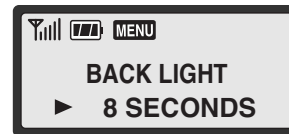

8 SECONDS: The light goes off automatically 8 seconds after you turn on the phone or press the last key.

Always OFF: The light never comes on.

NOTE: This setting is in effective only when the phone is Operating with battery power only. When adapter power is connected, the back light will be on always.



Optional Features

- Call Forwarding**
- Call Waiting**
- Three-way Calling**
- Message Service**





Call Forwarding

Call Forwarding is a feature that lets you forward your incoming calls to another phone number, even if your phone is turned off or is in no service area.

Contact your service provider to activate Call Forwarding.

 

Call Waiting

Call Waiting alerts you to a second incoming call while you are on the phone. When there's another incoming call, you will hear warning beep. To respond to the call waiting, press  or hit shortly the hook switch once. Pressing

 again or hitting the hook again will let you go back to the first call.

Contact your service provider to activate Call Waiting.

Three-Way Calling











Three-Way Calling is a feature that lets you set up a three-way conversation with two different parties. While you're in conversation with a party, hit  or the hook switch and place another call with the third party. Then press  or hit the hook switch again to connect the three parties together.

Contact your service provider to activate Three-Way Calling.


Message Service

Message Service is network dependent feature and is available only when your service provider supports it. Check your service provider is providing message service before using this function.

Sending New Text Messages





 

 
 

- 1 Press ,  (Send MSG),  (New).
 - 2 Enter destination number and press .
 - 3 Write message using the alphanumeric keypad and press .
- Note:** See page 19 to see how to edit text.
- 4 Your phone number is displayed as call back number.
You can change call back number. Press .
 - 5 Select message type with  or ,  and press .





Note: Emergency messaging is available only when your service provider support it.

- 6 Press  to send the message.

Note: Sent messages are automatically saved for retransmission later.

Sending Saved Text Messages

    - 1 Press ,  (Send MSG),  (Saved MSG).
- 2 Select message to resend with  or ,  and press .
- 3 To send the message again, press .
To edit the message press  and go to step 2 above.

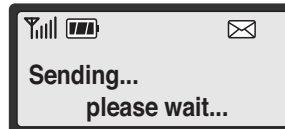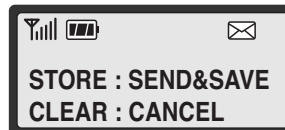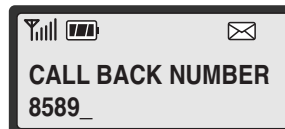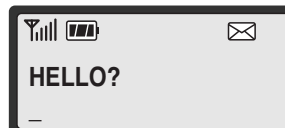



Retrieving Text Message

 
 
 
 
 
- 1 When text message arrives, 'TEXT MESSAGE ARRIVED' displays shortly and appears in the icon line.
 - 2 Press , **2** (Txt Message).
 - 3 Press or , **#** to select message you want to see and press .
 - 4 The message, arrival time and call back number (if available) show up. If the message is long, it will be scrolled down in 3 seconds automatically.
To scroll up and down manually, press or , **#** .
 - 4 If the message contains call back number, press if you want to call back.
- Note : If the call back number is stored in the phone book with a name, the name will display instead of the phone number.

Delete Selected Text Message

- 1 Press , **2** (Txt Message).
- 3 Press or , **#** to select message you want to delete and press .
- 4 Press again
- 4 Select YES with or , **#** and press .

Retrieving Voice Messages


- 1 When voice messages arrive, '--VOICE MAIL ARRIVED!--' shortly appears and appears in the icon line.
- 2 Press , **1** (Voice Mail).
The number of unheard messages and the last message arrival time and date shows.
- 3 Press **0** and hold to retrieve messages.

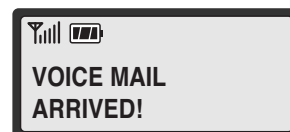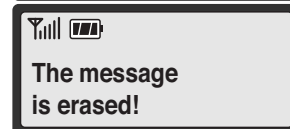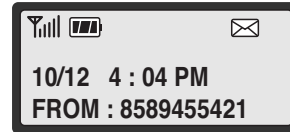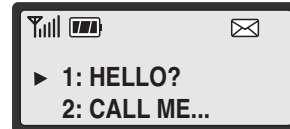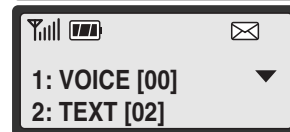



Erasing All Message

 - 1 Press **MESSAGE**, **4** (Erase MSG), **2**.
- 2 Select YES with **ENTER** or **←***, **#>**.
- 3 Press **STORE**.

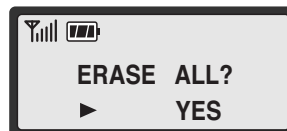

Setting/Releasing Message Lock

- 1 Press **MESSAGE**, **5** (MSG Option), **1** (MSG Lock).
- 2 Select ON or OFF with **ENTER** or **←***, **#>**.
- 3 Press **STORE**.

While message lock is set, the phone will ask Lock Code whenever you try to retrieve messages.



Setting/Releasing Message Alert

- 1 Press **MESSAGE**, **5** (MSG Option), **2** (MSG Alert).
- 2 Select ON or OFF with **ENTER** or **←***, **#>**.
- 3 Press **STORE**.

While the message alert is set, the phone goes off alert when messages arrive.



DATA Call Service

AXW-P800V and AXW-P1900V do not support data call.

Data Call Service is network dependent feature and is available only when your service provider supports it. Check your service provider is providing message service before using this function.



Connecting to your PC

- 1 Connect the phone to your PC with the Axesstel data cable. The cable is sold separately. You can choose one of the two cables; USB cable or 9pin serial cable according to your PC configuration.

TO be added in Korea.



Miscellaneous

Menu Option Table

Conversation and Message Menu

Specifications



MEMU OPTION TABLE

I	II	III	Explanation	
1:CALL HISTORY	1: OUTGOING		Stores ten phone numbers called most recently	
	2: INCOMING		Stores ten phone numbers of calls received most recently	
2:PHONE BOOK	1: SEARCH	SEARCH OPTION NAME / NUMBER / MEMORY	Used when searching for a phone number in the phone book by name/number/ stored memory number	
	1: STORE		Used when storing a phone number and name in the phone book	
	1: ERASE	SEARCH OPTION NAME / NUMBER / MEMORY	Used when erasing a phone number in the phone book	
3:TIME	1: ALARM	RELEASE / SET	Set/Release alarm	
	2: CALL TIME		Shows the time of last call made	
	3: AIR TIME	1: OUTGOING		Shows accumulated outgoing call time
		2: INCOMING		Shows accumulated incoming call time
	4: CLR AIR TIME	CLEAR AIR TIME YES / NO	Resets accumulated call time	
	5: TIME MODE	TIME MODE AM/PM / 24 H	Selects time display mode	
4:SOUND	1: RING	RING ON/OFF	Determines whether the phone alerts the incoming call with sound or only with message.	
	2: RING TYPE	RING TYPE STANDARD + 8 TYPES	Selects ring type	
	3: RING VOLUME		Adjusts the ring volume	
	4: 1 MIN ALERT	1 MIN ALERT ON / OFF	On/Off beep at one minute intervals when you're on conversation.	
	5: SVC ALERT	SERVICE ALERT ON / OFF	On/Off beep when the phone is getting out of or entering service area	
	6: ALARM TYPE	ALARM TYPE STANDARD + 8 TYPES	Selects alarm sound	
5:AUTO SET UP	1: TONE LENGTH	TONE LENGTH NORMAL / LONG	Sets length of tone (when DTMFnumber is sent) to short or long	
	2: BACK LIGHT	BACK LIGHT 8 SEC / ALWAYS OFF	Sets LCD and keypad lights on or off	
6:SECURITY	1: GREETING		Used to change greeting	
	2: CHANGE CODE	TIME MODE AM/PM / 24 H	Used to change lock code	
	3: RESTRICT	1. INT'L CALL		Used to limit international call
		2. LONG DIST.		Used to limit long distance calls
	4: CLR MEMORY	CLEAR PHONE BOOK NO/YES	Erases all numbers in memory	
	5: RESET PHONE	RESET PHONE NO/YES	Returns the phone to factory setting	
	6: AUTO LOCK	AUTO LOCK OFF/ON	Used to lock the phone	
7: MY PHONE #		Used to check your phone number		



	8: ERASE LOGS	ERASE HISTORY? NO/YES	Erases numbers in outgoing or incoming call history.
	9: LANGUAGE	DISPLAY LANGUAGE ENGLISH/SPANISH	Selects user interface language.
7:DATA SERVICE	1: DATA PORT	DATA PORT SERIAL/USB	Selects data port configuration
	2: DS SPEED	DS SPEED 115.2Kbps/19.2Kbps	Selects data service speed
	3: RECEIVE MODE	RECEIVE MODE VOICE ONLY/ASYNC/PC FAX	Select incoming call receive mode

* The lock code is preset to 0000 at the factory.

* At MENU, press "CLEAR" to return to the previous menu.

C ONVERSATION AND MESSAGE MENU

During Conversation MENU

- 1: MUTE
- 2: SILENT KEY
- 3: SEND MY #

Message Menu

- 1: VOICE MAIL
- 2: TEXT MAIL
- 3: SEND MESSAGE
- 4: MESSAGE ERASE
- 5: MESSAGE OPTION

S PECIFICATIONS

Frequency Range	AXW-P800 AXW-P1900	Tx: 824 ~ 849 MHz Tx: 1850 ~ 1910 MHz	Rx: 869 ~ 894 MHz Rx: 1930 ~ 1990 MHz
Channel Bandwidth	CDMA 1.25 MHz		
Stability of frequency	0.4 ppm		
External appearance(mm)	205(L) x 180(W) x 87(H)		
Weight	740g (without battery)		
Sending output	maximum 0.23W E.R.P		
Temperature of operation	-20°... ~ +50°...		
Relative humidity	5% ~ 90%		
Adapter	Input: AC 100~240V 50~60Hz Output: DC 9V/1A		
Battery	Standby	16mA (Slot Cycle Index: 2) 72 hours	
	Talk	405mA (at +10dBm) 2 hours	

Safety Information

1 . SAFETY INFORMATION FOR FIXED WIRELESS TERMINALS

.POTENTIALLY EXPLOSIVE ATMOSPHERES

Turn your phone OFF when in any area with a potentially explosive atmosphere and obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death.

INTERFERENCE TO MEDICAL DEVICES

Certain electronic equipment may be shielded against RF signal from your wireless phone. (pacemakers, Hearing Aids, and so on)

Turn your phone OFF in health care facilities when any regulations posted in these areas instruct you to do so.

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles.

.EXPOSURE TO RF ENERGY

Use only the supplied or an approved replacement antenna.

Do not touch the antenna unnecessarily when the phone is in use.

Do not move the antenna close to, or touching any exposed part of the body when making a call.

SAR INFORMATION

THIS MODEL PHONE MEETS THE GOVERNMENT 'S REQUIREMENTS FOR EXPOSURE TO RADIO WAVES.

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6 W/kg. *Tests for SAR are conducted with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output. Before a phone model is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the limit established by the government-adopted requirement for safe exposure.

The tests are performed in positions and locations

(e.g., at the ear and worn on the body) as required by the FCC for each model. The highest SAR value for this model phone when worn on the body, as described in this user guide, is **0.542W/kg**. (Body worn measurements differ among phone models, depending upon available accessories and FCC requirements). While there may be differences between the SAR levels of various phones and at various positions, they all meet the government requirement for safe exposure. The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. SAR information on this model phone is on file with the FCC and can be found under the Display Grant section of [http://www.fcc.gov / oet / fccid](http://www.fcc.gov/oet/fccid) after searching on **FCC ID : PH7AXWP1900**.

Additional information on Specific Absorption Rates (SAR) can be found on the Cellular Telecommunications & Internet Association (CTIA) web-site at <http://phonefacts.net>. *In the United States and Canada, the SAR limit for mobile phones used by the public is 1.6 watts/kg (W/kg) averaged over one gram of tissue. The standard incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements.

FCC Compliance Information

This device complies with Part 15 of FCC Rules.

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received.

Including interference that may cause undesired operation.

Information to User

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/ tv technician for help.