

Axesstel Fixed Wireless Phone

GSM PG130/131N

User Manual





Index

1	GEN	IERAL INTRODUCTION	1
2	IMP	ORTANT INFORMATION	2
3	PRC	DUCT OVERVIEW	3
	3.1	PACKING LIST	. 3
	3.2	SETTING UP YOUR PHONE	
	3.3	PRODUCT INTRODUCTION	
	3.3.1		
	3.3.2		
	3.3.3		
	3.3.4		
	3.3.5		
4	BAS	IC OPERATIONS	
	4.1	Power On/Off	0
	4.1	MAKE A CALL	
	4.2 4.3	ANSWER A CALL	
	4.5 4.4	ANSWER A CALL	
5			
		IN MENU	
6	CAL	L LOG	11
	6.1	ALL CALLS	11
	6.2	DIALED CALLS	11
	6.3	RECEIVED CALLS	12
	6.4	MISSED CALLS	13
	6.5	DELETE CALL LOG.	13
	6.6	CALL DURATION	13
7	CON	VTACTS	14
			14
	7.1	SEARCH FOR A CONTACT	14
	7.1 7.2	SEARCH FOR A CONTACT	14 14
	7.1 7.2 <i>7.2.1</i>	SEARCH FOR A CONTACT ADD A NEW CONTACT Add a New Contact from the Menu	14 14 <i>14</i>
	7.1 7.2 <i>7.2.1</i> <i>7.2.2</i>	SEARCH FOR A CONTACT ADD A NEW CONTACT Add a New Contact from the Menu Add a New Contact in Standby Mode	14 14 <i>14</i> 14
	7.1 7.2 <i>7.2.1</i> <i>7.2.2</i> 7.3	SEARCH FOR A CONTACT ADD A NEW CONTACT Add a New Contact from the Menu Add a New Contact in Standby Mode VIEW A CONTACT	14 14 <i>14</i> <i>14</i> 15
	7.1 7.2 <i>7.2.1</i> <i>7.2.2</i>	SEARCH FOR A CONTACT ADD A NEW CONTACT Add a New Contact from the Menu Add a New Contact in Standby Mode VIEW A CONTACT SERVICE NUMBER	14 14 14 14 15 15
	7.1 7.2 <i>7.2.1</i> <i>7.2.2</i> 7.3 7.4	SEARCH FOR A CONTACT	14 14 14 15 15 15
	7.1 7.2 7.2.1 7.2.2 7.3 7.4 7.5	SEARCH FOR A CONTACT	14 14 14 15 15 15 15
	7.1 7.2 7.2.1 7.2.2 7.3 7.4 7.5 7.6	SEARCH FOR A CONTACT	14 14 14 15 15 15 15 15
	7.1 7.2 7.2.1 7.2.2 7.3 7.4 7.5 7.6 7.7	SEARCH FOR A CONTACT	14 14 14 15 15 15 15 15 16 16
	7.1 7.2 7.2.1 7.2.2 7.3 7.4 7.5 7.6 7.7 7.8	SEARCH FOR A CONTACT	14 14 14 15 15 15 15 16 16 16
8	7.1 7.2 7.2.1 7.2.2 7.3 7.4 7.5 7.6 7.7 7.8 7.9 7.10	SEARCH FOR A CONTACT	14 14 14 15 15 15 15 16 16 16
	7.1 7.2 7.2.1 7.2.2 7.3 7.4 7.5 7.6 7.7 7.8 7.9 7.10 MES	SEARCH FOR A CONTACT	14 14 14 15 15 15 15 16 16 16 16 16 17
	7.1 7.2 7.2.1 7.2.2 7.3 7.4 7.5 7.6 7.7 7.8 7.9 7.10 MES 8.1	SEARCH FOR A CONTACT	14 14 14 15 15 15 15 16 16 16 16 16 17 17
	7.1 7.2.1 7.2.2 7.3 7.4 7.5 7.6 7.7 7.8 7.9 7.10 MES 8.1 8.2	SEARCH FOR A CONTACT	14 14 14 15 15 15 15 16 16 16 16 16 16 17 17
	7.1 7.2.1 7.2.2 7.3 7.4 7.5 7.6 7.7 7.8 7.9 7.10 MES 8.1 8.2 8.3	SEARCH FOR A CONTACT	14 14 14 15 15 15 15 16 16 16 16 16 16 17 17 17
	7.1 7.2.1 7.2.2 7.3 7.4 7.5 7.6 7.7 7.8 7.9 7.10 MES 8.1 8.2	SEARCH FOR A CONTACT	14 14 14 15 15 15 15 16 16 16 16 16 16 17 17 17 18 18
	7.1 7.2 7.2.1 7.2.2 7.3 7.4 7.5 7.6 7.7 7.8 7.9 7.10 MES 8.1 8.2 8.3 8.4	SEARCH FOR A CONTACT	14 14 14 15 15 15 16 16 16 16 16 17 17 17 18 18 18
	7.1 7.2 7.2.1 7.2.2 7.3 7.4 7.5 7.6 7.7 7.8 7.9 7.10 MES 8.1 8.2 8.3 8.4 8.5 8.6	SEARCH FOR A CONTACT	14 14 14 15 15 15 15 16 16 16 16 16 16 17 17 17 18 18 18 19
8	7.1 7.2 7.2.1 7.2.2 7.3 7.4 7.5 7.6 7.7 7.8 7.9 7.10 MES 8.1 8.2 8.3 8.4 8.5 8.6 TIM	SEARCH FOR A CONTACT	14 14 14 15 15 15 15 16 16 16 16 16 16 16 17 17 17 18 18 18 19 19
8	7.1 7.2 7.2.1 7.2.2 7.3 7.4 7.5 7.6 7.7 7.8 7.9 7.10 MES 8.1 8.2 8.3 8.4 8.5 8.6 TIM 9.1	SEARCH FOR A CONTACT	14 14 14 15 15 15 15 16 16 16 16 16 16 16 17 17 17 18 18 18 18 19 19
8	7.1 7.2.1 7.2.2 7.3 7.4 7.5 7.6 7.7 7.8 7.9 7.10 MES 8.1 8.2 8.3 8.4 8.5 8.6 TIM 9.1 9.2	SEARCH FOR A CONTACT	14 14 14 15 15 15 16 16 16 16 16 16 16 16 17 17 17 18 18 18 19 19 20
8	7.1 7.2 7.2.1 7.2.2 7.3 7.4 7.5 7.6 7.7 7.8 7.9 7.10 MES 8.1 8.2 8.3 8.4 8.5 8.6 TIM 9.1 9.2 9.1 9.2 9.50U	SEARCH FOR A CONTACT	14 14 14 15 15 15 16 16 16 16 16 16 16 16 17 17 17 18 18 18 19 19 20 20
8	7.1 7.2.1 7.2.2 7.3 7.4 7.5 7.6 7.7 7.8 7.9 7.10 MES 8.1 8.2 8.3 8.4 8.5 8.6 TIM 9.1 9.2	SEARCH FOR A CONTACT	14 14 14 15 15 15 15 16 16 16 16 16 16 16 17 17 18 18 18 19 19 20 20 20



10.3	RING TYPE	
10.4	ALERT	
11 COI	NFIGURATION	
11.1	GREETING	
11.2	Set Language	
11.3	SET LCD BACKLIGHT	22
11.4	SET LCD CONTRAST	22
11.5	AUTO SEND TIME	22
11.6	CALL WAITING	23
11.7	CALL DIVERT	23
11.8	CALL BARRING	24
12 SEC	URITY (INITIAL PASSWORD: 0000)	24
12.1	Owner Number	25
12.1	PHONE LOCK	
12.2	PIN1 LOCK	
12.4	AUTO KEYPAD LOCK	
12.5	CHANGE PIN LOCK	
12.6	BARRED DIAL	
12.7	HOTLINE/PLAR	
12.8	GUARD SYSTEM	
12.9	PHONE INFO	
12.10	CLEAR MEMORY	
12.11	RESTORE FACTORY SETTINGS	
13 SER	VICES	
13.1	STK(SIM TOOL KIT)	27
	RADIO(OPTIONAL)	
14 1111		
14.1	FM STATUS	
14.2	CHANNEL LIST	
14.3	MANUAL INPUT	
14.4	PRESET AUTO SEARCH	
14.5	Settings	





1 General Introduction

Thank you for choosing the Axesstel GSM PG130/131N Desktop Phone. Please read this user manual carefully before using your phone .

The phone has been designed to operate with the latest digital communication technology - GSM. The phone provides the following advanced features:

- 128×48 LCD with backlight, easy to read
- Status Indicators
- Two-way SMS, voice mail
- Call Divert, Call Waiting, Three-Way Calling, Call Barring
- Emergency call
- Menu driven interface for easy operation and configuration
- Store 200 contacts
- Save 200 SMS
- Last call redials
- Choice of 15 ring tones and 10 power On/Off musical tones
- Adjustable ring and voice volume
- AC power supply
- Indoor antenna (Outdoor antenna is optional)
- Speaker phone for hands-free operation
- User friendly keypad
- Battery provides long stand-by and talk time
- Easy to service and repair



2 Important Information

- The product can only be installed indoors.
- Do not place the phone near high temperature objects, under direct sunlight, near source of water, near fire or near inflammable and explosive materials. Avoid using the phone in high temperature or humidity.
- The phone may interfere with heart pacemaker, hearing aid and other electronic medical devices. Therefore please follow the instructions given by your equipment suppliers or consult your doctor. Turn your phone OFF in health care centers if any regulations posted in the area instruct you to do so. Hospitals or health care centers may be using equipment that may be sensitive to external RF energy.
- Place the phone away from other electronic devices like TV and Radio to avoid interference.
- Keep the product away from magnetic field and static electricity.
- Place the phone out of the reach of small children.
- Do not attempt to reassemble the phone by yourself. Only authorized personnel should service the phone and its accessories. Faulty installation or service can be dangerous and may invalidate the warranty.
- Do not clean the phone while in operation. Before attempting to clean the phone, turn the phone off, disconnect the external power adapter and take out the battery. Use a dry, soft cloth for cleaning. Do not use liquid or aerosol cleaners.
- Do not drop, knock or shake the phone. Rough handling may break the phone body and internal circuit boards.
- Do not use the phone if the antenna is damaged. Replace the damaged antenna immediately by using a qualified technician. Use only a manufacturer approved antenna. Non-approved antennas, modifications or attachments may impair call quality and damage the phone.
- Do not hold the antenna during operation. This may affect call quality and cause the phone to operate at unintended power levels.
- Keep the antenna free from obstructions and position the antenna straight up. This will ensure best call quality.
- Only use the battery and the power adapter approved by the manufacturer. If not, it may cause an explosion or result in a short circuit.
- It is highly recommended to fully charge the battery before initial use. The battery might have been discharged during storage and delivery.
- Do not throw battery. Batteries are not to be disposed off by putting them in fire. It may explode or catch fire.
- The power adapter must be used within the specified AC voltage range.
- Take out the battery if you won't use your phone for a long time and keep the battery well.
- During lightning, do not touch the power plug. It may result in an electric shock or death.
- Do not touch the plug with wet hands. Always grasp and pull the plug, not the cord. Do not put heavy things on the power cord or bend it too much.
- During daily use, do not pull out the power adapter. The battery is used for backup power, which will not cause the increased consumption of electricity.
- Don't use the power adapter if the power cable is damaged. Contact the maintenance center immediately and replace the adapter.



Product Overview 3

3.1 Packing List

Once you open the product package, please check the packing list to make sure there is no part missing. If any part is missing or broken, please contact customer service. The packing list is as follows:

- 1. Main Unit
- 3. Antenna

- 2. Handset
- 5. Power Adaptor 7. Data Cable

- 4. Battery
- 6. Manual





3.2 SETTING UP YOUR PHONE

Installing SIM card

- 1. Remove SIM bracket cover.
- 2. Lift SIM bracket by pulling.
 3. Insert proper SIM card.
- 4. Put the bracket back in place. 5. Close the cover.
 - SIM 44



USING SIM CARD FOR THE FIRST TIME

- 1. Entering PIN code.
- **NOTE1**: The PIN feature function can be set on/off in PIN setup menu.
- NOTE2: PIN code can be changed in PIN setup menu.
- 2. If an incorrect PIN code is entered, an error message displays.
- NOTE: There are 3 chances to enter the correct PIN code. If incorrect PIN codes are entered 3 times, the SIM card will be locked. To unlock
- The phone is ready to use after entering the correct PIN code.
- * Default PIN code is provided by your service provider.

Enter PI	N:Rem	nain:3	
Clear			
olcal			

Wrong PIN!

ABC 13/01/2010 08:05 PM

Installing the phone

This phone operates by receiving DC power from the AXESSTEL power adaptor, The phone is equipped with a rechargeable Battery as a backup in case of an AC power failure.

Desktop installation





- 3.3 Product Introduction
- 3.3.1 Appearance



Figure 1 GSM PG130/131N Fixed Wireless Phone Appearance

3.3.2 Key Definition



Figure 2 Key Layout



3.3.3 FUNCTION KEYS



 
- 1. < Message> KEY: Press this key to retrieve messages.
- 2. **<MENU> KEY**: Press this key to display the phone's main menu.



3/4. <Volume - +> KEY: Press this key to control the volume of keypad, earpiece and speaker. In the menu mode, use this key to scroll through the menu items.







- To erase one character from the display screen, press it once.
- To erase all characters on the screen, press and hold.
- To go back one step in the menu mode, press it once.
- To select some options at the lower left corner of the screen.

6. **<OK> KEY**: Press this key to store a phone number in the phone book, to save menu settings.

- To select some options at the lower right corner of the screen.

7. <SPEAKER> KEY: The Speaker button is used to place or receive a call without using the handset. The integrated microphone and speaker on the Main unit allows hands free conversation.

8. <POWER On/Off>: Press this key to turn ON or OFF the phone.

9. <Redial> KEY: Press this key to redial the last number called or to connect a call right after dialing the number without waiting until the call is connected automatically.



10/11. <*>KEY /<#> KEY: In the menu mode, use this key to scroll up/down through the menu items. In the edit mode, use this key for special characters





3.3.4 GETTING TO KNOW YOUR PHONE



- 1. Antenna: Adjusting the position of antenna improves the sound quality of the call.
- 2. Message: Press to access message related menus.
- 3. MENU: Press to access the phone's menus.
- 4. Volume Up/Down: Lets you adjust sound levels and scroll through the menu options and displays.
- 5. Clear: Lets you clear your last entry.
- 6. OK: Stores phone numbers, and any settings you select in the menu with in the Phone's memory.
- 7. Speaker: Allows you to place or receive a call without using the handset.
- 8. Power: End or reject the call and Turn On or Off the phone.
- 9. Redial: Allows you to redial the last.
- **10. Scroll:** Lets you scroll through the menu options and displays.



3.3.5 Display Icon

The following icon may appear on the display of the phone:

No.	Icon	Description
1	Tall	Current signal strength. The more bars there are, the stronger the signal is.
2	Ŧ	No signal.
3	Ē	Battery capacity indicator. The more bars there are, the more capacity the battery has.
4	0	Supplied by charger
5	Ø	Alarm on
6	tı	Call forwarding
7	P	Missed call
8	8	Unread message
9	RM	Roaming
10	4	Speakerphone active

Figure 3 Display Icon

4 Basic Operations

4.1 Power On/Off

Connect the handset to the underside of the phone, then open the battery door and connect the battery. Plug in the power adapter into AC outlet, and then connect the other end of the power adapter into the right side of the phone.

Switch the **<Power>** switch (on the underside of the Phone) to **ON**, then press the **<Power On/Off>** Key on the panel for 3 seconds to power on the phone, your phone should go to standby screen and is ready to use.

You can turn the phone off directly by switching the **<Power On/Off>** switch (on the rear of the phone) to **OFF** position. If the phone will not be used for long time, please turn this switch to **OFF**. Or you can press the **<Power On/Off>** Key for 3 seconds to power off the Phone.

Note: Before press the Power ON, please turn the hardware switch to ON which in the bottom side of the phone.

4.2 Make a Call

While your phone is power on and at idle screen, enter a destination number you wish to call and then press **<Redial>** Key. (Note: To modify digits you enter, you can press **<CLEAR>** Key to delete wrong digits first and then enter new digits). Once the call is connected, the phone's screen will display the number you have dialed, and the time duration the call has lasted.

The phone also has a speaker. To use the speaker to make a call, press **<SPEAKER>** Key, enter a phone number, and press **<REDIAL>** Key.

4.3 Answer a Call

When there is an incoming call, the phone will ring and display the Phone number of the incoming call (if the number is available). You can pick up the handset or press **SPEAKER>** Key to answer the incoming call. The ring tone and ring-tone volume can be changed in the sounds menu.


4.4 End a Call


You can end a call by pressing **<Clear> KEY** to select **End**. If you are using the handset for a phone call, hanging up the handset will end the call automatically.



5 Main Menu

1) Press **<<MENU> KEY** to enter the main menu from the idle screen. The main menu includes: Contacts, Messages, Recent Calls, Tools, and Settings. The menu tree is as follow:

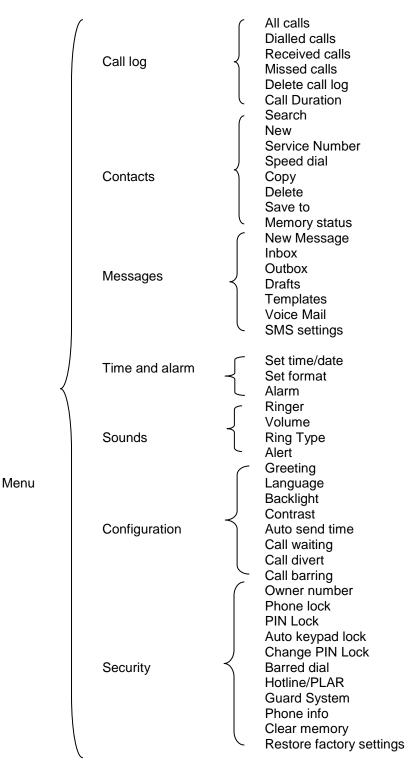

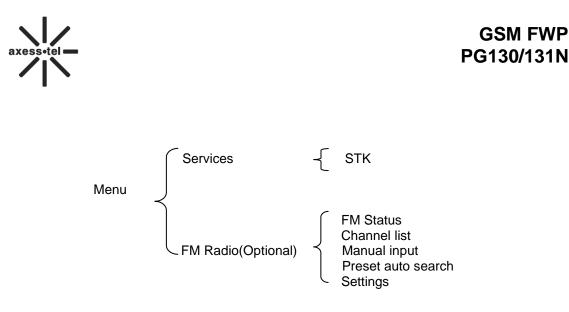



6 Call Log

You can find- All Calls, Dialled Calls, Received Calls, Missed Calls, Delete all Log, and Call Duration in the Call Log menu.

In standby screen, press **<Menu> KEY**, Press**<Volume - +> KEY** scroll to **Call log** item and press**<OK> KEY**.

6.1 All calls

- 1) In Call log menu, Scroll to All calls via <Volume +> KEY, press <OK> KEY.
- 2) The All calls List will be displayed; you can scroll to the desired number,
- Press <OK> KEY to: View the call information; Press <OK> KEY into Option: Delete the call log, Save the Number to Phone Book, Call, Edit this number, and Send SMS to this number.

in log item and	
1 All call	
2 Dialled calls	
Back	ок

OK

1 Call log

2 Contacts

Back

1 12345678	9
21 time	
Back	Option
1 Delete	
2 Save to F	honeboo
Back	OK
3 Call	
4 Edit	
Back	OK
4 Edit	
5 Send SM	S
Back	OK

6.2 Dialed calls

1) In Call log menu, Scroll to Dialed Calls via <Volume - +> KEY, press <OK> KEY.



- 2) The Dialed Calls List will be displayed; you can scroll to the desired number,
- 3) Press <OK> KEY to: View the call information; Press <OK> KEY to select Option: Delete the call log, Save the Number to Phone Book, Call, Edit this number, and Send SMS to this number.

NOTE: In standby screen, press <OK>KEY enter the Dialed calls.

1 All call	
2 Dialled cal	ls
Back	ок
1 123456789	
2 987654321	
Back	ок
1 123456789	
21 time	
Back	Option
1 Delete	
1 Delete 2 Save to Pl	noneboc
	noneboc OK
2 Save to Pl	
2 Save to Pl	
2 Save to Pł Back	
2 Save to Ph Back 3 Call	
2 Save to Ph Back 3 Call 4 Edit	ок
2 Save to Ph Back 3 Call 4 Edit	ок
2 Save to Ph Back 3 Call 4 Edit Back	ок ок
2 Save to Ph Back 3 Call 4 Edit Back 4 Edit	ок ок
2 Save to Ph Back 3 Call 4 Edit Back 4 Edit 5 Send SMS	ок ок

		2 Dialled cal	S
6.3	Received calls	3 Received	calls
1)	In Call log menu, Scroll to Received Calls via <volume +="" -=""> KEY, press <ok> KEY.</ok></volume>	Back	OK
		1 123456789 2 987654321	
2)	The Received Calls List will be displayed; you can scroll to the desired number,	Back	ок
		1 01/01/2010	
		2 06:23 AM	
		Back	Option
		1 Delete	
3)	Press <ok> KEY</ok> to: View the call information; Press <ok> KEY</ok> to	2 Save to Ph	oneboc
,	select Option: Delete the call log, Save the Number to Phone Book , Call , Edit this number, and Send SMS to this number.	Back	OK
		3 Call	
		4 Edit	
		Back	ОК
12		4 Edit	
12		5 Send SMS	
		Back	OK

axess-tel

GSM FWP PG130/131N

6.4 Missed calls

- In Call log menu, Scroll to Missed Calls via <Volume +> KEY, press
 <OK> KEY.
- 2) The **Missed Calls** List will be displayed; you can scroll to the desired number,
- Press <OK> KEY to: View the call information; Press <OK> KEY to select Option: Delete the call log, Save the Number to Phone Book, Call, Edit this number, and Send SMS to this number.

3 Received calls	
3 Missed calls	
Back	OK

1 123456789	
2 987654321	
Back	OK

1 01/01/2010	
2 06:23 AM	
Back	Option

1 Delete	
2 Save to	Phonebook
Back	OK

3 Call	
4 Edit	
Back	OK

4 Edit	
5 Send SMS	
Back	OK

6.5 Delete call log

 
In Call log menu, Scroll to Delete call log via <Volume - +> KEY, press <OK> KEY. You can scroll the cursor to erase All calls, Dialed calls, Received calls and Missed calls.

- 1) Press **<OK>KEY** to select erase item.
- 2) Press <OK>KEY to confirm Delete(Yes)
- 3) Press <Clear>KEY to cancel Delete(No)

Note: If no call log, press <OK>KEY, will pop up the "Empty" dialog box.

Κ

0



6.6 Call Duration

In Call log menu, Scroll to Call Duration via <Volume - +> KEY, press <OK> KEY. You could scroll the cursor to view duration of Last call Time, Total Dialed, Total Received, scroll to Erase All to erase all duration.

5 Delete call log	
6 Call Duration	
Back	OK
0:00:00	
Back	ок



7 Contacts

Contacts can be used to store contact's name and contact's phone numbers, home number, email address, office number and associate sound. You can store up to 200 entries to phone memory.

In standby screen, press <Menu> KEY, Press<Volume - +> KEY scroll to Contacts item and press<OK> KEY.

7.1 Search for a Contact

You can search a contact by name or number

- 1) In Contacts menu, Scroll to Search via <Volume +> KEY, press <OK> KEY.
- Select Name or Number, press <OK> KEY to input the Name or Number for search,
- 3) Press **<OK> KEY** to search or Press **<#>** KEY change input method, press **OK** to start search.

7.2 Add a New Contact

7.2.1 Add a New Contact from the Menu

- In Contacts menu, Scroll to New via <Volume +> KEY, press <OK> KEY, then you can choose the contact store to SIM or to Phone(if in the save to options you choose Ask on saving),
- 2) Scroll to Name via **<Volume +> KEY**, press **<OK> KEY** to input the name, and then press **<OK> KEY** when done.

You can press<Clear>KEY to delete a character.

- 3) Scroll to Number via <Volume +> KEY, input the phone number, and then press <OK> KEY ,select Done 1 Name
- 4) Scroll to this item you need to add to input or edit.
- 5) Then Press **<OK> KEY** to finish adding a contact, press **<Clear> KEY** select **Done**, press **<OK> KEY** to save the contact.

NOTE: Press **"0"KEY** to select add a "**blank space**", and "#" key to change input method.

7.2.2 Add a New Contact in Standby Mode

- 1) In standby screen, after inputting the phone number, press **<OK> KEY** to save the number directly.
- 2) Save the number to SIM card or to Phone. If you select **To Phone**, press**<OK> KEY**, and press **<OK> KEY** again to edit the name
- 3) When done editing the name (press "#" key to change input method), press**<OK> KEY**, press **<Clear> key** to the next option: Save.
- 4) Select Save, and press <OK> KEY
- 5) And press<Clear>KEY, <OK> KEY to save the contact.


1 Call log	
2 Contacts	
Back	OK

1 Search	
2 New	
Back	ОК

1 Name	
2 Number	
Back	OK



1 Name	
2 Number	
Back	Edit

 

1 To SIM	
2 To Phone	
Back	OK

1 Name	
2 123456789	
	Edit

ABC	3/14	
AAA		
		OK

1 Done	
2 Input method	
Back	ок



NOTE: If this operation in press **<SPEAKER>** or lift the **HANDSET** state of complete, May be conflict whit **Auto send time** function.

7.3 View a Contact

In Contacts menu, Scroll to Search via <Volume - +> KEY, press <OK> KEY, input nothing, press <OK> KEY to view the contact list. Scroll to the desired contact via <Volume - +> KEY, press <OK> KEY to view the contact information.

7.4 Service Number

 In Contacts menu, Scroll to Service Number via <Volume - +> KEY, press <OK> KEY, it will display the service number.

7.5 Edit a Contact

- Refer to 7.3 View a contact, view the contacts list, press <OK> KEY, scroll to Edit via <Volume
 +> KEY, and then press <OK> KEY,
- 2) Scroll to the item you need to edit, press <OK> KEY to edit.


7.6 Speed Dial

The phone supports the speed dial function. You can dial the stored number by pressing just one key.

- a) Pick up handset or press <Speaker>
- b) Press and hold a number-key (That you previously assigned) for a moment.
- 1) In **Contact** menu, scroll to **Speed Dial** via **<Volume +>KEY**, press **<OK>KEY**.
- If you want to use the speed dials function, you need to enable this function first. Scroll to Enable Speed Dial via <Volume +> KEY, press
 <OK> KEY to enable this function to On.
- 3) Then scroll to Set Number via <Volume +> KEY, press <OK> KEY, scroll to the number which you need to assign. Press <OK> KEY to enter options, and select assign contact and press <OK> KEY to enter contact list, scroll to contact list to contact you want to set, press <OK> KEY to save your contact into speed dial.
- 4) You also can delete a contact from Speed Dial list.

In Speed Dial list, select any contact, press <OK> KEY to Option, scroll to Delete via <Volume - +> KEY and press <OK> KEY, then press <OK> KEY again to confirm.

2 New	
3 Service Number	
Back	οк
SN:	
	ок

 

1 Enable speed dial 2 Set number Back Off

1 Enable speed dial 2 Set number Back On







Note: When done editing, press the <Power> KEY to return to the standby screen.

7.7 Copy contact

- 1) In Contact menu, scroll to Copy via <Volume +>KEY, press <OK>KEY.
- 2) You can copy the contact form **SIM** or **phone** via **<Volume +>KEY**
- 3) If you select the **From SIM**, press**<OK> KEY**, and press **<OK>KEY** again to confirm.

7.8 Delete

- 1) In Contact menu, scroll to Delete via <Volume +>KEY, press <OK>KEY.
- 2) There are 3 options:
- All SIM: delete all SIM contacts

All phone: delete all phone contacts

One by one: delete the contact one by one.

3) If you select the **All SIM** and **All phone**, press **<OK> KEY**, it will pop up a dialog box, you must input the password.

The password is:0000

- 4) After input password, press <OK> KEY, and press <OK> KEY again to confirm.
- If you select the One by one, press <OK> KEY, enter the contacts list, and select the contact which you want to delete via <Volume - +>KEY, and press <OK> KEY, press <OK> KEY again to confirm.

7.9 Save to

- 1) In Contact menu, scroll to Save to via <Volume +>KEY, press <OK>KEY.
- 2) There are 3 options:

SIM card: save to SIM card. When you enter a new contact, it will save to SIM card immediately.

Phone memory: save to phone. When you enter a new contact, it will save to phone memory immediately.

Ask on saving: ask when you saving. When you enter a new a contact, it will ask you save to SIM card or phone.

3) Press **<OK>KEY** to save you setting.

7.10 Memory status

1) In Contact menu, scroll to Memory status via <Volume - +>KEY, press <OK> KEY.

GSM FWP PG130/131N


5 Сору	
6 Delete	
Back	ОК


1 From SIM	
2 From phone	
Back	OK

5 Сору	
6 Delete	
Back	OK

1 AII SIM	
2 All phone	
Back	ОК

2 All phone	
3 One by one	
Back	ок

 

 

o Phone memory o Ask on saving Back OK

8 Memory status Back OK

7 Save to



2) The screen will display the memory status.
 SIM: 0/200 (current/total)
 Phone: 0/200 (current/total)

8 Messages

You could build a new message, view the inbox、drafts、outbox and templates, perform SMS setting, voice mail broadcast message.

In standby screen, you can enter Messages function through Press <SMS> key directly.

8.1 Send a Message

You could send a message to one recipient or multiple recipients.

- 1) In Messages, press **New Message** and **<OK> KEY** to compose a new message,
- 2) Input the text, or press **<OK> KEY** to select "**Option**":

1 Done

2 User Template

3 Insert PhoneBook Number

4 Insert PhoneBook Name

Press <OK> KEY and select Done to finish inputting the text,

3) You can choose

1 Send Only to send to one recipient without saving

2 Save and Send to send to one recipient with saving the message to Outbox

3 Save to save the message to Drafts without sending out

4 Send to Many to send multiple recipients

5 Send by group to send multiple recipients by group


8.2 Receive a Message

- 1) If there is a new message, the phone will ring alert. In idle mode, press **<OK> KEY** to read the message,
- Or you could read the new message in the Inbox. Press <SMS> Key, scroll to Inbox via <Volume - +> KEY, press <OK> KEY, scroll to the message which is you want to read via <Volume - +> KEY. Then press

<OK> KEY to read message.

- 3) Then press **<OK> KEY** into **Option** you can
 - 1. Reply: reply to the message
 - 2. Delete: delete the message
 - 3. Edit: edit in the message and then save or send
 - 4. **Forward**: forward the message to other recipient(s)
 - 5. Erase All: erase all message in the Inbox

1 Ne	w Message
2 Int	ox
Bac	K OK

 

1 Done	
2 User Templa	ate
Back	OK


Y.all 🛛	۱
1 New Message	
Cancel	

8	123456789
\boxtimes	987654321
Back	ОК

11:10 AM	
Hello!	
Back	Option

1 Reply	
2 Delete	
Back	Option



 

6. **Use Number**: get all numbers in the message includes the sender's number. You can dial directly, or Send SMS directly, or save the number to phone book.

8.3 View Sent Messages

- 1) In **Messages**, scroll to **Outbox** via and press **<OK> KEY** to view the outbox
- 2) Scroll to the message you want to read, press **<OK> KEY** to **Send**, **Edit**, **Delete**, **Erase All**, and **Use Number**.

8.4 Send a Message by using Templates

- In Messages, scroll to Templates via <Volume +> KEY, press <OK> KEY to enter template menu,
- 2) There are 10 template messages in **Templates** menu, you could edit the template or delete the template,
 - 1 Please call me, urgently
 - 2 How are you?
 - 3 Call we have lunch today at ...
 - 4 Be right back.
 - 5 Please sms me, I am at meeting right now
 - 6 Sorry!
 - 7 Thank you
 - 8 How was the day?
 - 9 Long time no see.
 - 10 Lots of luv
- Scroll to the template message which is you want to use via <Volume -+> KEY, then press <OK> KEY, scroll to:
 - 1 Edit: Edit the template message
 - 2 Remove: Delete the template message
 - 3 Insert Message: Insert the template message into the message

8.5 SMS Settings

In standby screen, press<**SMS**>**KEY**, scroll the SMS Settings via <**Volume - +> KEY**. You can set **Delivery report**; **Delete all**, **Memory status** in Message Settings.

- Delivery report: scroll via <Volume +> KEY and press <OK> KEY into this item, Press <OK> KEY marked this option and press <Clear> KEY to Save.
 - is on.
 - is off.
- 2) Delete All

Scroll **Delete All** via **<Volume - +> KEY** and press **<OK> KEY** twice, you can delete all messages.

3) Memory status

5 Template	
6 Voice Mail	
Back	ОК

1 Please	call me, urç
2 How are you?	
Back	Option

Back	ok
2 Remove	
1 Edit	

2 Remove	
3 Write message	
Back	ok

ABC	136/1
urgently	
	Option

1 Done	
2 User Template	
Back	οк

6 Voice Mail

2 Delete all

Back

Back

Back

Back

2 Delete all

3 Memory status

7 SMS settings

1 Delivery report

[] Delivery report

OK

OK

On

OK

SIM : 0/50
Phone : 0/200
Back





Scroll Memory status via <Volume - +> KEY and press <OK> KEY, you will check the SIM and Phone memory status

8.6 Voice Message

In standby screen, press<SMS>KEY, scroll to Voice mail item via<Volume - +> KEY, and press <OK>KEY to enter the menu.

Press **<OK>KEY** to the two option:

- Edit Voice mail number, 1) Press<OK>KEY, scroll the name or number via<Volume - +> KEY, and press<OK>KEY to edit.
- 2) Connect to voice
 - Press<OK>KEY. to call the voice mail number.

Note: In standby screen, if you voice mail number is empty, hold the number NO.1 KEY down until pop up "Set voice mail?" screen to set the voice mail number. Refer the step 1 to complete.

9 Time and alarm

In standby screen, press <Menu> KEY, Press<Volume - +> KEY scroll to Time and alarm item and press<OK> KEY.

9.1 Set Time/Date

Select Time and alarm in main menu, select Set Time/date in Time 1) and alarm,

Scroll to Set Time/Date via <Volume - +> KEY, press <OK> KEY,

and scroll to 1 to set time, scroll to 2 to set date.





1 Connect to Voice	e
2 Edit	
Back	ок











o 12	
o 24	
Back	ок

1 Time Format 2 Date Format Back οκ

o DD/MM/YYYY o MM/DD/YYYY Back οκ

o MM/DD/YYYY O YYYY/MM/DD οκ Back

o YYYY/MM/DD	
o YYYY-MM-DD	
Back	ок

2)



 If you want to change the format of time and date, select Set format in Time and alarm, press <OK> KEY. Scroll to Time format and press <OK> KEY to set time format, 12hr or 24hr; scroll to date format via <Volume - +> KEY and press <OK> KEY to set date format, DD/MM/YYYY, MM/DD/YYYY, YYYY/MM/DD, YYYY-MM-DD.

Note: If your **Language** is Spanish, then date format should be: DD/MM/AAAA, MM/DD/AAAA, AAAA/MM/DD, AAAA-MM-DD.

9.2 Set Alarm

You can set 5 alarms.

- 1) In Time and alarm, Select Alarm via <Volume +> KEY,
- 2) Select any one from 5 alarms, press <OK> KEY to edit the alarm,
- Scroll to 1 via <Volume +> KEY, press <*> KEY or <#> KEY to active/deactivate the alarm,
- 4) Scroll to 2 to set alarm time via <Volume +> KEY,
- 5) Scroll to 3 to set alarm repeat way, press <*> KEY or <#> KEY to switch the alarm repeat way, includes **Once, Everyday, Days** (If the repeat way is Days, **Press** ♣ to select the days).

2 Set format	
3 Alarm	
Back	OK

[]1# 12:00 AM	
[]2# 12:00 AM	
Back	OK

1 <off></off>	
2 00:00	
Back	OK

3 Repeat	
	<once></once>
Done	



3 Time and alarm	
4 Sound	
Back	OK
1 Ringer	
2 Volume	
Back	OK

1 Incoming call	
2 Alarm	
Back	οк

10 Ring 10	
11 MIDI 11	
Back	OK

10 Sounds

In standby screen, press **<Menu> KEY**, Press**<Volume - +> KEY** scroll to **Sound** item and press**<OK> KEY**.

Here you can set the ring tone and volume.

10.1 Ringer

In Sound menu, select Ringer, and then press <OK> KEY , you can scroll to the ringer for Incoming Call, Alarm, Power On, Power Off, Message Tone, Keypad Tone.

Press <OK> KEY enter the setting screen, select the ringer via <Volume - +> KEY, press <OK> KEY to save.

10.2 Volume

In **Sound** menu, select **Volume**, and then press **<OK> KEY**, you can scroll to the volume for **Ring Tone**, **Key Tone** via **<Volume - +> KEY**.

Press <OK> KEY enter the setting screen, press <Volume - +> KEY to set the volume, press <OK> KEY to save.

10.3 Ring Type

In **Sound** menu, select **Ring Type**, and then press **<OK> KEY**, you can scroll to the ring type as **Single**, **Repeat**, **Ascending** via **<Volume - +> KEY**, and press **<OK> KEY** to save.

10.4 Alert

In **Sound** menu, select **Alert**, and then press **<OK> KEY**, you can turn on/off the alert of **Warning**, **Error**, and **Call Connect**..

- Scroll to any one which you want to alert, press <OK> KEY to on or off .
 is on.
 - is off.
- 2) Press **<Clear>KEY** to done.

11 Configuration

In standby screen, press **<MENU> KEY**, Press**<Volume - +> KEY** scroll to **Configuration** item and press**<OK> KEY**.

11.1 Greeting

In **Configuration** menu, press**<Volume - +> KEY** scroll to **Greeting** item and press**<OK> KEY**.

You can on/off the Greeting, and edit it



1 Ring Tone	
2 Key tone	
Back	OK
3 Ring type	
4 Alert	
Back	ок

o Repeat	
o Ascending	
Back	ОК

3 Ring type	
4 Alert	
Back	OK

[]Warning	
[]Error	
Back	OK

[]Error	
[]Call Connect	
Back	OK

4 Sound	
5 Configuration	
Back	OK

1 Greeting	
2 Language	
Back	OK

1 Status	
<off></off>	
Back	OK

2Greeting text	
Welcome	
	Edit

11.2 Set Language

In Configuration menu, press<Volume - +> KEY scroll to Language item and press<OK> KEY.

- Select Language in Configuration, 1)
- Scroll to desired language via <Volume +> KEY, press <OK> KEY to 2) set language.

11.3 Set LCD Backlight

In Configuration menu, press<Volume - +> KEY scroll to Backlight item and press<OK> KEY.

- 1) Select Backlight in Configuration,
- 2) Scroll to the time you want to switch off the backlight via <Volume - +> KEY, press <OK> KEY to save the setting. The time includes 5 Sec, 15 Sec, 30 Sec, 45 Sec.

11.4 Set LCD Contrast

In Configuration menu, press<Volume - +> KEY scroll to Contrast item and press<OK> KEY.

- Select Contrast in Configuration, 1)
- 2) Press <Volume - +>to decrease/increase the contrast of the LCD. Press < setting.

11.5 Auto send time

In Configuration menu, press<Volume - +> KEY scroll to Auto send time item and press<OK> KEY.

The phone can autodial after you input a number; you can set the time delay for autodial after you input the number by setting Dial Delay.

Select Auto send time in Configuration,

Scroll to the time which you desired via <Volume - +> KEY, press <OK> 1) KEY to save the setting. The time includes 1s~9s or close autodial.

2 Language	
3 Backlight	
Back	OK

o Automatic	
o English	
Back	OK

3 Backlight	
4 Contrast	
Back	ок

o 5 Sec	
o 15 Sec	
Back	ок

Back	ок
<ok> KEY to save</ok>	the

5 Auto send time	
6 Call waiting	
Back	OK

o 2 Sec Back	OK
o 1 Sec	



z Language	
3 Backlight	
Back	ОК



11.6 Call Waiting

In **Configuration** menu, press**<Volume - +> KEY** scroll to **Call waiting** item and press**<OK> KEY**.

If an incoming call is received while on another call, and the call waiting feature is enabled, you can suspend the current telephone call and switch to the new incoming call, you can then negotiate with the new or the current caller an appropriate time to call back if the message is important, or to quickly handle a separate incoming call.

There are 3 options in **Call Waiting** menu, **Activate, Deactivate, Query Status**.

- 1) Select **Activate**, press **<OK>**, the screen will pop up "Please wait" dialog box, and then will pop up "Call waiting Activated" dialog box.
- 2) Select **Deactivate**, press **<OK>**, the screen will pop up "Please wait" dialog box, and then will pop up "Call waiting Deactivated" dialog box.
- 3) Select **Query**, press **<OK>**, the screen will pop up "Please wait" dialog box, and will pop up a dialog box about the call waiting status.

Note: Three-Way Calling

Three-way Calling is a feature that lets you set up a three-way conversation with two different parties. While you're in conversation with a party, press the number you want to dial, then press **<Redial>** to connect the three parties together .

Ex If you want to make a three-way calling with A and B,

- 1) Make a call with A
- 2) Dial B's number when in conversation with A
- 3) When B received the call, the conversation with A is hold
- 4) press <OK> Key, and select the Conference with <*> Key or <#> Key
- 5) Press **<OK> Key** and then you can set up the three-way calling

11.7 Call Divert

In **Configuration** menu, press**<Volume - +> KEY** scroll to **Call divert** item and press**<OK> KEY**.

Call Divert allows you to divert an incoming call to any other phone. You will receive calls through the specified phone when Call Divert is activated.

- 1) **Press<MENU>KEY,<Configuration>,<Call Divert>, press <OK>KEY.**
- 2) There are 5 options in Call Divert menu, Divert All Voice Calls, Divert If Unreachable, Divert If No Answer, Divert If Busy, and Cancel All Divert.
- 3) Press <OK>KEY, to select Active and Deactivate
- If you select Active, press <OK>KEY, to set new number and check voice mail

6 Call waiting	
7 Call divert	
Back	OK

1 Activate	
2 Deativate	
Back	OK

2 Deativate	
3 Query status	
Back	οк

7 Call divert	
8 Call barring	
Back	ОК

1 Divert a	
2 Divert if	unreacha
Back	OK

3 Divert if no answe 4 Divert if busy Back OK

4 Divert if b	usy
4 Cancel All	Divert
Back	ок



11.8 Call Barring

In Configuration menu, press<Volume - +> KEY scroll to Call barring item and press<OK> KEY.

Call Barring allows the user to prevent Incoming Calls and Outgoing Calls.

There are 4 options in **Call Barring** menu, **Outgoing calls, Incoming calls, Cancel All,** and **Change Barring Password**. Please contact your local operator to apply for this service. Please consult your operator for details on the operations.

Note: This function is dependent on operator. The password, please contact the operator.

EX. Operation

- 1) Select Outgoing calls,
- 2) Select All calls
- 3) Input the password
- 4) If the password correct, it will success.

7 Call divert 8 Call barring Back OK

OK

1 All calls	
2 International calls	
Back	OK

2 International	
3 International	calls exce
Back	OK

2 Incoming calls	
3 Cancel all	
Back	OK

1 All calls	
2 When roaming	
Back	ОК

OK

3 Cancel all	
4 Change I	Barring Passwo
Back	OK

12 Security (Initial Password: 0000)

In standby screen, press **<Menu> KEY**, Press**<Volume - +> KEY** scroll to **Security** item and press**<OK> KEY.** You will check **the Security** menu: Owner number



Phone lock PIN Lock Auto keypad lock Change PIN Lock Barred dial Hotline/PLAR Phone info Clear memory Restore factory settings

12.1 Owner number

In Security menu, scroll to Owner Number item via <Volume - +> KEY, press <OK> KEY. You can edit 2 numbers about owner number Press <OK> KEY, you can Edit and Delete the number.

12.2 Phone Lock

In Security menu, scroll to Phone Lock item via <Volume - +> KEY, press <OK> KEY.

You must input the password "0000" and press **<OK> KEY** to enable the phone lock. And then, you can input password again and press **<OK> KEY** to disable the phone lock.

12.3 PIN1 Lock

In Security menu, scroll to PIN Lock item via <Volume - +> KEY, press <OK> KEY.

- 1) Input the PIN code, you can try 3 times
- 2) If you input the right PIN, the PIN will lock
- 3) If you want PIN unlock, please enter the PIN Lock menu, and input the PIN code again

12.4 Auto keypad lock

In Security menu, scroll to Auto keypad lock item via <Volume - +> KEY, press <OK> KEY. You can select the :

None 5 sec 30 sec 1 min

5 min

If you want to unlock, in standby screen, press <Clear> KEY with <*> KEY.

12.5 Change PIN Lock

In Security menu, scroll to Change PIN Lock item via <Volume - +> KEY, press <OK> KEY. You can change

1) PIN1 code

You must have the old PIN to change the PIN. Input old PIN and press **<OK> KEY**, and input new PIN, press **<OK> KEY** to enter again, press **<OK> KEY** to save the new PIN.

2) Phone password

You should have the old password. Change method, please refer change PIN1 code.

Enter Password	
Back	OK

1 Owner number	
2 Phone lock	
Back	ОК

1 <empty></empty>	
2 <empty></empty>	
Back	Option

5 Change PIN	Lock
6 Barred dial	
Back	OK

1 Bar inc	oming	
2 Bar outgoing		
Back	Option	

Option

o On o Off Back





12.6 Barred dial

In Security menu, scroll to Barred dial item via <Volume - +> KEY and press<OK> KEY.

You can on/off bar incoming or outgoing.

12.7 Hotline/PLAR

Hotline/PLAR is a feature that lets the phone autodial a call you set.

In Security menu, scroll to Hotline/PLAR item via <Volume - +> KEY and press<OK> KEY.

- 1) Scroll to Mode, press <OK>KEY to On or press<OK>KEY again to Off.
- 2) Scroll to **Dial Number**, press**<OK>KEY**, and input a number. Press **<OK>KEY** to save the number.
- 3) Return the standby screen, if you set the **Mode** to On, hook up the handset, it will autodial a call to the number which you input in **Dial Number**.

12.8 Guard system

In **Security** menu, scroll to **Guard System** item via **<Volume - +> KEY** and press**<OK> KEY**. For Guard System's operation, please refer to the special user manual of Guard System.

12.9 Phone info

In Security menu, scroll to Phone info item via <Volume - +> KEY and press<OK> KEY. You will check the SW Version and HW Version.

12.10 Clear memory

 
In Security menu, scroll to Clear memory item via <Volume - +> KEY and press<OK> KEY.

 
You can clear phone memory, contain: Contacts; SMS; Call Log

 


In Security menu, scroll to Restore Factory settings item via <Volume - +> KEY and press<OK> KEY.

- 1) The initial password is "0000". Input the password to restore factory settings.
- 2) The Factory Default:







Enter Pa	ssword
Back	OK



List			Default
		Incoming call	MIDI 1
		Alarm	MIDI 3
	Binger	Power on	Tone 1
Coundo	Ringer	Power off	Tone 2
		Message tone	Tone 5
Sounds		Keypad tone	Tone
	Volume	Ring Tone	4
	volume	Key tone	2
	Ring type		Repeat
	Alert		off
Configuration	Greeting		Welcome
Configuration	Contrast		7

13 Services

13.1 STK(SIM TOOL KIT)

In standby screen, press <Menu> KEY, Press<Volume - +> KEY scroll to Service item and press<OK> KEY.

.You can get basic information about STK (SIM tool kit).

Note: The service is related to operator, different regions have different card services, here we do not provide instructions.


14 FM Radio(Optional)

You can listen to FM radio in this option In standby screen, press **<Menu> KEY**, Press**<Volume - +> KEY** scroll to **FM Radio** item press **<OK> KEY** in to **Option**: **Note:** You can control the volume by **<Volume - +> KEY**.

14.1 FM Status

In this menu, you can turn on/off the radio. Select **FM Status** and press **<OK> KEY** to enter into it, scroll to **ON/OFF** via **<Volume +-> Key**, press **<OK> KEY** to save your setting.

8 Services	
9 FM radio	
Back	OK

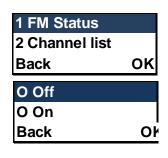

1 FM Status	
2 Channel list	
Back	OK

14.2 Channel list

In this menu, you can save your favorite channel.

Press <OK> KEY into Channel list

Scroll to a **Empty** item via **<Volume - +> KEY**. Press **<OK> KEY** into **Option** Press **<OK> KEY** to **Edit** and Press **<OK> KEY** to **Edit** a **Channel name**

	19 <empt< th=""><th>y></th></empt<>	y>
ito	20 <empt< th=""><th>y></th></empt<>	y>
	Back	Option
	1 Edit	
	Back	OK



Press < Volume - +> KEY scroll to Frequency press Numeric Keys and <#> KEY input a proper frequency

Note: press <#> key input "."

Press **<OK> KEY** to save this channel. Into **Channel list** again select saved channel press **<OK> KEY** play, **delete or edit** this channel.

1 Channe Name		
Back	Edit	
2 Frenquency		
Back	Edit	

3 Manual input 4 Preset auto searcl Back OK



3	3 Manual input	
4	Preset auto	searcl
В	ack	OK

4 Preset auto search	
5 Settings	
Back	οκ

1 Background play	
	<off></off>
Back	OK

14.3 Manual input

In this menu, input you want frequency. Select **Manual input** input you want frequency with **Numeric Keys** and **<#> KEY** press **<OK> KEY** to play.

14.4 Preset auto search

Auto search correct frequencies and auto saved to **Channel list**. Select **Preset auto search** press **<OK> KEY** and press **<OK> KEY** again to **Preset list**.

Press Clear KEY select NO to cancel Preset auto search.

14.5 Settings

Set the FM radio for Background play.

Select Settings press <OK> KEY into this item.

 Background play : use <*> KEY and <#> KEY to change options and press <OK> KEY to select <On> enable background play or select <Off> disable the FM background play

Note: Background play FM radio will play in standby screen.

FCC Section 15.21 Information to the user

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC Section 15.19 Labelling requirements This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

 This device may not cause harmful interference, and
 This device must accept any interference received, including interference that may cause undesired operation.

SAR INFORMATION

The SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of tissue. Device types (FCC ID: PH7PG131N) has also been tested against this SAR limit. The highest SAR value reported under this standard during product certification for the body is 1.413 W/kg.

This device was tested for typical body-worn operations with the back of the handset kept 0 cm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain a 0 cm separation distance between the user's body and the back of the handset. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.