

355892-13228-988991

3957592/322898899/3/033020/20295755/295  
15/1295585988957592/322898899/3/03302  
898899/3/033020/20295755/295589  
8899/3/033020/20295753/2599752278887037  
0/20295755/295585988957592/322898899/3  
733020/20295755/295585988957592/322898  
85988957592/322898899/3/033020/2029575  
155/295585988957592/322898899/

3-5585-9889575

155/295585988957592/322898899/3/033020/1  
3957592/322898899/3/033020/20295755/295  
15/1295585988957592/322898899/3/03302  
898899/3/033020/20295755/295589  
8899/3/033020/20295753/2599752278887037  
185988957592/322898899/3/033020/2029575  
898899/3/033020/20295755/2955859889575  
8899/3/033020/20295753/259975227888  
20/20295755/295585988957  
898899/3/033020/20295755/295589  
8899/3/033020/20295753/2599752278887037

012-355892-13228-988991

8899899/3/033020/20295755/295589  
8899899/3/033020/20295755/295589  
8899899/3/033020/20295755/295589  
8899899/3/033020/20295755/295589  
8899899/3/033020/20295755/295589  
8899899/3/033020/20295755/295589  
8899899/3/033020/20295755/295589  
8899899/3/033020/20295755/295589  
8899899/3/033020/20295755/295589  
8899899/3/033020/20295755/295589

51129-5585-9889575

8899899/3/033020/20295755/295589  
8899899/3/033020/20295755/295589  
8899899/3/033020/20295755/295589  
8899899/3/033020/20295755/295589  
8899899/3/033020/20295755/295589  
8899899/3/033020/20295755/295589  
8899899/3/033020/20295755/295589  
8899899/3/033020/20295755/295589  
8899899/3/033020/20295755/295589  
8899899/3/033020/20295755/295589



# USER GUIDE

PV500 Series  
PV510 / PV520 / PV530



axess•tel



---

---

## **I**NTRODUCTION

The Fixed Wireless phone operates through a wireless connection instead of a landline phone cable, enabling the subscriber to set up the phone at any where wireless service is available.

Axesstel CDMA 2000 Fixed Wireless Phone provides high quality and superior performance with many features such as superior voice quality, optional data service, caller ID, three-way calling, call waiting, short message service, etc.

A large graphic liquid crystal display provides user-friendly interface for quick and easy information display.

## **FEATURES**

1. Speaker Phone
2. Signal Strength Indicator
3. Redial
4. Volume Control
5. Backlit Keypad
6. Battery Power Backup
7. Easy to read, backlit LCD Screen
8. One-touch, Two-touch Dialing
9. Automatic Sending
10. Phone Book
11. Short Message Service
12. Data Call (up to 153.6kbps)
13. FM Radio with programmable preset



## **T**ABLES OF CONTENTS

Safety Precautions.....	3	Selecting Time Mode.....	29
Checking Parts.....	4	Setting the Alarm.....	30
Setting up Your Phone .....	5	Checking and Clearing Call Times .....	31
Getting to Know Your Phone.....	9	Setting Warning Alerts.....	32
Display Icons.....	10		
Function Keys.....	11		
		<b>Advanced Features</b>	
<b>Basic Operation</b>		Changing Greeting Message.....	34
FM Radio.....	13	System Reset.....	34
Programming Preset .....	13	Restricting Use of the Phone.....	35
Using Preset.....	13	Locking / Unlocking the Phone.....	36
Making Calls .....	14	Changing the Lock Code.....	37
Redial.....	15	Tone Length and Back Light.....	38
Receiving Calls.....	15	Language.....	38
Adjusting Volumes .....	16		
Choosing the Ring Tone.....	16	<b>Optional Features</b>	
Message Service.....	17	Call Forwarding .....	40
SMS Services.....	17	Call Waiting .....	40
		Three-Way Calling.....	40
		Data Service.....	40
<b>Internal Phone Book</b>			
Internal Phone Book.....	21	<b>Miscellaneous</b>	
Storing in Phonebook.....	21	Menu Table .....	42
Searching for Entries in Phonebook..	22	Specification .....	43
Erasing An Entry in Phonebook.....	23		
Erasing All Entries in Phonebook.....	23		
One-Touch Dialing.....	24		
Two-Touch Dialing.....	24		
<b>Useful Features</b>			
Call History.....	27		
Call Timer Display.....	28		
Displaying Your Phone Number.....	28		
Mute.....	28		

---

---

## **S**AFETY PRECAUTIONS

1. Avoid placing the phone in a dusty location, or near a source of gas or fire.
2. Don't shake, hit or drop the phone.
3. To If you clean the outside of the phone, use only a soft, dry cloth. The chemicals in alcohol, benzine or acetone can damage the surface of the phone.
4. Do not twist or pull the cord out of the phone.
5. Do not disassemble the phone.
6. DO NOT use the power adaptor if:
  - The power cord is damaged.
  - The phone has been dropped or damaged in any way.
7. Use only the AXESSTEL provided adaptor. Do not use the AXESSTEL adaptor for any other purpose.
8. Use only the AXESSTEL provided antenna. Do not use the antenna for any other purpose.
9. Frequency and length of use can affect the life of the self-charging battery. Contact your customer service if the battery is not operating properly.
10. Use only the designated self-charging battery. Dispose of exhausted batteries properly.
  - Never discard a battery in or near fire or flame.
11. Do not use the telephone near water, for example, near a bathtub, sink, wet basement, or swimming pool.
12. For pluggable equipment, the socket-outlet shall be installed near the equipment and shall be easily accessible.

**NOTE:** The input and output voltages are indicated on the adaptor.  
(Input: AC 100~240V, 50~60 Hz, Output: DC 5V, 2A)



## CHECKING THE PARTS

Once you have unpacked your phone, make sure that you have all the parts shown below. If any piece is missing or broken, please call your customer service.

 
1. Main Unit
2. Handset
3. Power Adaptor
4. User Manual
5. Antenna
6. Battery
7. Stand / Wall mount bracket
8. Handset Cord



## **S**ETTING UP YOUR PHONE

### **Installing the battery**

1. Remove screws with a screw driver and remove the battery cover on the bottom of the phone.
2. Plug the battery connector into the socket.
3. Put the battery cover back and fasten the screws.
4. Turn on the Power Switch "ON".

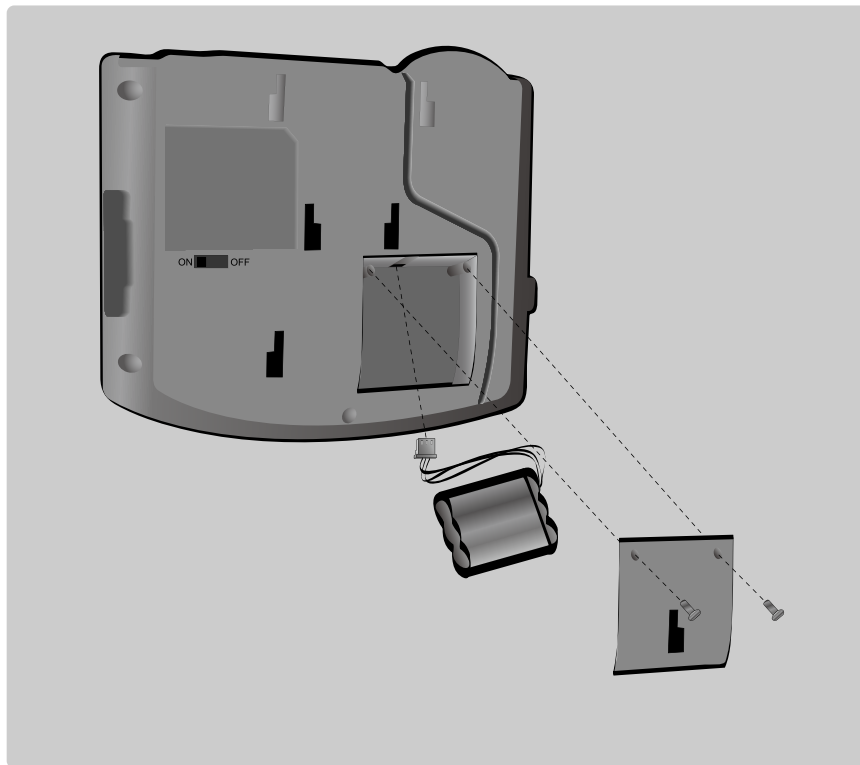

## **S**ETTING UP YOUR PHONE

### **Installing the phone**

This phone operates by receiving DC power from the AXESSTEL power adaptor, which connects to an electrical outlet. The phone is equipped with a rechargeable battery as a back up in case of an AC power failure.

 
#### **Desktop installation**



## **S**ETTING UP YOUR PHONE

### Wall mount installation

1. Mark two mounting hole locations on the wall.
2. Drill two holes at the marked location.
3. Attach the wall mountable bracket, if needed.
4. Tighten the screws firmly.
5. Plug in power connector and route the cords in the groove on the back of the phone.
6. Insert the wall mount bracket hook into the holes on the back of the phone.  
Push the phone against the wall and pull it down firmly until locked.
7. Screw the antenna into antenna connector.
8. Pull out the handset hanger and reinsert it in the reverse direction, so that the receiver can be hanged.

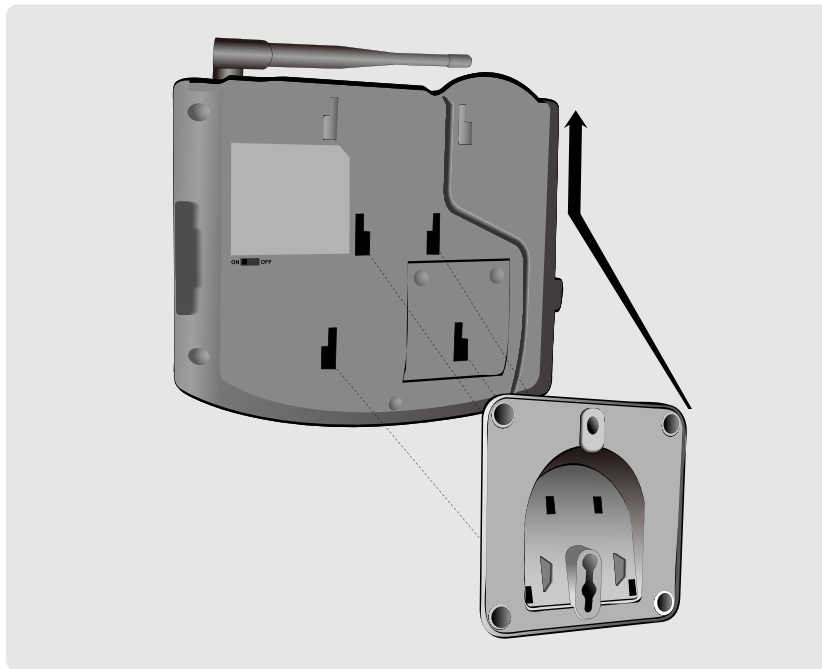

**NOTE :** NOTE: The input and output voltages are indicated on the adaptor.  
(Input: AC 100~240V, 50~60 Hz, Output: DC 5V, 2A)






## **S**ETTING UP YOUR PHONE
 
### **Service Status Check**

#### **Display in the Service Area**

When the power cord is connected properly, all segments in the LCD window will turn on briefly and Power LED will light. The number of bars of signal strength indicator (antenna icon) indicates the strength of service signal of the area.

The display will show the greeting with date and time. You can change the greeting. (See page 34.)

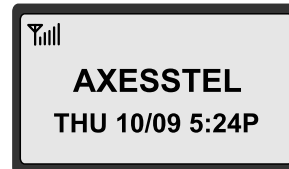


#### **Display in area with no service**

When there is no service signal detected in your area, no antenna bar appears. Contact your service provider for the coverage area information.

First, check if the antenna is connected firmly.


 
## **G**ETTING TO KNOW YOUR PHONE

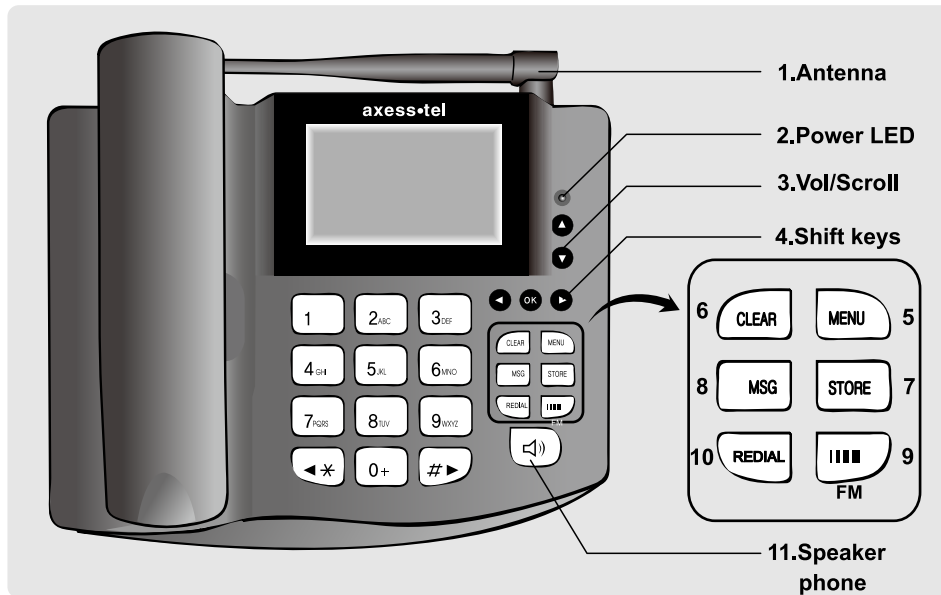

- 1. Antenna:** Adjusting the position of antenna improves the sound quality of the call.
- 2. Power LED:** The Power LED lights when the power is connected. Under battery power, this LED is always off.
- 3. Vol/Scroll:** Lets you adjust sound levels and scroll through the menu options and displays.
- 4. Shift Keys:** Press to move the cursor when entering letters and to scroll through menu options and displays.
- 5. Menu:** Press to access the phone's menus.
- 6. Clear:** Lets you clear your last entry.
- 7. Store:** Stores phone numbers, and any settings you select in the menu within the phone's memory
- 8. Message:** Press to retrieve messages.
- 9. FM Radio:** Turns on or off the FM Radio
- 10. Redial:** Allows you to redial the last number called.
- 11. Speaker Phone:** Turns on or off the speaker phone feature.



## **D**ISPLAY ICONS

Icons display on the screen to indicate what features you are using, signal strength and battery status etc...



Indicate the strength of the signal. More bars indicates stronger signal.



Indicates the level of battery power. The more bars, the more power. When the battery is low, the icon blinks, and an alert tone sounds.



Indicates that you are using the phone's menu.



Indicates that the alarm has been set.



Indicates that you are in the Phonebook menu.



Indicates that you have a text message or a voice mail message.



Indicates that a voice or data call is in progress.

## **F**UNCTION KEYS



Press this key to display the phone's main menu.



Clears information from the display screen.

- To erase one character from the display screen, press it once.
- To erase **all** characters on the screen, press and hold.
- To go back one step in the menu mode, press it once.



Press this key to retrieve messages.



Press this key to store a phone number in the phone book, to save menu settings.



Press this key to redial the **last number called** or to connect a **call** right after dialing the number without waiting until the call is connected automatically.



Press this key to turn on or off the FM Radio. When there is an incoming call or when the user is attempts to make an outgoing call, the FM Radio turns off automatically.



The Speaker button is used to place or receive a call without using the handset. The integrated microphone and speaker on the main unit allows hands free conversation.



# **Basic Operation**

- FM Radio**
- Programming Preset**
- Using Preset**
- Making Calls**
- Redial**
- Receiving Calls**
- Adjusting Volumes**
- Choosing the Ring Tones**
- Message Service**
- SMS Services**



## **F** M RADIO

### Using FM Radio

1. Press to turn on the Radio
2. Entering Radio Mode, Preset Channel and Frequency display on the screen
3. Press or lightly to move the preset channel.
4. Press and hold or to scan to next available channel.
5. Press to enter the preset mode.
6. Press or to change the volume.
7. To stop FM Radio, press .



**Note:** When you lift the phone handset or an incoming call comes in, FM Radio stops automatically, switching to the phone mode. Also pressing to use speaker phone also stops the FM Radio.

 
**Note:** Power cord acts as FM Radio Antenna. For best reception, plug in the power cord to the phone while listening to FM Radio.

### PROGRAMMING and USING PRESET

#### 10 programmable presets are available.

Preset mode and normal mode can be toggled back and forth.

1. Press to toggle between normal and preset modes.
2. "Preset Mode" and preset numbers appear.
3. Press or to select the preset number.  
Note : Presets 6~10 are indicated by highlighted "+5".
4. Press and hold Number key what you want to store
5. Press , or Number key to change  
From one preset to another.

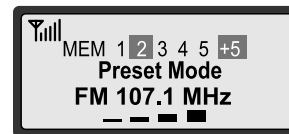


#### Auto Preset

Press button for automatic scan of available stations. Once the scan is performed, the phone will automatically store detected stations to 10 presets.



## MAKING CALLS

 1. Make sure your phone is turned on.
2. Pick up the handset to hear a dial tone.  
When the phone fails to acquire service signal, you will hear "No Service" tone (intermittent tone).
3. Dial the number to call. The LCD window displays the number.
4. Wait for a moment for auto calling or press **REDIAL**.
5. When the other person answers, begin conversation.
6. To end the call, replace the handset on the main unit.

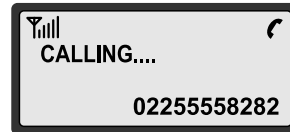

**NOTE1:** Modifying a phone number while dialing..

- To erase the last digit entered: Press **CLEAR**.
- To erase the entire number: Press **CLEAR** and hold.



**NOTE2:** Automatic calling

The phone was set to places a call automatically 4~10 seconds after last digit entry from the factory. To disable automatic calling or change the delay time,

1. Press **MENU**, **0**, **1**.
2. Press **←** or **→** to select different time or 'OFF', then press **OK** to save.  
Once automatic calling is disabled, you have to dial the number and press **REDIAL** to place a call.

## **R**EDIAL



**Redial the last number you dialed.**

1. Pick up the handset or press .
2. Press .

 
**NOTE :** You may not redial when there is no last number dialed stored in the memory. "NO LAST CALL!" message is displayed on the LCD.

## **R**ECEIVING CALLS

**When there is an incoming call, the phone rings and blinks "Incoming Call" message on the display.**

1. Simply pick up the handset or press  to answer the call.
2. To disconnect, replace the handset or press .

**NOTE:** When the ringer volume is set to 'Silent', the phone does not ring. Only the "Incoming Call" message blinks.


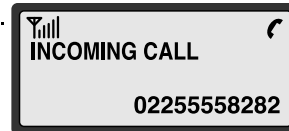


**When the Caller ID service is activated.**

### **Caller ID Display**

The Caller ID feature displays the caller's number when the phone receives a call. If the caller's name and number are stored together in the phone book, the caller's name is displayed. Contact your service provider to activate this feature.

  **NOTE:** If the call is not answered, the phone displays the "Missed Call" message with the call arrival date and time.

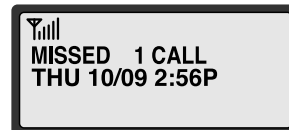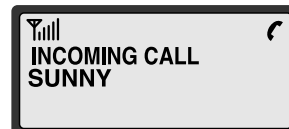



## A DJUSTING VOLUMES

You can control the sound volumes including the key tone, earpiece, speaker and the ringer



### Adjusting key tone volume

Press ▲ or ▼ repeatedly until it reaches proper volume. Press OK to save.



### Adjusting external speaker volume

Press ▲ or ▼ repeatedly during hands free conversation to adjust external speaker volume.



### Adjusting earpiece volume

During phone conversation, pick up the handset and press ▲ or ▼ repeatedly during a phone call to adjust earpiece volume.



### Adjusting ring volume

1. Press MENU, 5, 3.
2. Press ◀, ▶ to adjust ringer volume.
3. Press OK to save.



**NOTE:** If 'Silent' is selected, the phone does not ring when an incoming call comes in. Only the "INCOMING CALL" message blinks on the display.

## C HOOSING THE RING TONES

You can choose from twelve different ring tones.

1. Press MENU, 5, 2.
2. Press ◀ or ▶ to select ring type.
3. Press OK to save



## **M**ESSAGE SERVICE

Message Service is network dependent feature and is available only when your service provider supports it. Check your service provider is providing message service before using this function.

### Sending New Text Messages

1. Press **MSG**. Press **1** (New Message)
2. Write message using the keypad. Toggle between uppercase, lowercase, and numeric by pressing **MSG** button. Press **STORE**.

**NOTE:** See page 21 for more information on text edit.

3. Destination Number (Up to 20 multiple destinations) :

 
 
 
 
 
- Enter a single destination number and press **STORE**.
- **Group Message:** To send the message to multiple destinations, scroll down to next available slot and enter additional numbers.
- Press **STORE**.
- To retrieve a number from phonebook, press **MENU** to bring up phonebook.

4. Once the destination number has been entered, Press **STORE** to confirm transmission.

**NOTE:** To change default message options, access Message Options menu.

### Sending Saved Text Messages

1. Press **MSG**, **6** (Saved MSG).
2. Select message to resend with **◀** or **▶** and press **OK**.
3. To send the message again, press **STORE**.  
To edit the message press **MSG**.

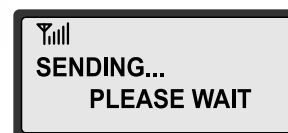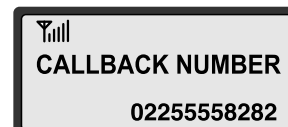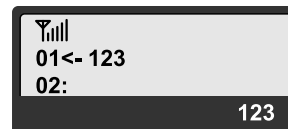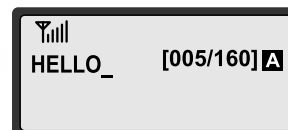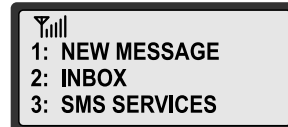



### Received Text Message

1. When text message arrives, 'MESSAGE! 10/12 4:04 PM' displays shortly and appears in the icon line.
2. Press **MSG**, **2** (Inbox).
3. Press **◀** or **▶** to select message you want to see and press **OK**.
4. The message, arrival time and call back number (if available) display. If the message is long, it will be scrolled down in 3 seconds automatically.  
To scroll up and down manually, press **◀** or **▶**.
5. If the message contains call back number and you want to make a call to that number.  
Press **REDIAL** if you want to call back.

**NOTE:** If the call back number is stored in the phonebook with a name, the name will display instead of the phone number.

6. To forward the received message to another number, press **MENU**.
7. To write a reply to the sender, press **MSG**.



 
 
 
 
 
 
### Delete Selected Text Message

1. Press **MSG**, **2** (Inbox).
2. Press **◀** or **▶** to select message you want to delete and press **STORE**.
3. Press **STORE** again.
4. Select 'YES' with **◀** or **▶** and press **OK**.



### Retrieving Voice Messages

1. When voice messages arrive, "VOICE MSG" 10/12 4:04 PM" shortly appears and appears in the icon line.
2. Press **MSG**, **4** (Voice MSG) or press **OK** to view message directly
3. Press **REDIAL** to dial voice mail service center.

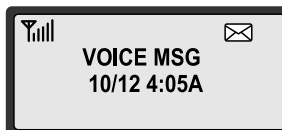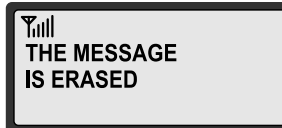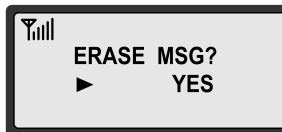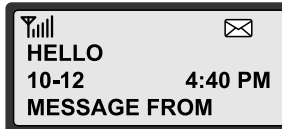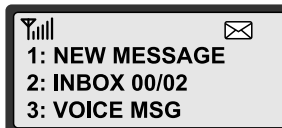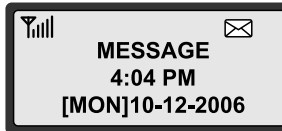



### Erasing All Messages

1. Press **MSG** , **7** (Erase MSG) .
2. Select 'YES' with **←** or **→** .
3. Press **OK** .



### Setting/Releasing Message Alert

1. Press **MSG** , **8** (Option MSG), **2** (MSG Alert).
2. Select ON or OFF with **←** or **→** .
3. Press **OK** .

**NOTE:** While the message alert is set, the phone will alert the user when messages arrive.



### Saving Sent Message

1. Press **MSG** , **8** (MSG Option), **5** (Save Sent MSG).
2. Press **←** or **→** to select "ON" or "OFF".
3. Press **OK** .

**NOTE:** While this option is turned on, outgoing new messages will be automatically saved. Retrieve the saved messages by accessing Saved Message Menu.



### Setting Message Priority Type

1. Press **MSG** , **8** (MSG Option), **4** (MSG Priority).
2. Press **←** or **→** to select "NORMAL" or "URGENT".
3. Press **OK** .



### Setting Message Auto Delete

1. Press **MSG** , **8** (MSG Option), **6** (Auto Delete).
2. Press **←** or **→** to select "ON" or "OFF".
3. Press **OK** .

When Auto Delete is enabled, the phone will automatically delete oldest received messages in INBOX in case of full memory.



# Phone book

**Internal Phone Book**

**Storing in Phonebook**

**Searching for Entries in Phonebook**

**Erasing An Entry in Phonebook**

**Erasing All Entries in Phonebook**

**One-Touch Dialing**

**Two-Touch Dialing**

## INTERNAL PHONE BOOK

Your phone has an internal "Phone Book" in which you can store up to 99 frequently used names and numbers.

## STORING IN THE MEMORY PHONEBOOK

1. Press **MENU**, **1**, **2**.
2. Enter the name by pressing the alphanumeric keypad and pressing **STORE** after completed.

**NOTE1:** If you do not want to enter a name, just press **STORE** here. The number will be saved as "No Name".

**NOTE2:** Name entry is limited to maximum of 16 letters.

### How to Enter & Edit Text

 
 
You can enter letters using the alphanumeric keypad. Each button has 3 to 4 letters assigned. Each stroke on the button scrolls the assigned alphabet letters and the numeric value. Stop pressing when the letter you want appears. You can switch between capital and lower-case letters by pressing **STORE**. Press **STORE** again to get back to capital letters.

To enter special characters, press **1** repeatedly.

For space, press **0**. To go back, press **0**.

A single stroke on **CLEAR** will erase the last letter in line.

3. Enter the telephone number and press **STORE**.  
Up to 32 digits can be saved.
4. Select the entry type. (Family, Friend, etc.)
5. An empty location displays automatically.
6. Press **STORE** to save the number in the location.  
To assign a different location, enter 2 digit location number and press **STORE**.

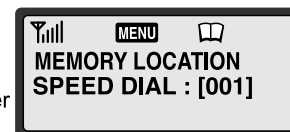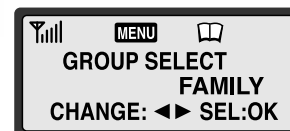



**NOTE:** If you select the location in which a number has already been stored, "OVERWRITE?" will be displayed. Press **STORE** to overwrite or press **CLEAR** to go back to automatic location.



6. "CONFIDENTIAL ?" will be displays. Press **STORE** if no secret feature is necessary. To store the number in secret, select 'YES' by pressing **▲** or **▼** and press **OK**.



**NOTE:** Secretly saved number will not be displayed unless the lock code is entered. One or two touch-dialing secretly saved number will prompt lock code entry.

## **S** EARCHING FOR ENTRIES IN PHONEBOOK

You can search information stored in the phone book in various way and make a call directly from the phonebook.



### Searching by Name

1. Press **MENU**, **1** (Phone book), **1** (Search), **1** (Name).
2. Enter all or part of the name and press **OK**.

Example) Enter A and press **OK** to find all names that start with A.

3. The phone displays the memory location numbers along with the name of the first match.

**NOTE:** "NO NAME MATCHES" appears when there is no name matching with your entry.

4. Press **▲** or **▼** to search for the name you're looking for and press **OK** to display the number.

**NOTE:** "ENTER LOCK CODE" appears when you try to access secretly saved number. Enter lock code and press **STORE**.

5. Press **REDIAL** to dial the number displayed.





### Searching by Phone Number

1. Press **MENU**, **1** (Phone book), **1** (Search), **2** (Number).
2. Enter all or part of the number you remember and press **OK**.
3. The phone displays the memory location and names which contain your entry.

**NOTE:** "NO NUMBER MATCHES" appears when there is no number matching your entry.

4. Press **▲** or **▼** to search for the name you're looking for and press **OK** to display the number.

**NOTE:** "ENTER LOCK CODE" appears when you try to access secretly saved number.  
Enter the lock code and press **OK**.

5. Press **REDIAL** to dial the number displayed.



### Searching by Memory Location

1. Press **MENU**, **1** (Phonebook), **1** (Search), **3** (Location)
2. Enter the three-digit memory location. The phone displays the information of the memory location.

**NOTE:** "EMPTY LOCATION!" displays when you enter location number that is empty.

3. Press **OK** to display the number.

**NOTE:** "ENTER LOCK CODE" appears when you try to access secretly saved number.  
Enter the lock code and press **OK**.

4. Press **REDIAL** to dial the number displayed.

