


PC running test software

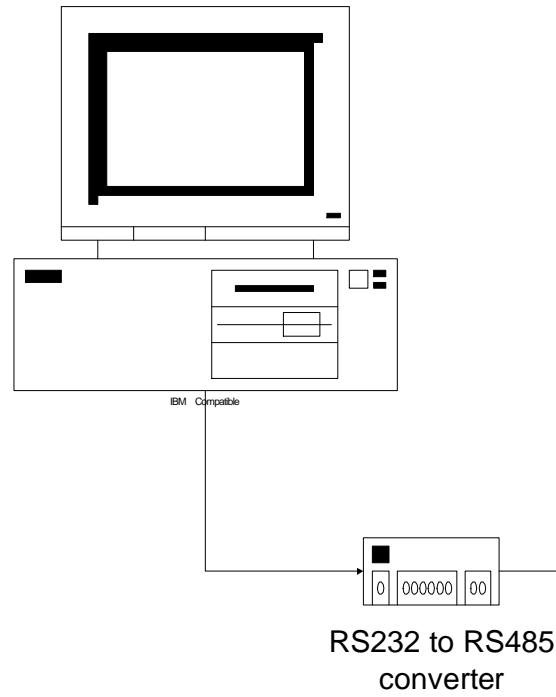

RS232 to RS485  
converter

RS485 communications link

This link is only used to get transaction logs and change operator information. It is not run on a continuous basis

ProxPad Plus  
device being  
listed



RS485



Typical user ID  
card