



Keep these instructions for future reference. They contain important information.  
**IMPORTANT:** Please read all "Consumer Information" before operating your vehicle.

### TYCO R/C SUPPORT

Questions or problems with your product?  
**DON'T RETURN IT TO THE STORE!**  
 Just call us for help.

U.S. consumers may also register their products at this number:  
**1 888 557-TYCO (8926)**

[tycorc.com](http://tycorc.com)

J9862-0920  
 J9863-0920  
 Asst. H9314

**CAUTION-ELECTRIC TOY.** NOT RECOMMENDED FOR CHILDREN UNDER 8 YEARS OF AGE. AS WITH ALL ELECTRIC PRODUCTS, PRECAUTIONS SHOULD BE OBSERVED DURING HANDLING AND USE TO PREVENT ELECTRIC SHOCK. INPUT: 120VAC, 60Hz, 12VA. OUTPUT: 8.5VDC, 420mA, 3.6W.

**CAUTION:** Surfaces may become hot and cause burns if electronics get wet. Do not operate vehicle through water or snow.

### I. CREATURE FEATURES

#### Vehicle

#### Transmitter

- 7.2V NiCd battery pack.
- 7.2V NiCd wall charger.
- 9V battery for transmitter.

#### Vehicle

- Ⓐ ( I ) ON/ ( 0 ) OFF switch
- Ⓑ Battery door
- Ⓒ L.E.D. Eye Indicator

☀ Eyes will change color depending on which mode N.S.E.C.T.™ is in - yellow for exploration, red for attack.

 
 
 
#### Transmitter

- Ⓐ Forward/Reverse left side
- Ⓑ Forward/Reverse right side
- Ⓒ Antenna
- Ⓓ Power Claw control
- Ⓔ Cannon trigger (Hold down for rapid-fire, press once for single-shot).
- Ⓕ Raise/Lower gun
- Ⓖ Battery door
- Ⓗ ON/OFF switch


### II. BASIC OPERATION

- Ⓐ LEFT UP/RIGHT UP: FORWARD
- Ⓑ LEFT UP/RIGHT RELEASE: TURN RIGHT
- Ⓒ LEFT UP/RIGHT DOWN: SPIN RIGHT
- Ⓓ RIGHT UP/LEFT RELEASE: TURN LEFT
- Ⓔ RIGHT UP/LEFT DOWN: SPIN LEFT
- Ⓕ LEFT DOWN/RIGHT DOWN: REVERSE




If your vehicle doesn't move when you use the transmitter there's a good chance your vehicle's battery is ready for a recharge.

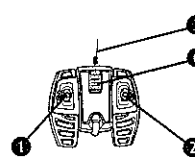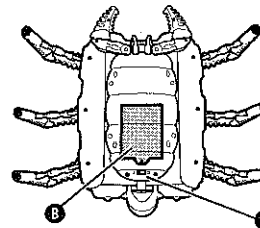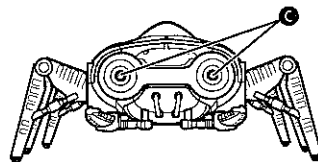

Front View

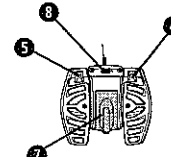 

Back View

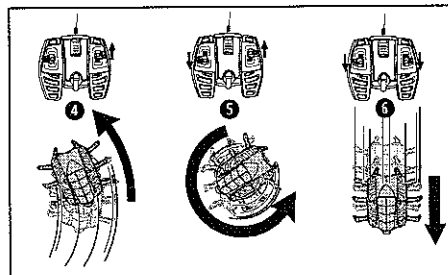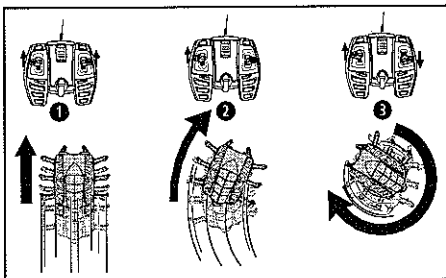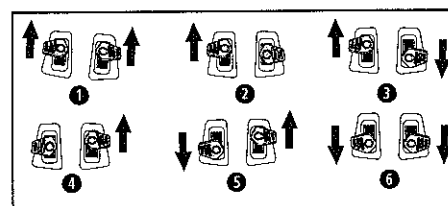   

### TO SHOOT GUN

1. Hold down center button on top of transmitter (#6) to raise gun.
2. Squeeze trigger on bottom right side of the transmitter.
3. Hold down center button (#6) to lower gun or tap button gently to adjust height.

N.S.E.C.T.<sup>™</sup> can shoot and walk simultaneously but cannot shoot while the cannon is being raised and lowered.

When the gun is in the lowered position under the wings, the eyes will be yellow. When the gun is in the upper position – wings spread out – the eyes will be red.

The gun will only shoot when the eyes are in the red mode.

If the gun will not retract into N.S.E.C.T.'s body, check under the gun to make sure that no loose darts or debris have impeded its path.

**!** Do not fire at people or animals or at point blank range. Keep hands clear of N.S.E.C.T.'s legs.

### III. BATTERY INSTALLATION

Requires a 7.2v Tyco® (NiCd) battery pack for vehicle and a 9v battery for transmitter.

#### Vehicle

1. Unscrew to open the battery door (screwdriver not included). Pull the battery door up and away from the vehicle.
2. Insert the battery pack into the battery compartment as shown.
3. Replace the battery door. Screw back in to lock the battery door.
4. To remove the battery pack: First turn the vehicle off, unscrew the battery compartment, open the battery door and lift out the battery pack.

**!** **CAUTION:** Battery pack may be hot after use. Allow to cool before touching.

#### Transmitter

 
 
 
1. To install the transmitter battery, open the battery door as shown.
2. Install one 9V battery in the battery compartment as shown. Observe the battery polarity (+ and -).
3. Close the battery door.

### IV. BATTERY CHARGING/CARE



**!** **CAUTION:** Use only the charger supplied with this toy. Do not use any other charging source.

Use only Tyco® 7.2V NiCd battery pack. Other batteries may leak or rupture, causing personal injury and damage.

1. Plug the wall pack charger into a standard wall outlet.
2. Connect the wires leading from the battery pack to the wall pack charger connector. Make certain the two connectors are tightly snapped together.
3. To disconnect the wires, push down on the connector clip and pull apart.
4. After charging, the battery will feel warm. This condition is normal for fully charged batteries.
5. New battery packs must be charged for 5 1/2 hours the first two times charged. Subsequent charges will require 4 hours. Charging the battery pack for more than 4 hours will not give you a longer running time. 4 hours is all that is required for a fully charged battery pack.
6. Unlike alkaline batteries, which lose power gradually, a NiCd battery will run for its normal running time and then lose

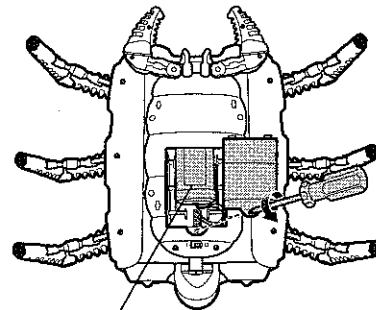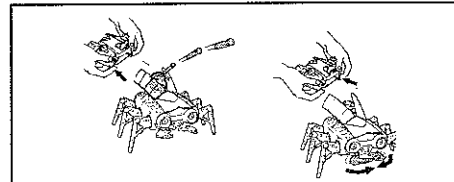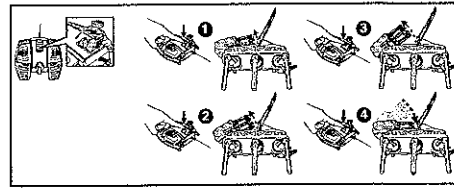

  7.2v d.c. NiCd,  
1 X 6 Sub-C,  
1600 mAh

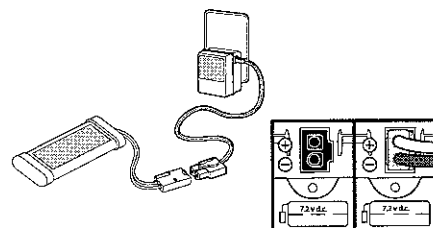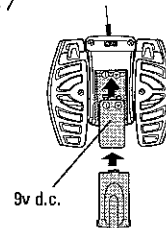

most of its power at once. That's when you'll know it's time to recharge the battery pack.

7. After use, the battery pack will be hot! Wait at least 20 minutes until the battery pack cools before recharging. Recharging a warm or hot battery pack will greatly reduce the number of times your battery pack can be recharged.
8. The charger must be disconnected from the electric supply.

#### RECHARGEABLE BATTERY INFORMATION:

- DO NOT RECHARGE BATTERY PACK IF IT'S HOT. ALLOW IT TO COOL BEFORE RECHARGING.
- DO NOT RECHARGE A BATTERY PACK THAT SHOWS LEAKAGE OR CORROSION.
- DO NOT DISASSEMBLE THE BATTERY PACK. THE BATTERY PACK IS A SEALED RECHARGEABLE NICKEL-CADMIIUM BATTERY.
- EXERCISE CAUTION IN HANDLING A HOT BATTERY PACK.
- IF BATTERY PACK AND/OR CHARGER ARE WET, THOROUGHLY DRY BEFORE CHARGING.
- DO NOT RECHARGE NON-RECHARGEABLE BATTERIES.

#### Note to Adults:

- Remove rechargeable batteries before recharging.
- The battery charger is for adult use only.
- Regularly examine for damage to the plug, enclosure and other parts. In the event of any damage, the toy must not be used with the charger until the damage has been repaired.
- The charger is not a toy.

THIS PRODUCT USES A NiCd RECHARGEABLE BATTERY PACK. THE BATTERY MUST BE RECYCLED OR DISPOSED OF PROPERLY. FOR FURTHER INFORMATION REGARDING BATTERIES OR THEIR DISPOSAL PLEASE CONTACT THE APPROPRIATE LOCAL OFFICE.

 
CONTAINS NICKEL-CADMIIUM BATTERY. BATTERY MUST BE RECYCLED OR DISPOSED OF PROPERLY. FOR FURTHER INFORMATION REGARDING BATTERIES AND THEIR DISPOSAL PLEASE CALL 1 • 888 • 557 • 8926



#### V. QUICK TIPS

- 1 When N.S.E.C.T.™ starts to lose power you'll start to lose performance. It's time for a recharge. As a rule, you should always start with a fully charged battery.
- 2 Be forewarned--N.S.E.C.T.'s running time may change depending on your driving style.
- 3 Radio interference can mess up the signals you're sending, causing N.S.E.C.T.™ to perform erratically. Things to look for that may be causing the interference: other R/C vehicles running on the same frequency, electrical wires, large buildings, CB radios, or other wireless gear that can cause interference.
- 4 Point your transmitter antenna up -- not down toward N.S.E.C.T.™. If N.S.E.C.T.™ escapes your antenna's grasp, you can kiss proper functioning goodbye.
- 5 Don't drive N.S.E.C.T.™ through water or snow. Not only won't you get very far, you might ruin the creature. If N.S.E.C.T.™ does get wet, wipe it with a towel and allow it to dry completely.
- 6 Don't store N.S.E.C.T.™ near heat or in direct sunlight. Always turn the switches OFF and, if you're not planning on any search and destroy maneuvers for awhile, remove all the batteries...really. It's amazing how one bad battery can destroy a super-secret experimental creature technology (that would be N.S.E.C.T.™).

☀ Please recharge your battery when you notice that the N.S.E.C.T.™ eyes are blinking slowly. If the N.S.E.C.T.™ is blocked by some obstacle for an extended period of time it may turn itself off. Remove N.S.E.C.T.™ from the path of the obstacle. If it cannot receive any signal from the transmitter, the eyes will blink yellow. If the battery is dying the eyes will blink red.

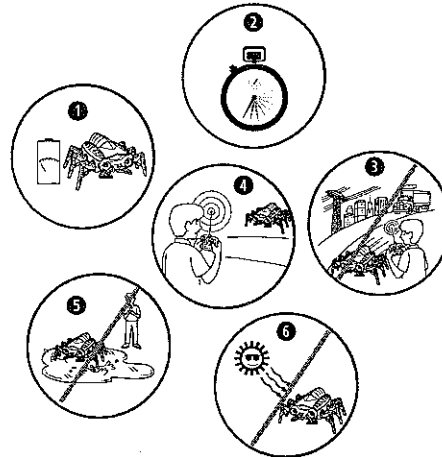

#### VI. CONSUMER INFORMATION

Note to adults: To ensure that the child's play is both safe and fun, please review all the operating instructions and safety tips with your child.

#### Safety Tips

- Yes, N.S.E.C.T.™ is a multi-terrain vehicle but you should NEVER, EVER play with it on the street!
- DO NOT pick up N.S.E.C.T.™ while in motion. Take your fingers off the transmitter buttons and then pick it up.



**CAUTION:** Keep fingers, hair and loose clothing away from N.S.E.C.T.™ while it's on.

- Adult supervision is recommended when N.S.E.C.T.™ is being used.
- To avoid accidental or unwanted operation, remove all the batteries when not in use. Always turn N.S.E.C.T.™ OFF before removing the batteries.

#### BATTERY SAFETY INFORMATION

In exceptional circumstances batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:

- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the product before being charged (if designed to be removable).
- Rechargeable batteries are only to be charged under adult supervision (if designed to be removable).
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Do not mix old and new batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the product.
- The supply terminals are not to be short-circuited.
- Dispose of battery(ies) safely.
- Do not dispose of this product in a fire. The batteries inside may explode or leak.

#### Battery Performance Note:

For best performance use regular or high-performance alkaline batteries (where disposable batteries are called for).

90-DAY-LIMITED-WARRANTY – TYCO®-R/C-PRODUCTS

Mattel, Inc. warrants to the original consumer purchaser that this product will be free of defects in material and workmanship for ninety (90) days (unless specified in alternate warranties) from the date of purchase. Mattel will replace the product in the event of such a defect within the warranty period.

In the event of a defect covered under this warranty, first call the toll-free number listed below. Many problems can be solved in this manner. If necessary, you will be instructed to return the product, postage prepaid and insured, to the address below. Enclose your name, address, dated sales receipt, and a brief explanation of the defect. Replacement and return shipment will be free of charge.

This warranty does not cover damage resulting from unauthorized modification, accident, misuse or abuse. If the product is returned without a dated sales receipt the product may be excluded from coverage under this warranty.

Mattel's liability for defects in material and workmanship under this warranty shall be limited to repair or replacement, at our sole option, and in no event shall we be responsible for incidental, consequential, or contingent damages (except in those states that do not allow this exclusion or limitation). This warranty is exclusive, and is made in lieu of any express or implied warranty. **Valid only in U.S.A.** This warranty gives you specific legal rights and you may have other rights, which vary from state to state. Some states do not allow the exclusion of incidental or consequential damages, so the above exclusions or limitations may not apply to you.

TOLL-FREE NUMBER: 1-888-557-TYCO (8926) (valid only in U.S.A.)  
Hours: 8:00 A.M. - 5:00 P.M. Eastern Time; Monday - Friday. Expect some delay in January following the holiday season. Please be patient and keep trying the toll-free number.

ADDRESS FOR RETURNS:  
CONSUMER RELATIONS  
636 GIRARD AVENUE  
EAST AURORA, NY 14052

© 2006 Mattel, Inc., 333 Continental Blvd., El Segundo, CA 90245  
U.S.A. Consumer Relations: 1-888-557-8926. **PRINTED IN CHINA.**  
All Rights Reserved. MATTEL, TYCO and associated trademarks and trade dress are owned by Mattel, Inc. Retain this address for future reference: Mattel U.K. Ltd., Vanwall Business Park, Maidenhead SL6 4UB. Helpline 01628 500303. service.mattel.com Mattel Australia Pty Ltd., Richmond, Victoria 3121  
- Consumer Advisory Service: 1300 135 312. Mattel East Asia Ltd, Room 1106, South Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China. Diimport & Diedarkan Oleh: Mattel SEA Ptd Ltd. (993532-P) Lot 13.5, Menara Lien Hoe, Persiaran Tropicana Golf Country Resort, 47410 P.J. Tel: 03-78803817, Fax: 03-78803867.

**COMPLIANCE WITH FCC REGULATIONS (VALID IN U.S. ONLY)**

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This device generates and uses radio frequency energy and if not used properly may cause interference to radio and television reception. It has been tested and found to comply with the limits set by the FCC which are designed to provide reasonable protection against such interference.

**NOTE:** Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.



Protect the environment by not disposing of this product with household waste [2002/96/EC]. Check your local authority for recycling advice and facilities.