

8+

TYCO[®] R/C

ASST. K7262


TRI CLOPS

RADIO CONTROL MUTANT

CAUTION-ELECTRIC TOY. NOT RECOMMENDED 8 YEARS OF AGE. AS WITH ALL ELECTRIC PRODUCTS, PRECAUTIONS SHOULD BE OBSERVED DURING HANDLING AND USE TO PREVENT ELECTRIC SHOCK. INPUT 120 VAC, 60 HZ, 0.10A. OUTPUT: 11.5 VDC, 1.05VA

INSTRUCTIONS

CONTENTS

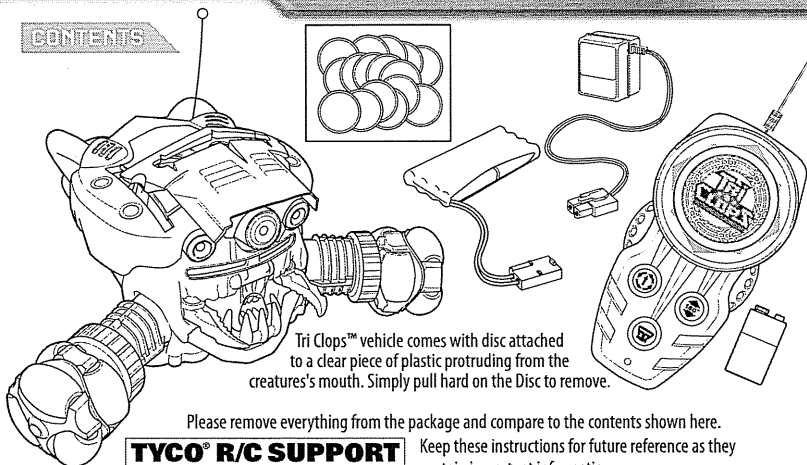

Tri Clops™ vehicle comes with disc attached to a clear piece of plastic protruding from the creature's mouth. Simply pull hard on the Disc to remove.

Please remove everything from the package and compare to the contents shown here.

TYCO[®] R/C SUPPORT

Questions or problems with your product?
DON'T RETURN IT TO THE STORE!
 Just call us for help.

U.S. consumers may also register their products at this number.
1 888 557-TYCO (8926)

tycorc.com

Keep these instructions for future reference as they contain important information.


IMPORTANT: Please read all "Consumer Information" before operating your vehicle. **CAUTION:** Surfaces may become hot and cause burns if electronics get wet. Do not operate vehicle through water or snow.

LET'S GET STARTED!

TO CHARGE THE 9.6V TYCO[®] BATTERY PACK, PLEASE FOLLOW THESE INSTRUCTIONS:

1. Plug wall pack charger into standard wall outlet.
2. Connect the wires leading from the battery pack to the wall pack charger connector. Make certain the two connectors are tightly snapped together.
3. To disconnect wires, push down on the connector clip and pull apart.
4. Your battery pack consists of new parts and materials; therefore, you should charge the battery pack for 5-1/2 hours the first two times you charge the battery. Subsequent charges will require only 4 hours.
5. After charging for 4 hours, the battery will feel warm. This condition is normal for fully charged batteries.
6. Charging the battery pack for more than 4 hours will not give you a longer running time. 4 hours is all that is required for a fully charged battery pack.
7. Unlike alkaline batteries, where the power loss is gradual, a NiCd (Nickel-Cadmium) battery will run for its normal running time, depending on your particular vehicle, and then lose most of its power at once. It is time to recharge the battery pack.
8. After use, the battery pack will be hot! Wait at least 20 minutes until the battery pack cools before recharging. Recharging a warm or hot battery pack will greatly reduce the number of times your battery pack can be recharged.
9. **Caution:** Use only the charger supplied with this toy. Do not use any other charging source.

9.6V d.c. NiCd, 1 x 88 AA,
800mAh

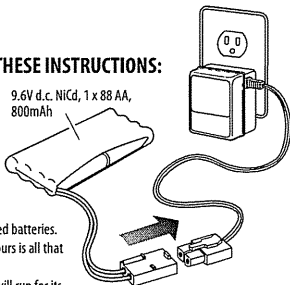


Requires a 9.6V Tyco[®] (NiCd) battery pack for vehicle and a 9V battery for transmitter.

© 2007 Mattel, Inc. All Rights Reserved.

HOW TO BRING TRI CLOPS™ TO LIFE!


VEHICLE

1. First turn Tri Clops™ vehicle upside down as shown at right (1).
2. Now unlatch the battery compartment cover (see 2 below).
3. Remove battery compartment cover (3).
4. Hold the Tyco® 9.6V battery pack (included) facing up as shown. Insert the battery connector into the connection slot as shown (4).
5. Insert a fully charged 9.6V battery pack (5).
6. Replace the battery compartment cover and close the latch.

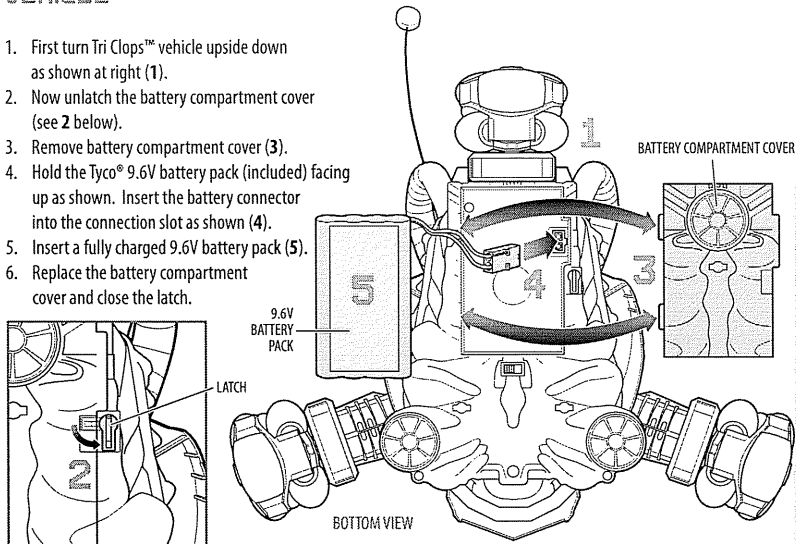


TRANSMITTER

1. Open the battery door as shown.
2. Install one 9V battery (included) with polarity (+/-) as shown inside the battery compartment.
3. Close the battery door.

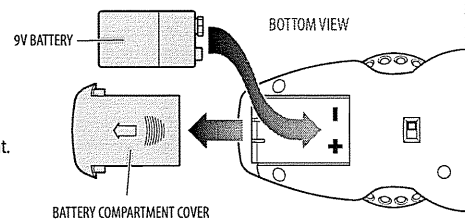


SWITCH TRI CLOPS™ ON

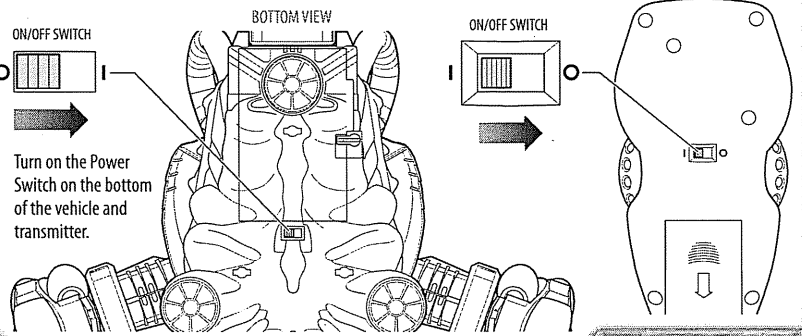


Turn on the Power Switch on the bottom of the vehicle and transmitter.

When you turn the Tri Clops™ on, it will start out in the **MUTANT ATTACK MODE**.

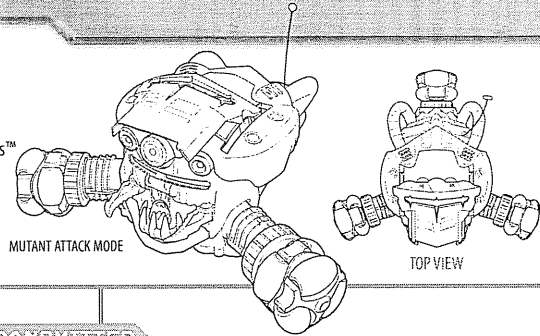


TRI CLOPS™ TRANSMITTER

CONTROLS

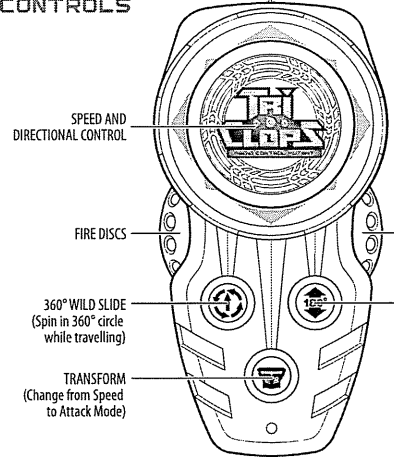

SPEED AND DIRECTIONAL CONTROL

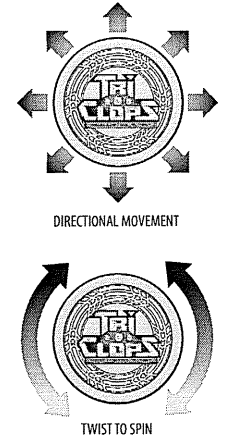

HANDLING TRI CLOPS™ WITH CARE!

Note to Adults: To ensure that the child's play is both safe and fun, please review all the operating instructions and safety tips with your child.

SAFETY TIPS

- The Tri Clops™ vehicle works best on a smooth, flat surface.
 - You should NEVER, EVER drive your vehicle on the street!
 - DO NOT pick up vehicle while in motion. Take your fingers off the Transmitter buttons and then pick it up.
 - ⚠ **CAUTION:** Keep fingers, hair and loose clothing away from vehicle while it's on.
- When transforming between 'MUTANT SPEED MODE' mode and 'MUTANT ATTACK MODE' the visor swings up and down quickly. Keep feet, fingers and anything that moves away from vehicle when transforming between modes. Adult supervision is recommended when vehicle is being used.
- To avoid accidental or unwanted operation, remove all the batteries when not in use. Always turn Tri Clops™ vehicle OFF before removing the batteries.

GUIDE TIPS

- ◆ When Tri Clops™ vehicle starts to lose power you'll start to lose performance. It's time for a recharge. As a rule, you should always start with a fully charged battery.
- ◆ Be forewarned – vehicle running time may change depending on your driving style.
- ◆ Radio interference can mess up the signals you're sending, causing the vehicle to perform erratically. Things to look for that may be causing the interference: other R/C vehicles running on the same frequency, electrical wires, large buildings, CB radios, or other wireless gear that can cause interference.
- ◆ Point your transmitter antenna up - not down toward vehicle. If the vehicle escapes your transmitter's range, you can kiss proper functioning goodbye and send your creature into its default blink mode.
- ◆ Don't drive the vehicle through water or snow. Not only won't you get very far, you might ruin the vehicle. If the vehicle does get wet, wipe it with a towel and allow it to dry completely.
- ◆ Don't store vehicle near heat or in direct sunlight. Always turn the switches OFF. and, if you're not planning on using the vehicle for a while, remove all the batteries... really. It's amazing how one leaky battery can ruin a really fun toy.


MUTANT SPEED MODE



Press the **TRANSFORM** button on the Transmitter to change into **MUTANT SPEED MODE**.


Features of the **MUTANT SPEED MODE** are:

- ◆ Ultra-Fast
- ◆ Defensive (Visor Down)
- ◆ Good Stability
- ◆ Fast Retreat

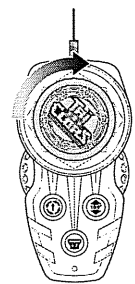


EXAMPLE - CLOCKWISE FORWARD:
TURN CONTROL CLOCKWISE

NOTE: Pressing the 360° **WILD SLIDE** button, the 180° **REVERSE ATTACK** button, or either of the **FIRE DISC** buttons will automatically transform the vehicle into the 'MUTANT ATTACK MODE'.

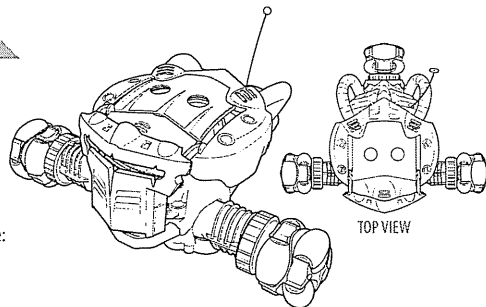

TOP VIEW



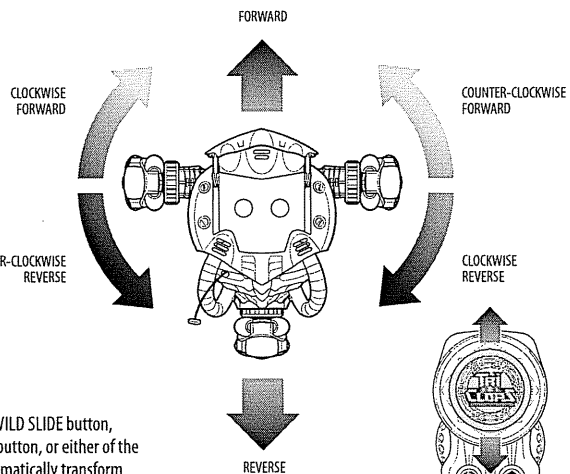


EXAMPLE - FORWARD & REVERSE:
PUSH CONTROL FORWARD OR BACKWARDS


LOAD DISCS

Discs can be loaded only while the creature is in the **MUTANT SPEED MODE**.

1. Grasp finger holes and lift back edge of cover up.
2. Tilt cover back as shown.
3. Load up to eight discs into each disc magazine. Close cover.

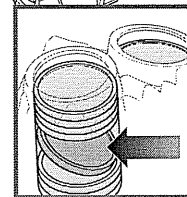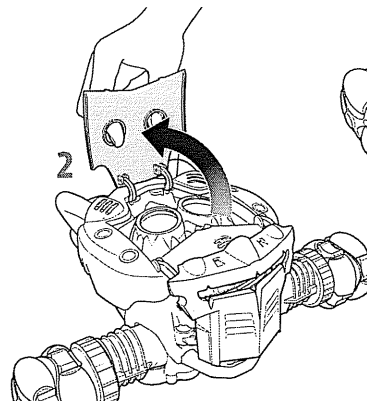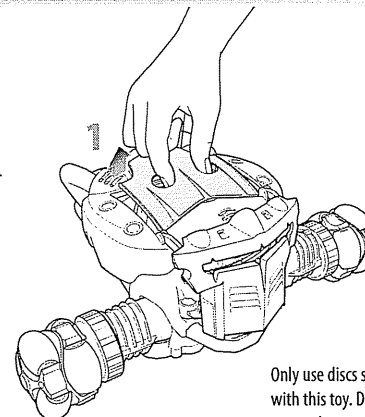

CAUTION:
Load all discs so that they lay flat. A crooked disc can cause a jam.

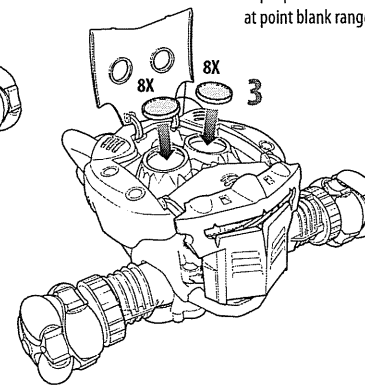

Only use discs supplied with this toy. Do not fire at people or animals or at point blank range.


MUTANT ATTACK MODE



Press the **TRANSFORM** button on the Transmitter to change into **MUTANT ATTACK MODE**.

Features of the **MUTANT ATTACK MODE** are:


- Ultra-Versatile
- Move Any Direction
- Slides Sideways
- Laser-Like Targeting
- 360° Wild Slide
- 180° Reverse Attack
- Best for Stalking

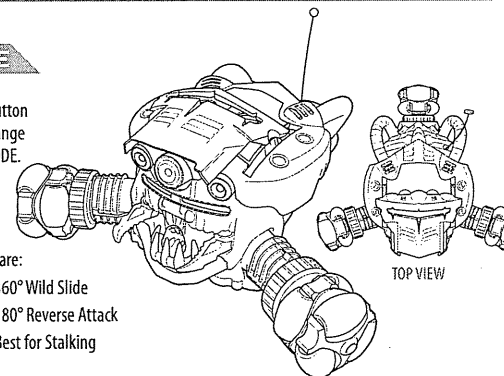


TOP VIEW

MUTANT ATTACK MODE


SPEED AND DIRECTIONAL CONTROL

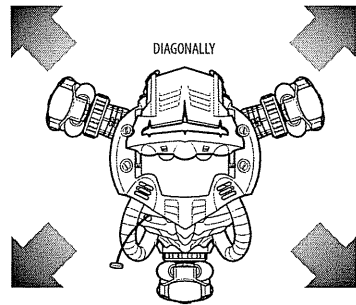


Push TRANSMITTER KNOB in direction you want vehicle to drive.

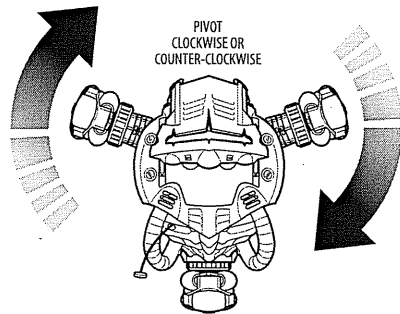

Twist TRANSMITTER KNOB.

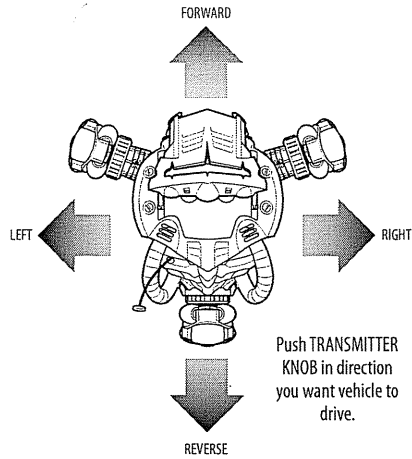

Push TRANSMITTER KNOB in direction you want vehicle to drive.

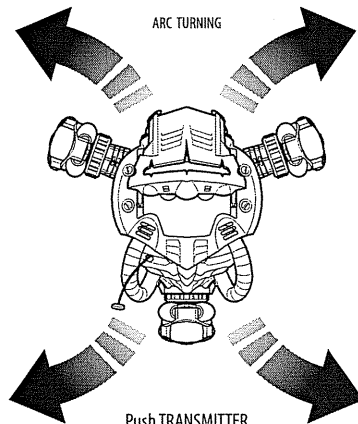

Push TRANSMITTER KNOB in direction you want vehicle to drive AND twist simultaneously.


MUTANT ATTACK MODE SPECIAL ACTIONS



360° WILD SLIDE BUTTON

360° WILD SLIDE

Press the 360° WILD SLIDE button on the Transmitter to travel while rotating in a 360° pattern.

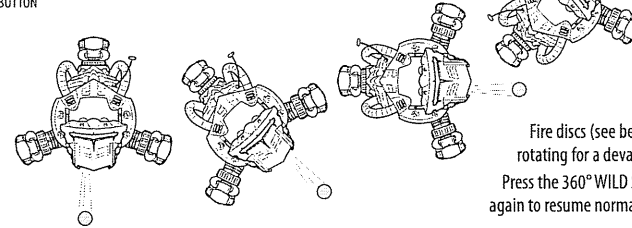

Fire discs (see below) while rotating for a devastating effect. Press the 360° WILD SLIDE button again to resume normal mode.




180° REVERSE ATTACK BUTTON

180° REVERSE ATTACK

Press the 180° REVERSE ATTACK button on the Transmitter to reverse the direction of the vehicle. FORWARD, REVERSE, LEFT & RIGHT controls are reversed.


Press the 180° REVERSE ATTACK button again to resume normal mode.

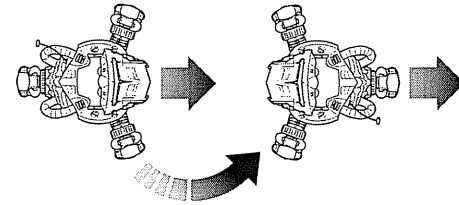

ATTACK!


FIRE DISCS

Press either the LEFT FIRE or RIGHT FIRE buttons on the Transmitter to launch discs.

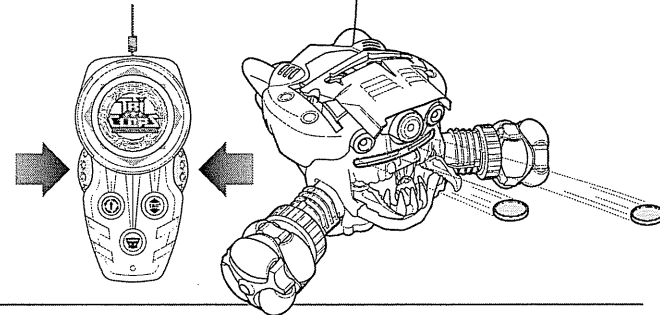


LASER-LIKE TARGETING

Use the red beam to line up your target before firing. Beam is calibrated to a distance of 8'.

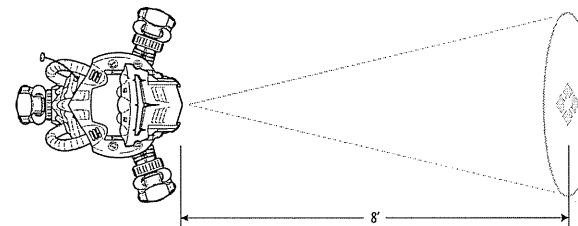

LED INDICATORS

- ◆ **LOW BATTERY:** LED blinks in a steady pattern of one second on and one second off.
- ◆ **MOTOR STALL:** LED blinks in a steady pattern of two seconds on and two seconds off.
- ◆ **SIGNAL LOSS / OUT OF RANGE:** LED blinks in a steady pattern of one-half second on and one-half second off.

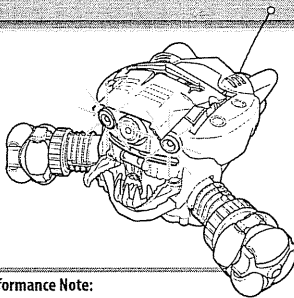

BATTERY SAFETY INFORMATION

In exceptional circumstances batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:

Non-rechargeable batteries are not to be recharged.

Rechargeable batteries are to be removed from the product before being charged (if designed to be removable).

Rechargeable batteries are only to be charged under adult supervision (if designed to be removable).

Do not mix alkaline, standard (carbon-zinc), or rechargeable (NiMH) batteries.

Do not mix old and new batteries.

Only batteries of the same or equivalent type as recommended are to be used.

Batteries are to be inserted with the correct polarity.

Exhausted batteries are to be removed from the product.

The supply terminals are not to be short-circuited.

Dispose of battery(ies) safely.

Do not dispose of this product in a fire. The batteries inside may explode or leak.



Protect the environment by not disposing of this product with household waste (2002/96/EC). Check your local authority for recycling advice and facilities.

Battery Performance Note:

For best performance use regular or high-performance alkaline batteries (where disposable batteries are called for).

- 1) Use only Tyco[®] R/C 9.6V NiCd battery packs. Other batteries may leak or rupture, causing personal injury and damage.
- 2) Remove rechargeable batteries before recharging.
- 3) The battery charger is for adult use only.
- 4) The charger is not a toy.
- 5) Regularly examine for damage to the plug, enclosure and other parts. In the event of any damage, the toy must not be used with the charger until the damage has been repaired.

Information for Rechargeable Battery information:

- 1) Do not recharge battery pack if it's hot. Allow it to cool before recharging.
- 2) Do not recharge a battery pack that shows leakage or corrosion.
- 3) Do not disassemble the battery pack. The battery pack is a sealed rechargeable nickel-cadmium battery.
- 4) Exercise caution in handling a hot battery pack.
- 5) If battery pack and/or charger are wet, thoroughly dry before charging.
- 6) Do not recharge non-rechargeable batteries.

90 DAY LIMITED WARRANTY - TYCO[®] R/C PRODUCTS

Mattel, Inc. warrants to the original consumer purchaser that this product will be free of defects in material and workmanship for ninety (90) days (unless specified in alternate warranties) from the date of purchase. Mattel will replace the product in the event of such a defect within the warranty period. In the event of a defect covered under this warranty, first call the toll-free number listed below. Many problems can be solved in this manner. If necessary, you will be instructed to return the product, postage prepaid and insured, to the address below. Enclose your name, address, dated sales receipt, and a brief explanation of the defect. Replacement and return shipment will be free of charge. This warranty does not cover damage resulting from unauthorized modification, accident, misuse or abuse. If the product is returned without a dated sales receipt the product may be excluded from coverage under this warranty. Mattel's liability for defects in material and workmanship under this warranty shall be limited to repair or replacement, at our sole option, and in no event shall we be responsible for incidental, consequential, or contingent damages (except in those states that do not allow this exclusion or limitation). This warranty is exclusive, and is made in lieu of any express or implied warranty.

Valid only in U.S.A. This warranty gives you specific legal rights and you may have other rights, which vary from state to state. Some states do not allow the exclusion of incidental or consequential damages, so the above exclusions or limitations may not apply to you. TOLL-FREE NUMBER: 1-888-557-TYCO (8926) (**valid only in U.S.A.**) Hours: 8:00 A.M. - 5:00 P.M. Eastern Time; Monday - Friday. Expect some delay in January following the holiday season. Please be patient and keep trying the toll-free number. ADDRESS FOR RETURNS: CONSUMER RELATIONS, 636 GIRARD AVENUE, EAST AURORA, NY 14052

COMPLIANCE WITH FCC REGULATIONS (VALID IN U.S. ONLY)

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. This device generates and uses radio frequency energy and if not used properly may cause interference to radio and television reception. It has been tested and found to comply with the limits set by the FCC which are designed to provide reasonable protection against such interference. **NOTE:** Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

• Mattel Canada Inc., Mississauga, Ontario L5R 3W2. You may call us free at 1-800-524-8697.

• Mattel U.K. Ltd., Vanwall Business Park, Maidenhead SL6 4UB. Helpline 01628500303

• Mattel Australia Pty. Ltd., Richmond, Victoria. 3121 Consumer Advisory Service - 1300 135 312 (valid only in Australia).

• Mattel East Asia Ltd., Room 1106, South Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China.

• Diimport & Diedarkan Oleh: Mattel SEA Ptd Ltd (993532-P) Lot 13.5, Menara Lien Hoe, Persiaran Tropicana Golf Country Resort, 47410.

For product sold in USA

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation of the device.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

Mattel, Inc.

Consumer Relations

636 Girard Ave

East Aurora, NY

(800) 524-8697

NOTE: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

#K7262