

 
## BATTERY INSTALLATION

Unscrew the battery cover with a Phillips head screwdriver (not included). Install 1 "3V" alkaline battery in the orientation (+/-) shown into each unit. For best performance, use only alkaline batteries.

Replace battery cover and tighten screw. Replace the batteries if sounds play slowly or distort.

### BATTERY SAFETY INFORMATION

- In exceptional circumstances batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:
  - Non-rechargeable batteries are not to be recharged.
  - Rechargeable batteries are to be removed from the product before being charged (if designed to be removable).
  - Rechargeable batteries are only to be charged under adult supervision (if designed to be removable).
  - Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
  - Do not mix old and new batteries.
  - Only batteries of the same or equivalent type as recommended are to be used.
  - Batteries are to be inserted with the correct polarity.
  - Exhausted batteries are to be removed from the product.
  - The supply terminals are not to be short-circuited.
  - Dispose of battery(ies) safely.
  - Do not dispose of this product in a fire. The batteries inside may explode or leak.

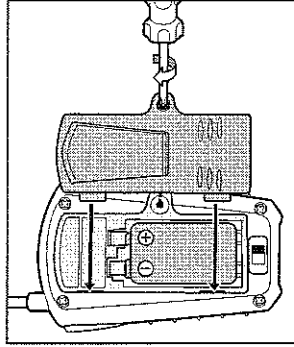

## 90 DAY LIMITED WARRANTY

Mattel, Inc. warrants to the original consumer purchaser that this product will be free of defects in material and workmanship for ninety (90) days (unless specified in alternate warranties) from the date of purchase. Mattel will repair or replace the product at our sole option, in the event of such a defect within the warranty period. In the event of a defect covered under this warranty, first call the toll-free number listed below. Many problems can be solved in this manner. If necessary, you will be instructed to return the product, postage prepaid and insured, to the address below. Enclose your name, address, dated sales receipt, and a brief explanation of the defect. Repair or replacement, and return shipment, will be free of charge. Please return only the defective part or unit, packed securely. This warranty does not cover damage resulting from unauthorized modification, accident, misuse or abuse. If the product is returned without a dated sales receipt, the product may be excluded from coverage under this warranty. Mattel's liability for defects in material and workmanship under this warranty shall be limited to repair or replacement, at our sole option, and in no event shall we be responsible for incidental, consequential, or contingent damages (except in those states that do not allow this exclusion or limitation). This warranty is exclusive, and is made in lieu of any express or implied warranty. This warranty gives you specific legal rights and you may have other rights, which vary from state to state. Some states do not allow the exclusion of incidental or consequential damages, so the above exclusions or limitations may not apply to you.

 
TOLL-FREE NUMBER: 1-888-557-8826 - Valid only in U.S.A.

Hours: 8:00 A.M.-5:00 P.M. Eastern Time, Monday - Friday. Expect some delays in January following the holiday season. Please be patient and keep trying the toll-free number.

ADDRESS FOR RETURNS (Valid only in U.S.A.):

CONSUMER RELATIONS  
636 GIRARD AVENUE  
EAST AURORA, NY 14052

TO PLAY

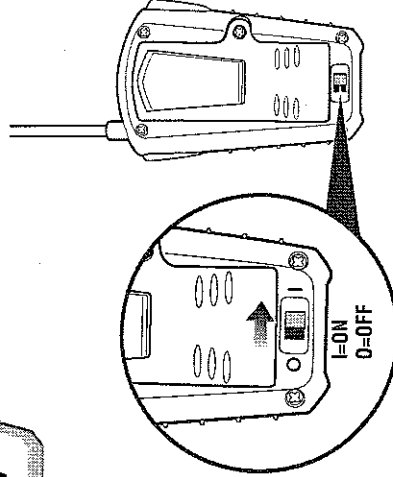

- ### QUICK TIPS
- Radio interference can affect your walkie talkie's performance. Interference can be caused by other R/C devices on the same frequency, electrical wires, large buildings or CB radios.
  - Point your walkie talkie up.
  - Do not store your walkie talkie near heat or in direct sunlight.
  - Do not exceed the specified range.

### CONSUMER INFORMATION

Note to adults: To ensure that the child's play is both safe and fun, please review all operating instructions and safety rules with your child.

### SAFETY TIPS

- NEVER operate your walkie talkie on streets!
- Adult supervision is recommended when this walkie talkie is being operated.
- Turn the walkie talkie OFF when it is not in use.

 


Protect the environment by not disposing of this product with household waste (2002/96/EC).  
Check your local authority for recycling advice and facilities.

49.860 MHz TX RF = 64.3dBµV/m @ 3m


This is a battery-operated product. 1 flyer (0107-184966) is required to be placed inside the packaging.

2.

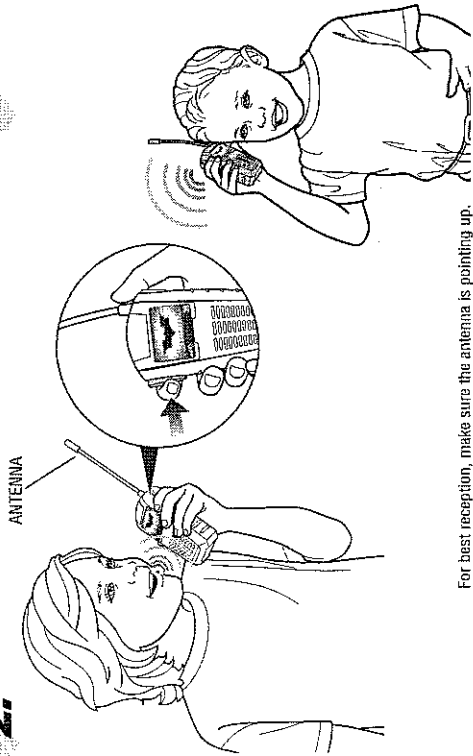

For best reception, make sure the antenna is pointing up.

 
3.

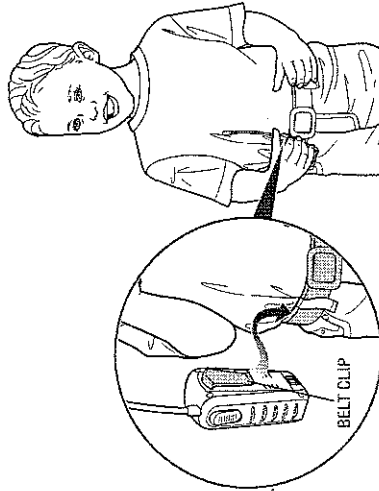

4+

THE DARK KNIGHTS

 Please keep these instructions for future reference as they contain important information.

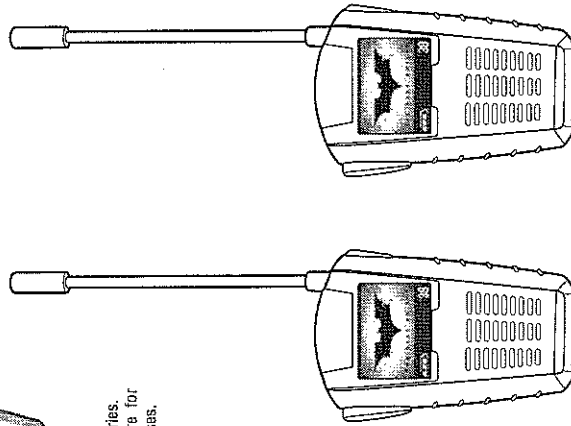

Requires 2 - 9V batteries. Batteries included are for demonstration purposes.

INSTRUCTION SHEET SPECIFICATIONS	
Toy No.:	BATMAN DK WALKIE TALKIE
Part No.:	M4859
Year Size:	0920
Rated Size:	A1
Type of Pack:	AS
# of Packs:	4
Color:	One
Print Stock:	Black
Paper Weight:	White Offset
EQM No.:	70 lb.

Mattel, Inc. All Rights Reserved. Mattel, Inc. 333 Continental Blvd., El Segundo, CA 90245 U.S.A. Consumer Relations 1 (800) 524-8697. • Mattel Canada Inc., Mississauga, Ontario L5R 3W2. You may call us free at 1-800-524-8697. • Mattel L.L.C. Ltd., Vanwall Business Park, Maidenhead SL6 4UB, Helpline 01628500303. • Mattel Australia Pty Ltd., Richmond, Victoria, 3121. Consumer Advisory Service - 1300 135 312. • Mattel East Asia Ltd., Room 1106, South Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China. • Dimpont & Diederik Opleit: Mattel SEA Ptd Ltd. (693532-P) Lot 13.5, Menara Lien Hoe, Persiaran Tropicana Golf Country Resort, 47410 PJ, Tel:03-78903877, Fax:03-78903867.



BATMAN and all related characters and elements are trademarks of and © DC Comics.

(s08)

service.mattel.com

# FCC statement flyer

size: 138 x 175 (mm)

## For product sold in USA

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

- This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**NOTE: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.**

## For product sold in Canada • Pour les produits vendus au Canada

THIS CLASS B DIGITAL APPARATUS COMPLIES WITH CANADIAN ICES-003.

CET APPAREIL NUMÉRIQUE DE LA CLASSE B EST CONFORME À LA NORME NMB-003 DU CANADA.

**(VALID FOR CANADA ONLY • VALABLE AU CANADA SEULEMENT)**

Operation is subject to the following two conditions :

(1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

L'utilisation de ce dispositif est autorisée seulement aux conditions suivantes :

(1) Il ne doit pas produire de brouillage et (2) il doit pouvoir tolérer tout brouillage radioélectrique reçu, même si ce brouillage est susceptible de compromettre son fonctionnement.

00007-1849G6