



 
## 900 MHz CORDLESS CALLER ID TELEPHONE WITH CALL WAITING

40 CHANNEL AUTOSCAN

Model MH9111


OWNER'S MANUAL  
INSTALLATION AND  
OPERATING  
INSTRUCTIONS

**PLEASE READ THIS  
MANUAL CAREFULLY  
BEFORE USE.  
KEEP FOR YOUR  
REFERENCE.**

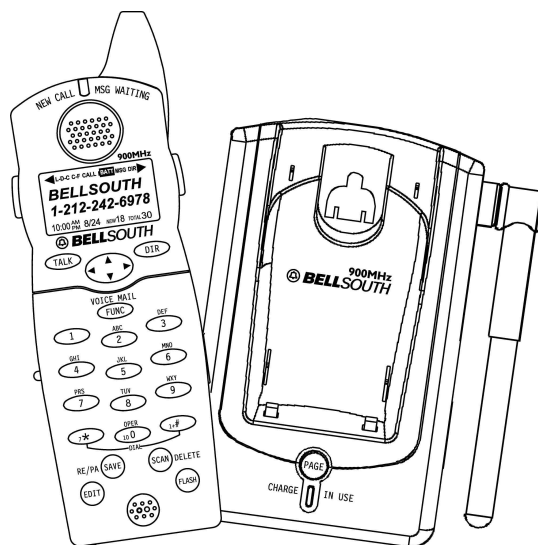

***For installation information, please  
see "Getting Started" instructions  
on page 5 or your separate Quick  
Start Guide.***

 Visit Us on the Web:  
[www.uselectronics.info](http://www.uselectronics.info)  
© 2002 Bellsouth Corporation

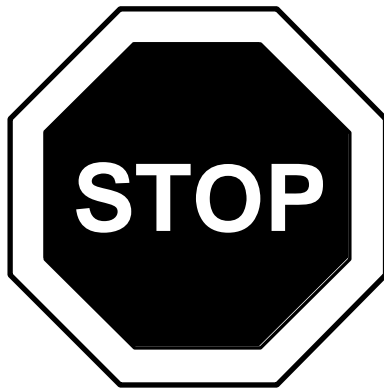

Make certain you receive the best  
performance from your telephone.  
Read this manual first.



Visit Us on the Web:  
[www.uselectronics.info](http://www.uselectronics.info)  
Made in China

CM

## Special Features

Congratulations on your selection of a quality **BellSouth** product. With proper care, and by following the set-up and user instructions in this Owner's Manual, this unit will provide you with years of trouble-free service.

**BellSouth** is committed to providing quality products that fit your needs. We would like to have any comments or suggestions you might have on this product. You may mail your comments to:

**U.S. Electronics**  
**105 Madison Avenue**  
**New York, NY 10016**

When examining your new **BellSouth** cordless telephone, you will find an array of special features including:

**Filtered Sound™ System** - Gets considerably less noise than conventional cordless telephones because of a special circuit which delivers the clearest possible reception.

**40 Channel Auto Scan** - Press the **DELETE SCAN** button on the **HANDSET** to find and lock on to the clearest channel for any call.

**Desk or Wall Mount** - Use this equipment as a desk phone or as a wall phone.

**TONE or PULSE Dialing** - Use this phone for either TONE (push-button) or PULSE (rotary) dialing.

**Automated Functions** - Redial the last number called and automatic STANDBY mode.

**Security** - Ensures greater privacy because a built-in security code with 65,536 combinations prevents use of your telephone line by another nearby cordless phone.

**Dependable Battery** - Recharge your BATTERY PACK many times with the built-in charger. The battery low warning tone tells you when the BATTERY PACK needs recharging. (See page 29.)

**Special Services** - Use the **FLASH** button to access special services such as Call Waiting supplied by your telephone company or company switchboard.

**STANDBY Mode** - When in STANDBY mode (ON-HOOK), the phone is capable of receiving a call. When the **HANDSET** is on the **BASE UNIT**, it is automatically in the STANDBY mode (ON-HOOK). When the **HANDSET** is taken off the **BASE UNIT**, it remains in the STANDBY mode until you activate the **TALK** button.

**Battery Power Saver** - Once fully charged, in STANDBY mode, the **HANDSET** can receive/send calls for a maximum of five days without the need for recharging. Length of charge depends on frequency of use.

**Luminous LCD Screen** - The LCD Screen emits light for 5 seconds every time you press any of the buttons on the **HANDSET**.

**HANDSET Ringer Level** - Select the ringer volume level (HI, LOW, OFF).

**HANDSET VOLUME CONTROL Switch** - Select the receiver volume level (HI, MID, LOW).

**HEADSET JACK** - Your telephone can utilize a headset for hands-free communication.

**BELT CLIP** - Use the BELT CLIP to hang your **HANDSET** on your belt.

## *Special Features*

### **CALLER ID SYSTEM**

**Multi-Function Large LCD Screen** - Shows the number you are dialing, and with Caller ID service (available through subscription from your local telephone company), displays information about the caller before you answer the call.

**Name and Number DIRECTORY** - Stores up to 40 names and numbers so that you can call them with a single key stroke.

**Caller List** - Available with Caller ID service. Stores up to 80 calls to keep track of everyone who called. The name, phone number, time, and date of the call are recorded. Allows you to return their calls with a single key stroke.

**Preferred Calls** - You can mark the name and number of a welcome caller in the DIRECTORY. When that number calls in, the caller's name will appear on the LCD Screen and a special ring sound will be heard.

**Blocked Calls** - You can mark the name and number of an unwelcome caller in the DIRECTORY. When that number calls in, the caller's name will appear on the LCD Screen and the ringer will be disabled.

**Repeat Call Indicator** - Shows if a new incoming call has called more than once.

 
**Out of Area Call Indicator** - Advises you that the incoming call is not in a Caller ID service area, or does not support the Caller ID system.

**Private Call Indicator** - Advises you that the caller's name and/or telephone number of the incoming call is blocked by the system.

**Call Waiting Service** - Displays the name and number of the second caller, if you have subscribed to call waiting service from your local telephone company (See page 15).

**Voice Mail** - Indicates message waiting signal if you subscribed to Voice Mail message service and requested Visual Message Indication from your local telephone company (see page 15). This telephone also detects a Stutter Dial Tone signal every time there is a Voice Mail message for your Voice Mail message provider if you have subscribed to Voice Mail message service.



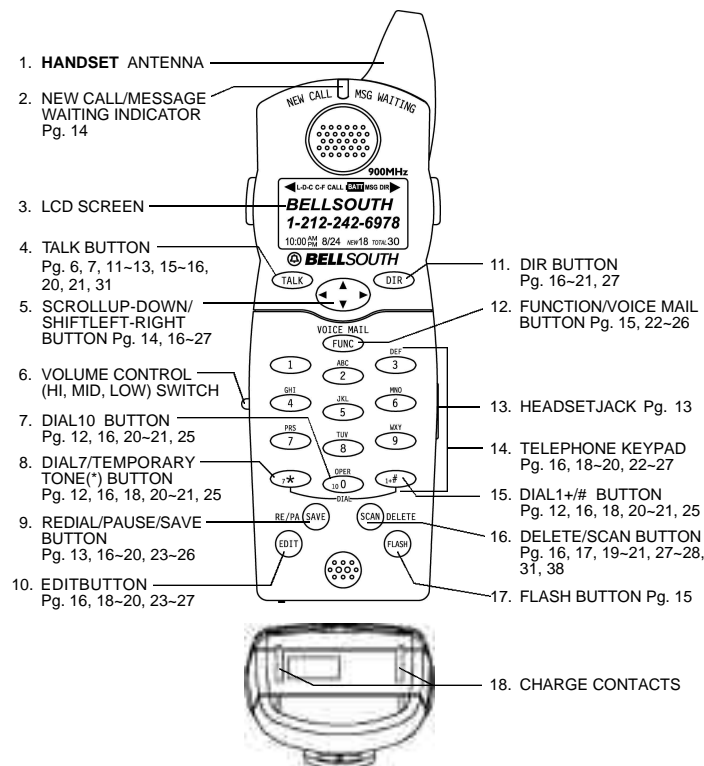










# HANDSET Controls

 


## HANDSET Controls

  1. **HANDSET ANTENNA**
2. **NEW CALL/MSG (MESSAGE) WAITING LED Indicator:** Blinks when recording a new incoming call or when receiving a Message Waiting signal, if you have subscribed to a Voice Mail message service from your local telephone company. (See page 14 for details.)
3. **LCD Screen:** Shows call information, phone status, prompts and directory items.
4. **TALK TALK Button:** Press to answer an incoming call or to place a call. Press to end a call.

# HANDSET Controls

5. **SCROLLUP-DOWN, SHIFT LEFT-RIGHT**  **Button:** Press to move around the large LCD Screen.
6. **HANDSET VOLUME CONTROL(HI, MID, LOW) Switch:** Select the receiver volume level (HI, MID, LOW).
7. **DIAL 10/0**  **Button:** (DIAL 10) Press and hold down to place a local call with Area Code.
8. **DIAL7/TEMPORARYTONE**  **Button:** (DIAL7) Press and hold down to place a local call. (\*) Press to temporarily change the Dialing mode from Pulse to Tone for Rotary Service Users. (Press once before entering numbers to access the answering system or electronic banking service, etc.)
9. **SAVE/RE(REDIAL)/PA(PAUSE)**  **Button:** (SAVE) Press and hold down to save the changes on the listed items. (REDIAL) Press to redial the last number you dialed. (PAUSE) Press to insert a pause while dialing. (You will need the  button to dial numbers which use an alternative Long Distance Access Code.)
10. **EDIT**  **Button:** Press to edit listed items.
11. **DIR (DIRECTORY)**  **Button:** Press to access names and numbers stored in the DIRECTORY. (See pages 16 to 21 for details.)
12. **FUNC (FUNCTION)/VOICE MAIL**  **Button:** (FUNCTION) Press and hold to access special functions operation in STANDBY mode. (For special functions see page 22.)  
(VOICE MAIL) - Press to automatically dial the Voice Mail Post Code in your area to access your Voice Mail message.
13. **HEADSET JACK:** For connecting your headset plug to enjoy hands-free communication. (See page 13 for detail.)
14. **TELEPHONE KEYPAD**  ~  **Buttons:** Allows you to make a call depending on pressed button. (For TELEPHONE KEYPAD characters, see page 27 .)
15. **DIAL 1+/#**  **Button:** (DIAL 1+) Press and hold down to place a long distance call. (Automatically adds the number 1 at the beginning of the displayed telephone number.)
16. **DELETE/SCAN**  **Button:** (DELETE) Press and hold down to delete items or individual characters. (SCAN) Press to change the operating channel when you hear interference.
17. **FLASH**  **Button:** Press to answer a call if you have Call Waiting.
18. **CHARGE CONTACTS:** For charging the BATTERY PACK inside the **HANDSET**. We recommend cleaning the CHARGE CONTACTS periodically with a damp cloth.

## ***BASE UNIT Controls***

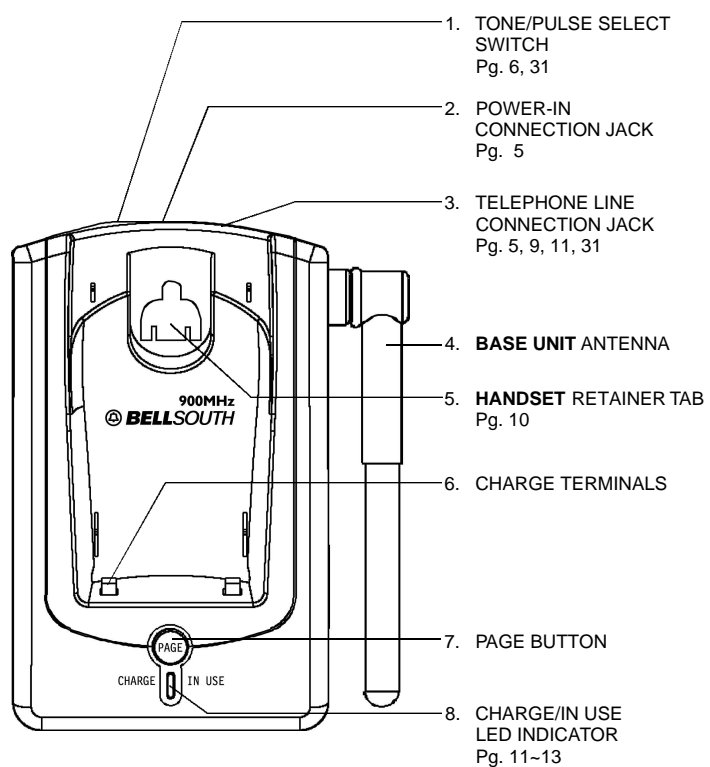 

## ***BASE UNIT Controls***

1. **TONE/PULSE Select Switch**
2. **POWER-IN CONNECTION JACK**
3. **TELEPHONE LINE CONNECTION JACK**
4. **ANTENNA:** Raise or reposition for the best reception.
5. **HANDSET RETAINER TAB:** Secures the **HANDSET** in the CHARGE CRADLE when wall mounting.
6. **CHARGE TERMINALS:** For charging the **HANDSET BATTERY PACK**. For best performance, clean the CHARGE TERMINALS periodically with a damp cloth.
7. **PAGE** **PAGE** Button: Press to page the **HANDSET**.
8. **IN USE/CHARGE LED Indicator:** (IN USE) Lights up to indicate that the **HANDSET** is in TALK mode. (CHARGE) Lights up when the **HANDSET** is placed on the **BASE UNIT** for charging.

### **IMPORTANT**

**Placing your BASE UNIT near appliances such as televisions, refrigerators, radios, or microwave ovens may cause interference.**