



# Raymarine®



## Raymarine Multifunction Display

# LIGHTHOUSE SPORT

## VERSION 3.8XX

### Basic operation instructions

English (en-US)  
Date: 12-2018  
Document number: 81384-1  
© 2018 Raymarine UK Limited





## Important information about this document

This document provides an introduction to using your Raymarine multifunction display, covering only basic operations.

To obtain the complete “*LightHouse Sport Advanced operations*” document, visit the Raymarine website. The document is available in 2 different formats:

1. Free download (PDF format)
2. Purchase a printed manual (paperback book format)

**[www.raymarine.com/manuals](http://www.raymarine.com/manuals)**



Download complete manual (free)



Purchase complete printed manual



Tip: If you own a smartphone or tablet with a camera you can use the QR code shown above to visit the “LightHouse Sport Manuals and documents” area of the website directly. To use this code, download a free “QR barcode scanner” app from the Apple or Android appstore and then point the camera at the QR code on this page.

English (en-US)





## Trademark and patents notice

**Raymarine, Tacktick, Clear Pulse, Truzoom, SeaTalk, SeaTalk<sup>hs</sup>, SeaTalk<sup>ng</sup>, and Micronet**, are registered or claimed trademarks of Raymarine Belgium.

**FLIR, LightHouse, DownVision, SideVision, RealVision, Dragonfly, Quantum, Axiom, Instalert, Infrared Everywhere, The World's Sixth Sense and ClearCruise** are registered or claimed trademarks of FLIR Systems, Inc.

All other trademarks, trade names, or company names referenced herein are used for identification only and are the property of their respective owners.

This product is protected by patents, design patents, patents pending, or design patents pending.

## Warranty registration

To register your Raymarine product ownership, please visit [www.raymarine.com](http://www.raymarine.com) and register online.

It is important that you register your product to receive full warranty benefits. Your unit package includes a bar code label indicating the serial number of the unit. You will need this serial number when registering your product online. You should retain the label for future reference.

## Technical accuracy

To the best of our knowledge, the information in this document was correct at the time it was produced. However, Raymarine cannot accept liability for any inaccuracies or omissions it may contain. In addition, our policy of continuous product improvement may change specifications without notice. As a result, Raymarine cannot accept liability for any differences between the product and this document. Please check the Raymarine website ([www.raymarine.com](http://www.raymarine.com)) to ensure you have the most up-to-date version(s) of the documentation for your product.

## Software updates



Check the Raymarine website for the latest software releases for your product.

[www.raymarine.com/software](http://www.raymarine.com/software)

 
**Copyright ©2018 Raymarine UK Ltd. All rights reserved.**

English (en-US)

Document number: 81384-1

AA;13282;2018-12-21T06:39:00









# Contents

<b>Chapter 1 Important information .....</b>	<b>7</b>
Disclaimers .....	7
<b>Chapter 2 Set up .....</b>	<b>8</b>
2.1 Getting started.....	8
Display controls .....	8
Startup wizard .....	9
First power up Limitation on Use acknowledgement.....	10
Configuring Transducer settings .....	10
Identifying engines.....	11
Performing a settings or factory reset.....	11
Importing user data .....	12
2.2 Shortcuts .....	12
2.3 Switching active app.....	12
2.4 Memory card compatibility .....	13
Removing MicroSD card from its adaptor.....	14
Inserting a MicroSD card .....	14
2.5 Software updates .....	15
Updating display software using a memory card .....	15
Updating software using an internet connection .....	16
2.6 Source of position data .....	17
<b>Chapter 3 Homescreen.....</b>	<b>18</b>
3.1 Homescreen overview.....	18
Available apps.....	19
Assigning app pages to Quicklaunch buttons.....	19
3.2 Changing an app page.....	20
3.3 Settings menu .....	21
3.4 Alarms.....	22
3.5 Position settings .....	23
<b>Chapter 4 Chart app.....</b>	<b>24</b>
4.1 Chart app overview.....	24
Chart app controls .....	25
Selecting a chart card .....	27
<b>Chapter 5 Fishfinder app.....</b>	<b>28</b>
5.1 Fishfinder app overview.....	28





Fishfinder channels ..... 28

Fishfinder app controls ..... 28

Switching channel frequency ..... 31

**Chapter 6 Dashboard app ..... 32**

6.1 Dashboard app overview ..... 32

    Switching data page ..... 32

    Hiding and showing data pages ..... 32





## Chapter 1: Important information



### **Warning: Ensure safe navigation**

This product is intended only as an aid to navigation and must never be used in preference to sound navigational judgment. Only official government charts and notices to mariners contain all the current information needed for safe navigation, and the captain is responsible for their prudent use. It is the user's responsibility to use official government charts, notices to mariners, caution and proper navigational skill when operating this or any other Raymarine product.

## Disclaimers

Raymarine does not warrant that this product is error-free or that it is compatible with products manufactured by any person or entity other than Raymarine.

This product uses digital chart data, and electronic information from Global Navigation Satellite Systems (GNSS) which may contain errors. Raymarine does not warrant the accuracy of such information and you are advised that errors in such information may cause the product to malfunction. Raymarine is not responsible for damages or injuries caused by your use or inability to use the product, by the interaction of the product with products manufactured by others, or by errors in chart data or information utilized by the product and supplied by third parties.

This product supports electronic charts provided by third party suppliers which may be embedded or stored on memory card. Use of such charts is subject to the supplier's End-User Licence Agreement.






## Chapter 2: Set up

### 2.1 Getting started

#### Display controls

The buttons available on Element™ displays and their function are detailed below.

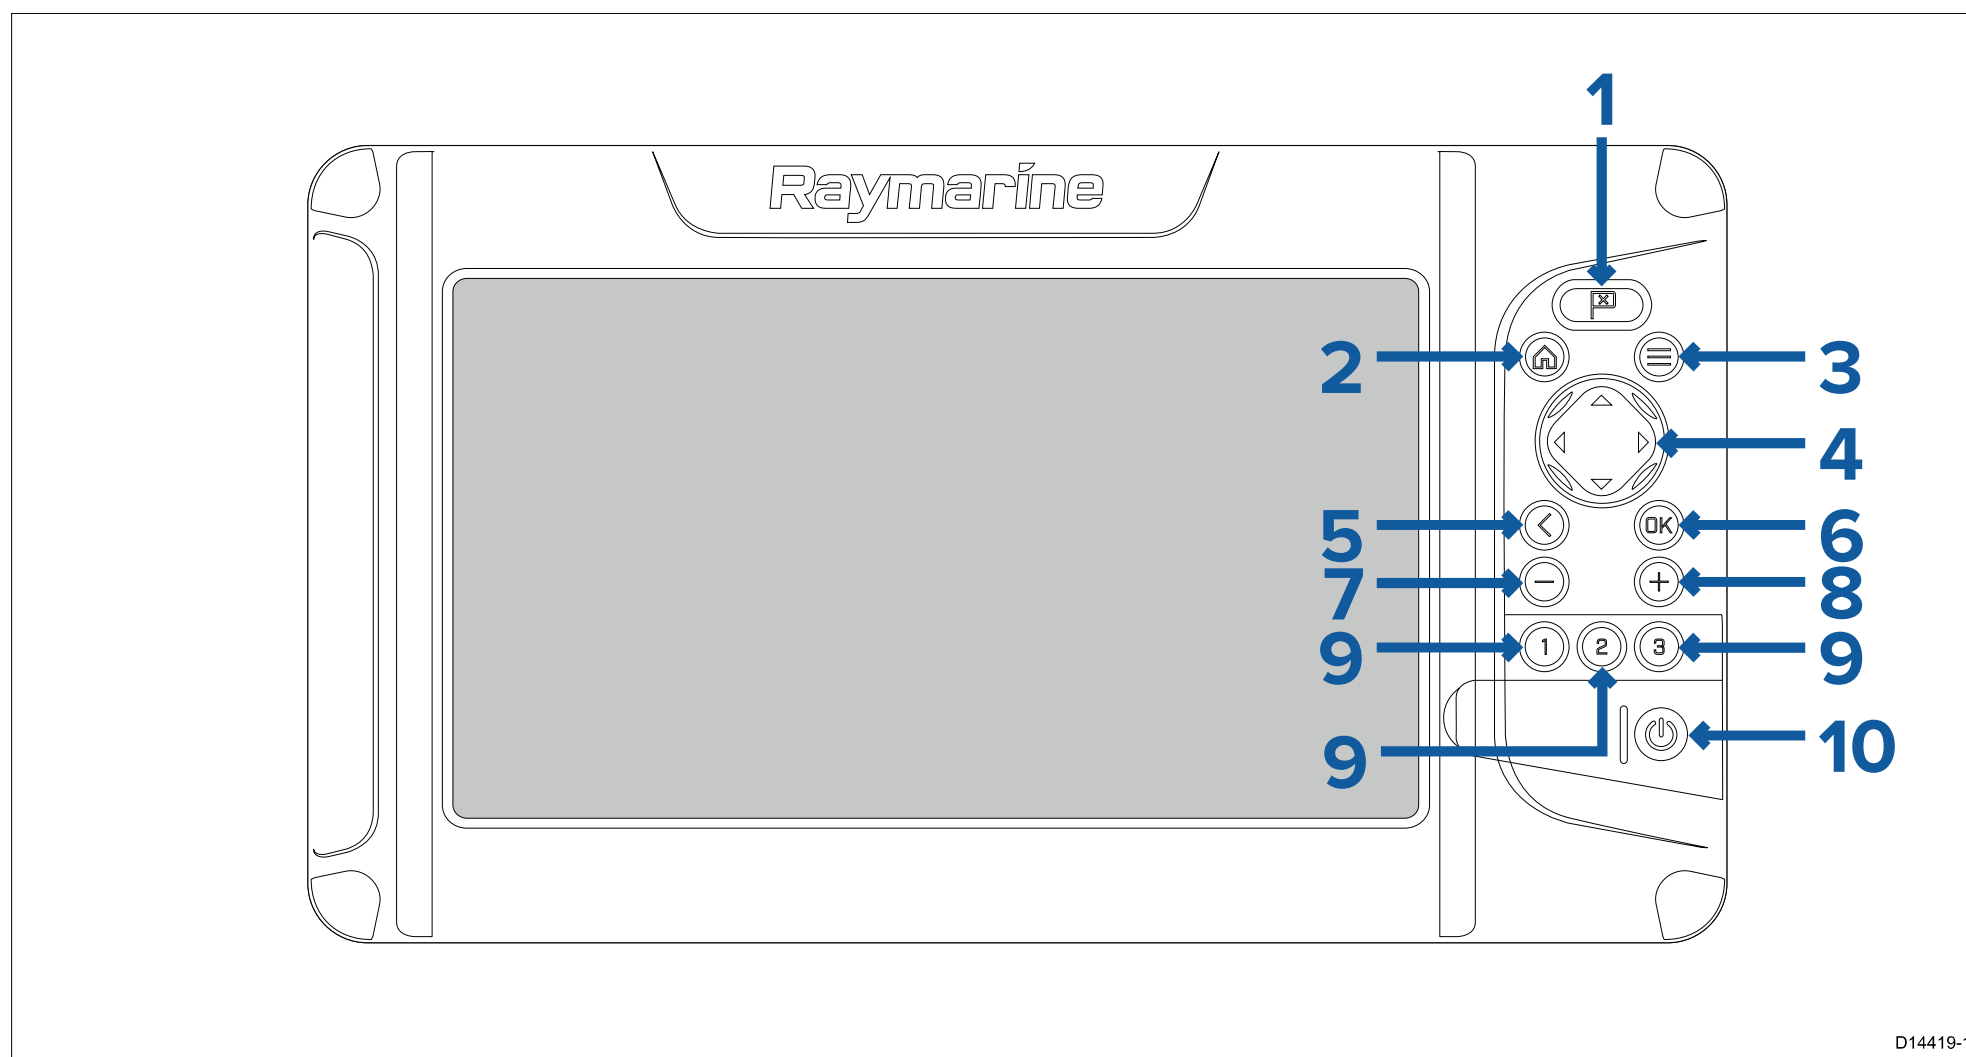

#### 1. **Waypoint**

- Press to place a waypoint at your vessel's position (unless cursor mode is active in the Chart or Fishfinder app).
- Press to place a waypoint at the cursor's position in the Chart and Fishfinder apps (when in cursor mode).

#### 2. **Home**

- Press to display the Homescreen.

#### 3. **Menu**

- Press to open Homescreen menus and app menus.
- Press to close Homescreen menus and app menus.

#### 4. **Directional pad** (8-axis directional controls)

- Use to navigate Homescreen and menus.
- Press any direction to activate cursor mode in the Chart and Fishfinder apps.
- Use to position the cursor in the Chart and Fishfinder apps.

#### 5. **Back**

- Return to previous menu or dialog.

#### 6. **OK** — Confirms menu selections, opens context menus

8







- Press to confirm a currently highlighted option.
  - Press to open context sensitive menus in the Chart and Fishfinder apps.
7. **Minus** (Zoom / Range out)
    - Press to increase the area displayed onscreen in the Chart app.
    - Press to decrease the zoom level in the Fishfinder app, when in Zoom mode.
    - Press to revert to scrolling mode from lowest zoom level in the Fishfinder app.
  8. **Plus** (Zoom / Range in)
    - Press to decrease the area displayed onscreen in the Chart app.
    - Press once to initiate Zoom mode in the Fishfinder app, subsequent presses will increase the zoom level.
  9. **Quicklaunch 1 / Quicklaunch 2 / Quicklaunch 3**
    - Press to open the assigned app page.
    - Press and hold to assign the quick launch button to the app page currently highlighted on the Homescreen.
  10. **Power**
    - Power on — Press and hold until the display beeps (approximately 2 seconds).
    - Power off — Press and hold until the display beeps (approximately 6 seconds).
    - Press once to open the shortcuts dialog.

## Startup wizard

The first time the display is powered up, or after a **Factory reset** the Startup wizard is displayed.

The Startup wizard helps you to configure the following display settings:

- User interface language
- Boating activity
- Boat details (including: Safety clearances, Number of engines, Number of tanks, Number of batteries and Transducer selection.)

Follow the onscreen instructions to configure the relevant settings.

### **Important:**


Ensure you select the correct type of transducer, an incorrect selection will require a factory reset to correct.





## First power up Limitation on Use acknowledgement


After you have completed the Startup wizard the Limitation on Use (LoU) disclaimer is displayed.

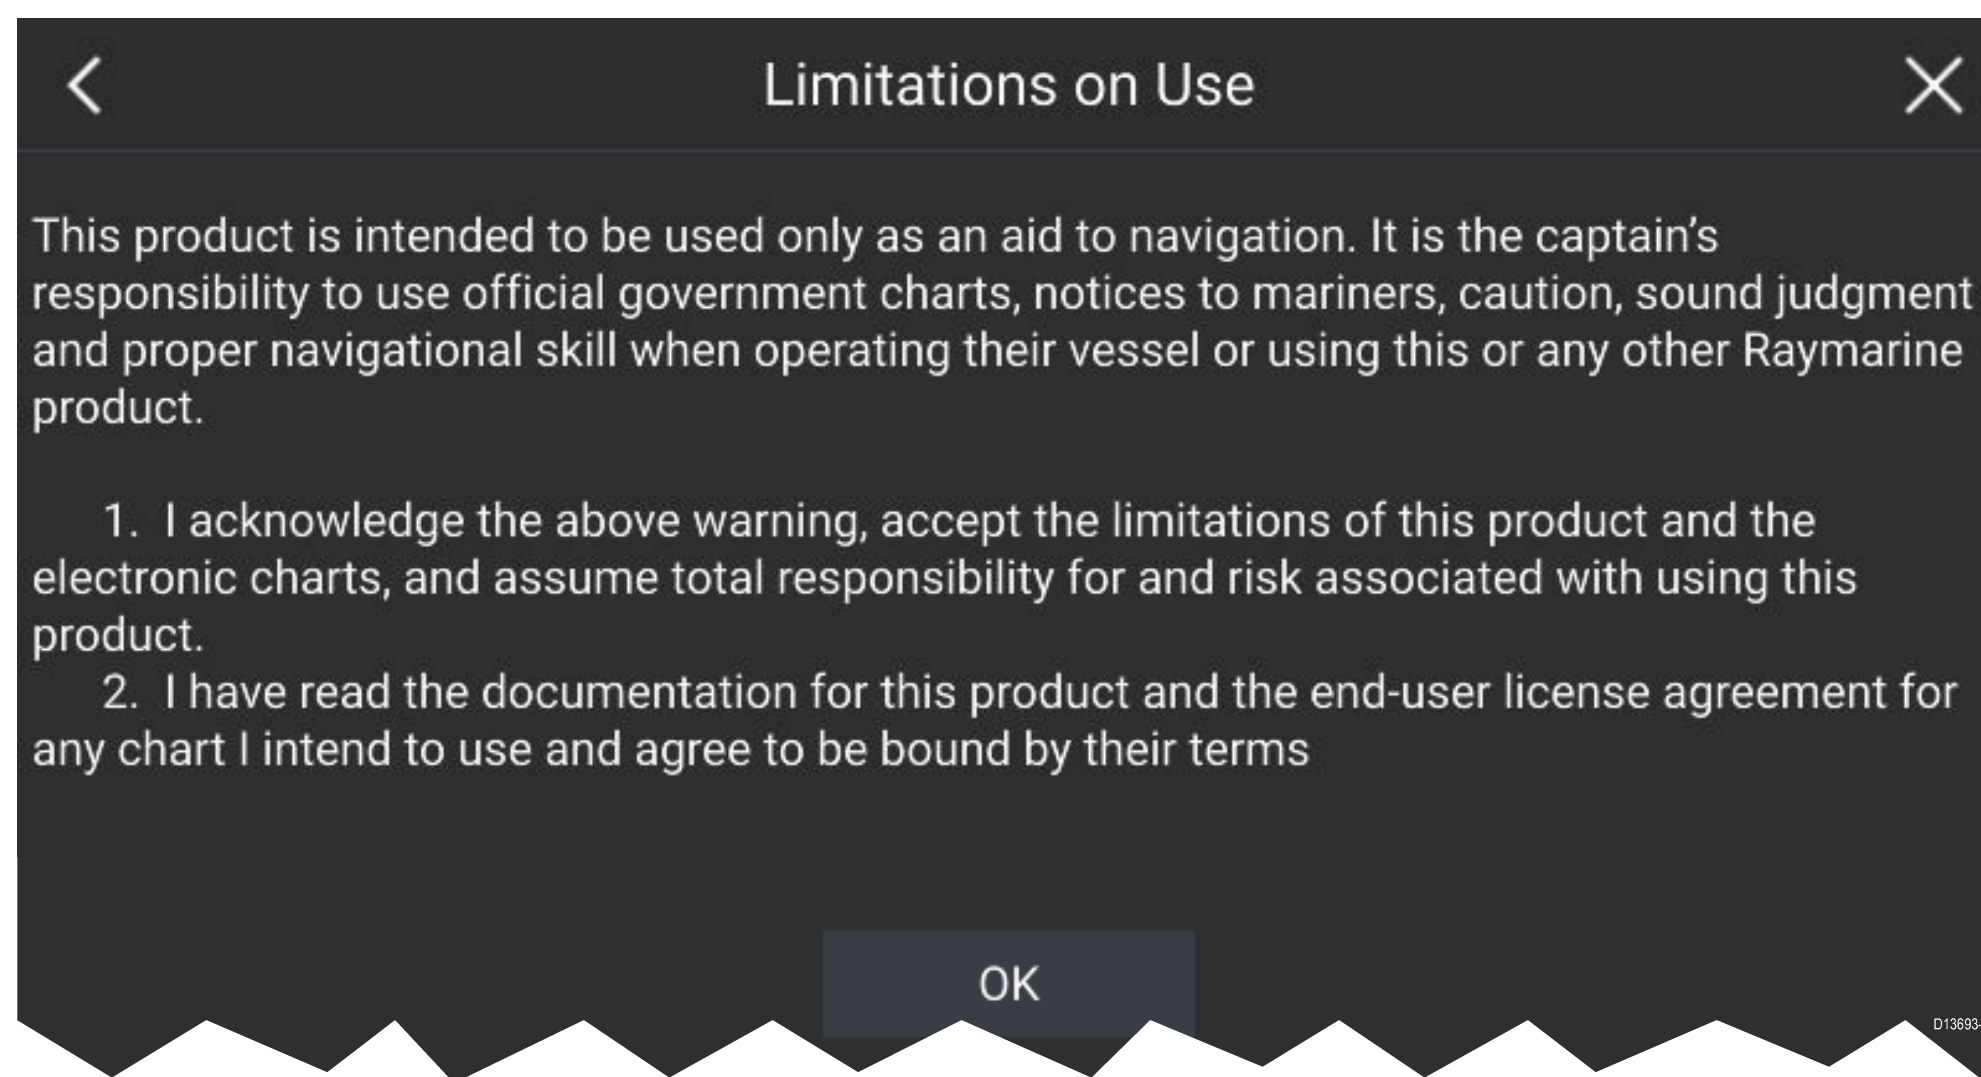

You must read and agree to the terms in order to use your display. Selecting **OK** means you have accepted the terms of use.

## Configuring Transducer settings

For systems set up with a transducer connected, you should configure your transducer's settings.

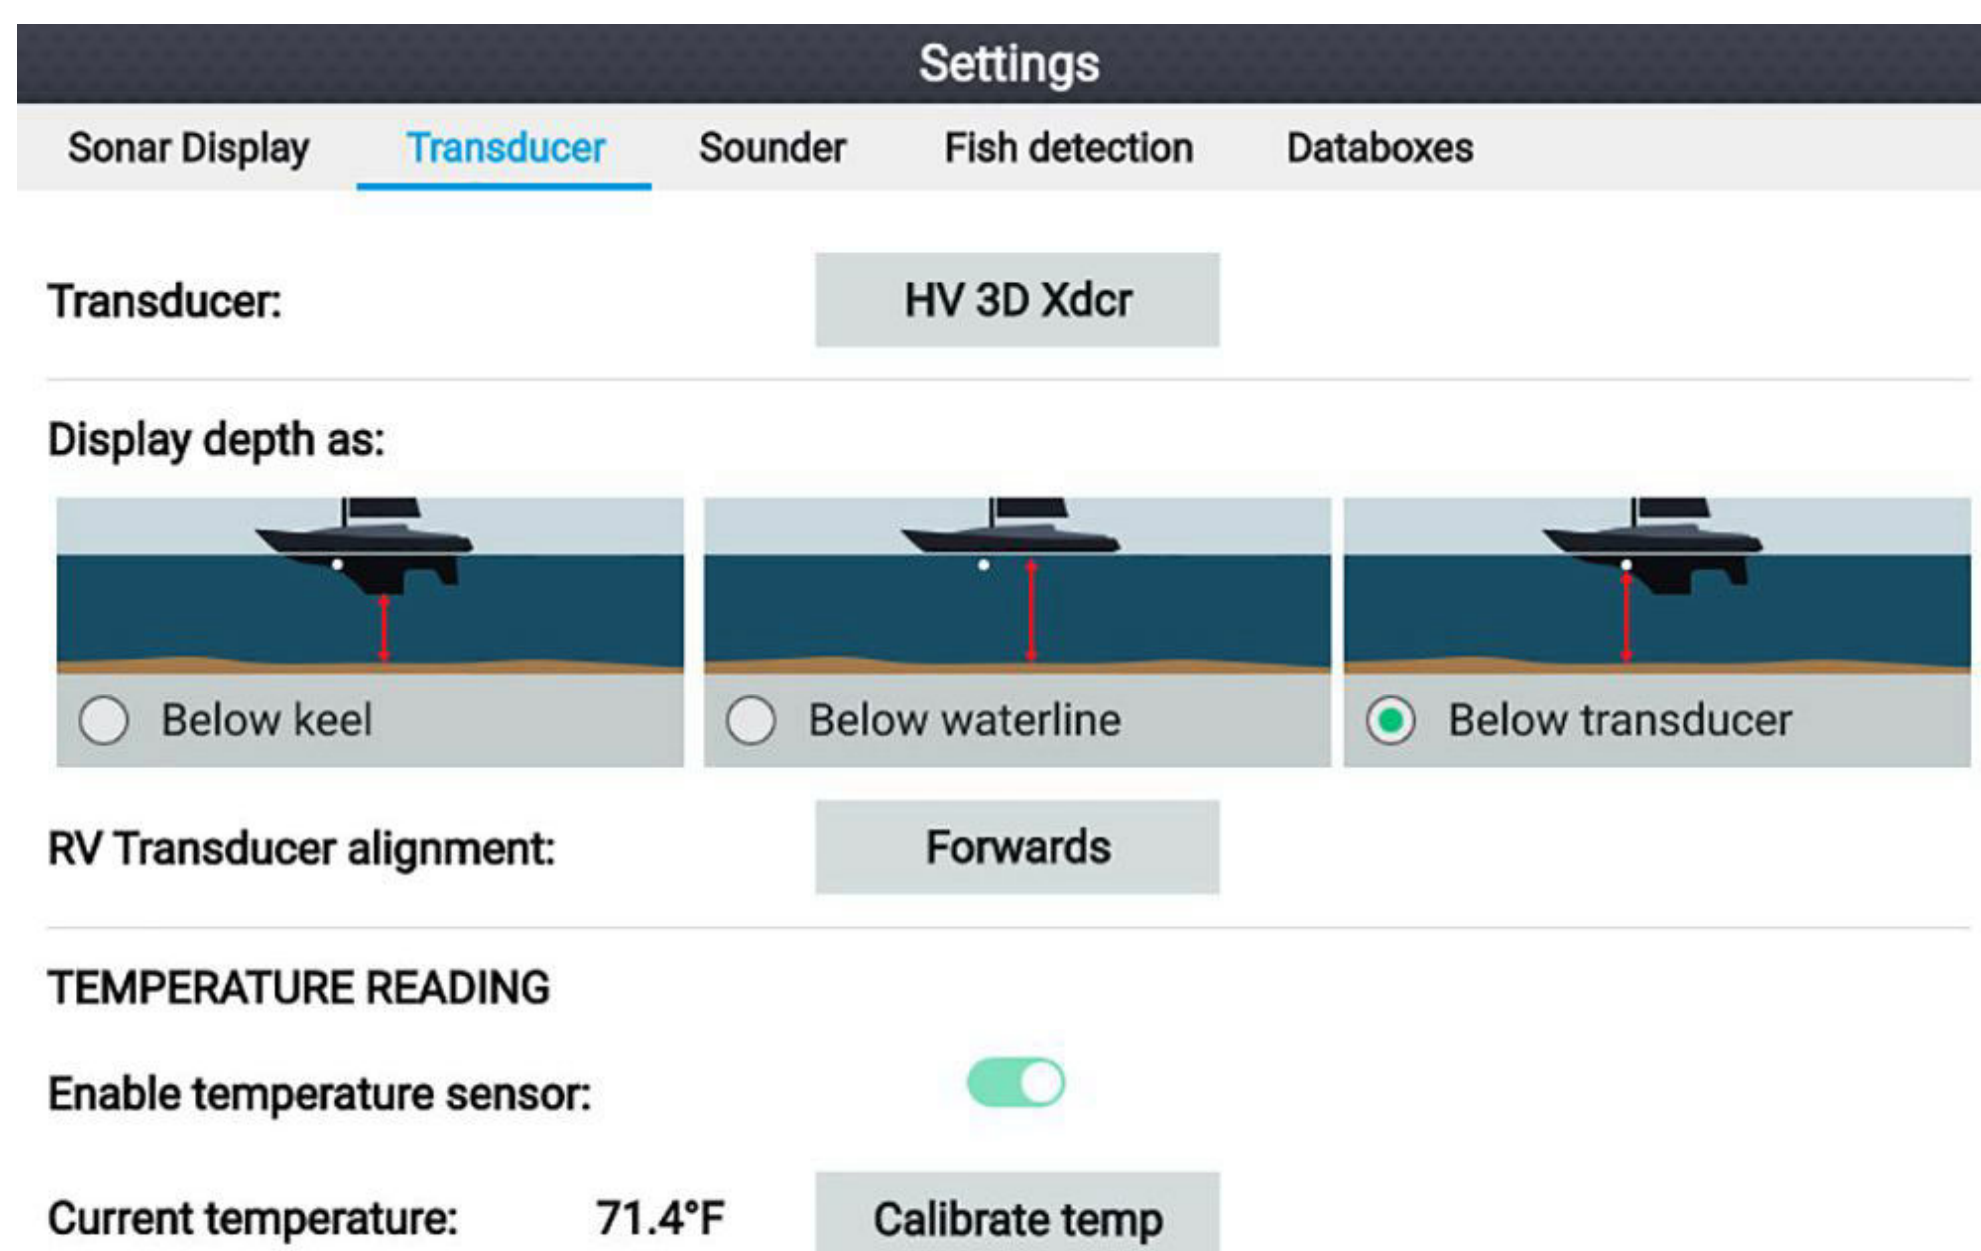

1. Select **Transducer** from the Fishfinder app's **Settings** menu: **Menu > Settings > Transducer**

