

## RAY218 / 55 Tuning Procedure


Tuning Prcedure of RAY218 / RAY55.

2006/10/23

## RAY218 / 55 Tuning Procedure

1. Connecting Diagram.....	3
2. Tune the TX Frequency. ....	4
3. Tune the TX Power / 1watt mode.....	5
4. Tune the TX Power / 25watt mode.....	6
5. Tune the maximum FM Modulation.....	7
6. Tune the DSC FSK modulation.....	8
7. Tune the ATIS FSK modulation.....	9

## 1. Connecting Diagram

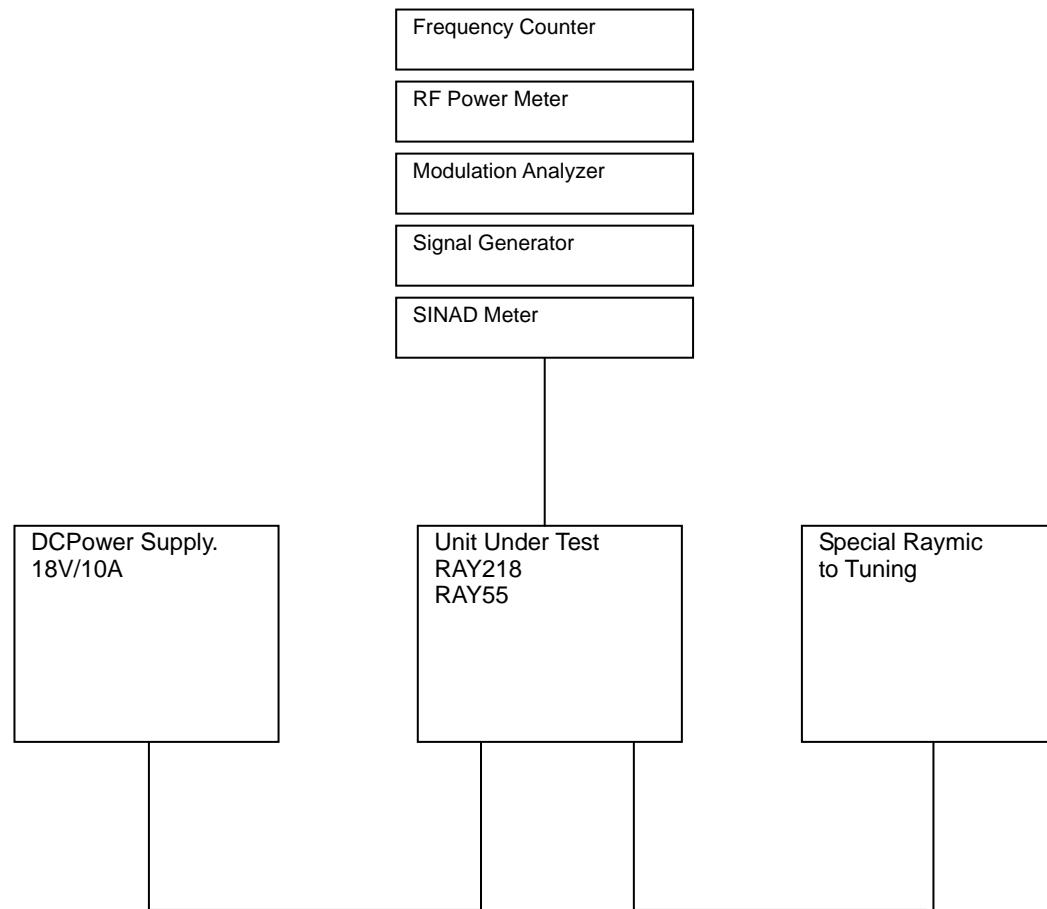

2. Tune the TX Frequency.

Step-1. Set the Special Raymic as below by MENU key CH Up or CH Down key.




Step-2. Press PTT on Special Raymic.

Step-3. Tune the CV001 on the Main PCB.

**Limit : Tune the TX Frequency 156.800MHz [+/- 200Hz].**

3. Tune the TX Power / 1watt mode.

Step-1. Set the Special Raymic as below by MENU key CH Up or CH Down key.

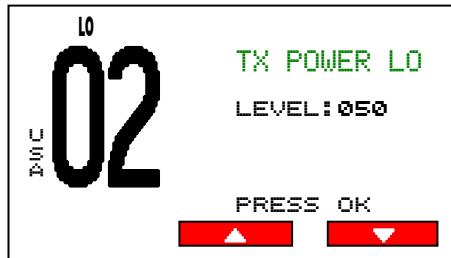

Step-2. Press PTT on Special Raymic.

Step-3. Press Up arrow key or down arrow key on the Special Raymic.

**Limit : Tune the TX Low power [0.85watt +/- 0.05watt].**

Step-4. Press OK key on the Special Raymic to confirm.

4. Tune the TX Power / 25watt mode.

Step-1. Set the Special Raymic as below by MENU key CH Up or CH Down key.



Step-2. Press PTT on Special Raymic.

Step-3. Press Up arrow key or down arrow key on the Special Raymic.

**Limit : Tune the TX Low power [23watt +/- 0.5watt].**

Step-4. Press OK key on the Special Raymic to confirm.

5. Tune the maximum FM Modulation.

Step-1. Set the Special Raymic as below by MENU key CH Up or CH Down key.



Step-2. Press PTT on Special Raymic.

Step-3. Apply the AF signal [ 1KHz / 200mV] to the microphone port.


Step-4. Press Up arrow key or down arrow key on the Special Raymic.

**Limit : Tune the modulation [4.6KHz to 4.7KHz].**

Step-5. Press OK key on the Special Raymic to confirm.

6. Tune the DSC FSK modulation.

Step-1. Set the Special Raymic as below by MENU key and CH Up or CH Down key.

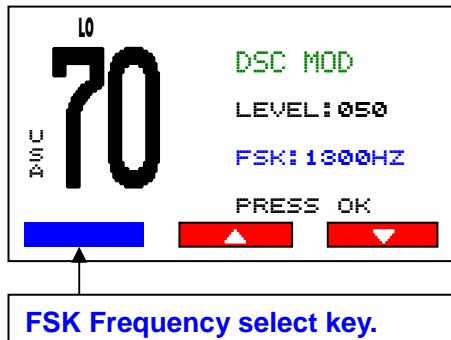

Step-2. Select the FSK Frequency [1300Hz] by **FSK Frequency select key**.

Step-3. Press PTT on Special Raymic.

Step-4. Press Up arrow key or down arrow key on the Special Raymic.

**Limit : Tune the modulation [2.6KHz to 2.7KHz].**


Step-5. Select the FSK Frequency [2100Hz] by **FSK Frequency select key**.

**Limit : Confirm the modulation [3.8KHz to 4.3KHz]**

Step-6. Press OK key on the Special Raymic to confirm.

7. Tune the ATIS FSK modulation.

Step-1. Set the Special Raymic as below by MENU key and CH Up or CH Down key.

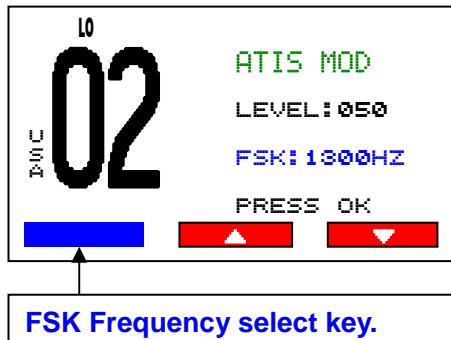

Step-2. Select the FSK Frequency [1300Hz] by **FSK Frequency select key**.

Step-3. Press PTT on Special Raymic.

Step-4. Press Up arrow key or down arrow key on the Special Raymic.

**Limit : Tune the modulation [1.25KHz to 1.35KHz].**

Step-5. Select the FSK Frequency [2100Hz] by **FSK Frequency select key**.

**Limit : Confirm the modulation [2.0KHz to 2.2KHz]**

Step-6. Press OK key on the Special Raymic to confirm.