

Problem	Cause	Correction
No Function	Low battery level	Replace with new batteries
Battery polarities are reversed	Battery polarities are reversed	Replace with new batteries on the battery compartment
Low battery level	The wheels are obstructed by foreign objects	Remove foreign objects on the vehicle / wheels
Low battery level	The wheels are obstructed by foreign objects	Replace with new batteries
Low battery level	The wheels are obstructed by foreign objects	Replace with new batteries
Strong interference of surroundings	Replace with new batteries	Move to a better location for playing

**Troubleshooting:**

Warning: Changes or modifications to the unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

- Consult the dealer or an experienced radio/TV technician for help.

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

- Do not use this equipment near water.

- Return or relocate the receiving antenna.

- The user is encouraged to try to correct the interference by one or more of the following measures:

1. Reorient or relocate the receiving antenna.

2. Increase the separation between the equipment and receiver.

3. Plug the equipment into a different outlet.

4. Consult your dealer or an experienced radio/TV technician for help.

Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in residential installations. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

1. This device may not cause harmful interference, and

2. This device must accept any interference received, including interference that may cause undesired operation.

Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in residential installations. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

**FCC Label Compliance Statement:**

1. Do not attempt to disassemble the product.
2. Do not operate the vehicle with same frequency with other players in same location. This will interfere and cause the vehicle to lose control.
3. Make sure the batteries are installed with correct polarity (+/-) as shown inside the battery compartment.
4. Remove the package, take out all accessories and assemble the product before giving it to children to play.

**Cautions**

13. Battery change must only be made by adult.
12. Repair or damage.
11. The supply terminals are not to be short-circuited.
10. Exposed batteries are to be removed from the product.
9. Remove all batteries from the product when not in use for a long period of time.
8. Be sure to insert batteries with correct polarities and always follow the battery manufacturer's instructions.
7. Rechargeable batteries are to be removed from the product before they are charged.
6. Rechargeable batteries are only to be charged under adult supervision.
5. Non-rechargeable batteries are not to be charged.
4. Do not mix old and new batteries or different types of batteries.
3. Do not mix alkaline, standard or rechargeable batteries.
2. Only batteries of the same or equivalent type as recommended are to be used.
1. Alkaline batteries are recommended.

**Battery use:**

6. Outdoor usage is recommended in order to get optimal control range.
5. The operating range can be affected by a variety of factors:
  - a) Weak transmitter or vehicle batteries.
  - b) Interference from other items that emit radio frequency signals such as another R/C item on the same frequency, CB radios, cordless phones, high voltage transmitter, etc.



English

Website: www.maisto.com  
 Email: us@maisto.com  
 Phone: (909) 257-7988  
 8:30 a.m. - 5:00 p.m. / Monday-Friday / Pacific Time



MADE IN CHINA  
 www.maisto.com  
 Eng

**4) Please refer to FAQ section on our website for more information.**

Check the FAQ and make sure all attempts have been made to make the unit work. Check your purchase receipt date and make sure it's within the 30 days warranty period at the time you intend to send it back. Contact Maisto (see below), and let us the model that you have, the problem(s) you are having, your daytime phone number, and any other information that might help us to resolve the problem. Please do not send your problem by mail, email or telephone. We will issue a return authorization number so you can return the unit to us for repair or replacement. No returns will be accepted without a return authorization (RA) number issued by Maisto directly marked on the outside of the package. Pack the unit back in its original box or another box with sufficient protective material, include a copy of your dated store receipt and a description of the problem then send it freight prepaid to the address which we will provide when we issue the RA number.

**3) What if I'm still having a problem?**

Check to make sure all the wheels are not obstructed by any foreign objects.

**2) Why does my R/C vehicle make unusual noises?**

 
Make sure all the wheels are not obstructed by any foreign objects. Make sure the batteries are installed per polarity indicators.

**1) Why does my R/C vehicle not start?**

Check to make sure the batteries are not drained. Make sure the frequency of the vehicle and transmitter are matched.

**FAQ (Frequently Asked Questions)**






only. Check the FAQ section before you return the product to Maisto. Warranties are limited to original purchasers with dated proof of purchase only. You can hand in your old batteries at public collection points in your area or wherever batteries are sold. Batteries containing harmful substances and all other used batteries. You will find these chemical abbreviations along with a crossed-out refuse bin on batteries containing harmful substances.



**Disposal of batteries**  
 Batteries should not be disposed of in the household waste. As the consumer you are legally obliged to return used batteries to a public collection point in your area or wherever batteries are sold.



     English

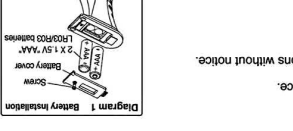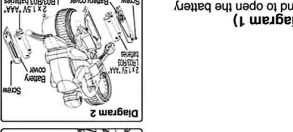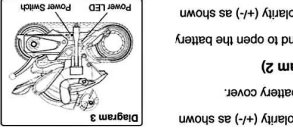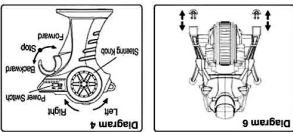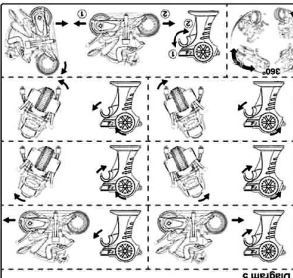

**Performance Tips:**

1. Do not drive the vehicle on grass, sand or wet surfaces.
2. Do not drive the vehicle in windy or rainy weather.
3. Do not touch the vehicle with your hands or feet.
4. Keep fingers, hair and loose clothing away from the vehicle.

**How to play: (Refer to Diagram 3, 4, 5 & 6)**

1. Set the "Power Switch" on the controller and vehicle to OFF. In this position, the "Power LED" on the vehicle will flash for 3 seconds then stop, meaning the automatic frequency matching between the controller and the vehicle is completed.
2. If the "Power LED" of the vehicle flash more than 3 seconds, switch off both the vehicle and controller, then turn them on again.
3. Pull the trigger in the transmitter to drive the vehicle forward. Push the trigger in the transmitter to drive the vehicle backward.
4. Turn the steering knob on the transmitter to steer the vehicle to right or left.
5. Try different combinations of the trigger and steering wheel to perform different actions.
6. Refer to diagram 6 to replace the new bracket pads.
7. Periodically clean the dust on the caterpillar track for better performance.
8. Turn the switch of the controller and vehicle to OFF position when not in play.

**Battery Installation for the Vehicle: (Refer to Diagram 2)**

1. Switch the power OFF.
2. Use screwdriver to loosen the screw on the battery cover and to open the battery cover. (Screwdriver is not included)
3. Install 4 new 1.5V "AAA" LR03/R03 batteries with correct polarity (+/-) as shown inside the battery compartment.
4. Install the battery cover and then tighten the screw on the battery cover.

**Battery Installation for the Transmitter: (Refer to Diagram 1)**

1. Use screwdriver to loosen the screw on the battery cover and to open the battery cover. (Screwdriver is not included)
2. Install 2 new 1.5V "AAA" LR03/R03 batteries with correct polarity (+/-) as shown inside the battery compartment.
3. Install the battery cover and then tighten the screw on the battery cover.

**Contents:**  
 Vehicle x 1  
 Transmitter x 1  
 Bracket Pad x 2  
 Owner's Instruction Manual x 1  
 Class 1 LED Product  
 We reserve the right to improve/reverse the product specifications without notice. Please keep this owner's instruction manual for future reference.

**2.4GHz Gyklone Motobike**



#2767

English