

THIS PRODUCT IS NOT A TOY

Cluster Bells

I. DESCRIPTION

Thank you for purchasing the **Cluster BELLS**. A motion sensor activates music and lighting effects in three elegant bells and one receiver bell. **This product is not a toy and is not intended for use by children.**

II. OPERATION

A. Main unit :

1. Turn the "Continuous/Off/Presence Activated" switch to "Off" position. (See Fig.II)
2. Open the battery compartment and install 4 "AA" sized batteries (not included).
3. Turn the "Continuous/Off/Presence Activated" switch to "Continuous". The music will play and the bells will light continuously. Turn the Volume control to adjust the volume of the sound. (See Fig.II)
4. Turn the "Continuous/Off/Presence Activated" switch to "Presence Activated". The music will play and bells will light until the song is over. To reactivate, approach the front of the unit.



Fig. I

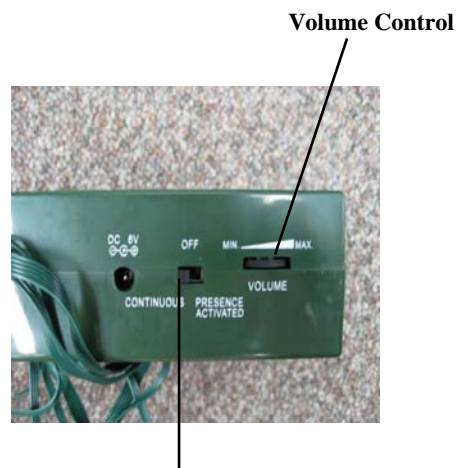


Fig.II

B. Receiver bell:

1. Gently lift the unit from the packaging. (Fig I)
2. To install batteries: Turn the top cap with hook in a clockwise direction and remove the cap and outer bell housing. Install 4 “AA “sized batteries (not included) in the battery compartment.
3. Replace the bell and turn the top cap anti-clockwise to lock.
Place the receiver bell on a table with the stand or place on a Christmas tree using the hanging hook. (See Fig.I)
4. Turn the "HI /LO/Off " switch to "HI" or “LO” depending on the desired music level. The music will play and the LED will flash until the song is over.
5. The receiver bell plays in the same mode as the main unit. If the main unit is in the presence activation mode, the receiver bell will also be in the presence activation mode and play once and stop.
6. The main unit and receiver bell may play different songs at the same time.



Stand

Fig.VI

III. TROUBLESHOOTING

Problem	Likely Cause	Solution
No music or no light flashing	No power	Make sure the 4 AA sized batteries are inserted correctly to the control box and receiver bell separately.
	Volume control switch is at the minimum position	Turn on the volume control switch to adjust the volume of the music.
	Motion sensor is not activated	Turn the "Continuous/Off/Presence Activated" switch to Presence Activated and approach the front of the unit.
Receiver bell not playing music	HI/LO/OFF switch on OFF	Turn to ON.
	Receiver bell's song has finish but main unit's song is still playing	New song will start when main unit's song is over and a new song starts.

IV. SAFETY WARNINGS AND INSTRUCTIONS

WARNING: THIS IS NOT A TOY! THIS PRODUCT CONTAINS SMALL PARTS WHICH COULD CAUSE CHOKING IF SWALLOWED.

TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE. DO NOT REMOVE COVER. NO USER SERVICEABLE PARTS INSIDE. IF SERVICING IS NEEDED, SEND TO QUALIFIED SERVICE PERSONNEL.

PLEASE ADHERE TO THE FOLLOWING:

1. Read Instructions - All safety and operating instructions should be read before the appliance is operated. Please adhere to the instructions and warnings for your safety.
2. Water and Moisture - Do NOT put appliance near water of any kind: a bathtub, washbowl, kitchen sink, on a wet floor or near a swimming pool.
3. Heat - The appliance should be situated away from heat sources such as radiators, hairdryers, heat registers, stoves or other appliances that produce heat.
4. Power Sources - The appliance should be connected to a power supply only like the one which comes with the appliance.
5. Damage Requiring Service - Have a qualified service personnel service this appliance when:
 - A. The power-supply cord or plug has been damaged.
 - B. Objects have fallen or liquid has spilled into the appliance.
 - C. The appliance has been exposed to rain or moisture.
 - D. All troubleshooting techniques have been tried and the appliance will not work or has stopped working.
 - E. The appliance has been dropped or the enclosure damaged.

Federal Communications Commission Code, Part 15: NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If the equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to correct the interference by one or more of the following measures: (a) reorient or relocate the receiving antenna; (b) increase the separation between the equipment and the receiver; (c) connect the equipment to an outlet on a circuit different from that to which the receiver is connected; or (d) consult the dealer or an experienced radio/TV technician for help.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Frontgate: Please contact one of our Product Specialists for assembly assistance or questions at 1-800-537-8484 or email ps@frontgate.com. Specialists are available weekdays 8:00 a.m. to 8:00 p.m. EST or Saturday 9:30 a.m. to 6:00 p.m.

Grandinroad: Please contact one of our Product Specialists for assembly assistance or questions at 1-800-491-4958 or email ps@grandinroad.com. Specialists are available weekdays 8:00 a.m. to 8:00 p.m. EST or Saturdays 9:30 a.m. to 6:00 p.m.