

FAX TO : ITS #27429149

ATTN. : MR. IVAN WONG

MODEL : 23401

JOB NO. : 0103005

*Another Original™*  
**Mr. Christmas.**  
<http://www.mrchristmas.com>

①

## REMOTE CONTROLLED SERVING SANTA™

### INSTRUCTION MANUAL

DEAR MR. WONG,

WE WILL PUT THE FCC STATEMENT IN A SEPARATE SHEET  
WHICH WILL BE INSERTED INTO THE INSIDE COVER OF  
THE INSTRUCTION MANUAL.

BEST REGARDS,

*P.Poon*

(P. POON) APR. 25, 2001.

Patent Pending

© 2001 Mr. CHRISTMAS

**WARNING: THIS PRODUCT IS DESIGNED TO CARRY UP TO 4 LBS. AND  
SHOULD NOT BE USED TO CARRY FOOD OR DRINKS IN  
OPEN CONTAINERS. IF SOMETHING SPILLS, IT WILL CAUSE  
DAMAGE TO YOUR CARPET OR FLOOR.**

**THIS PRECISION SET IS NOT A TOY!**

Please read this entire instruction booklet

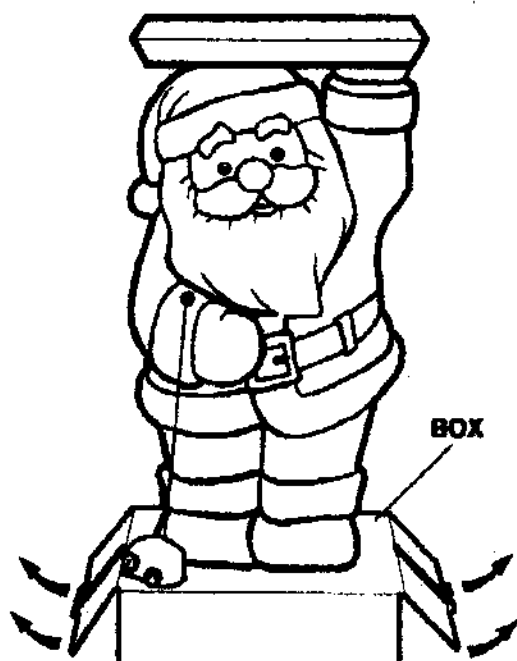 
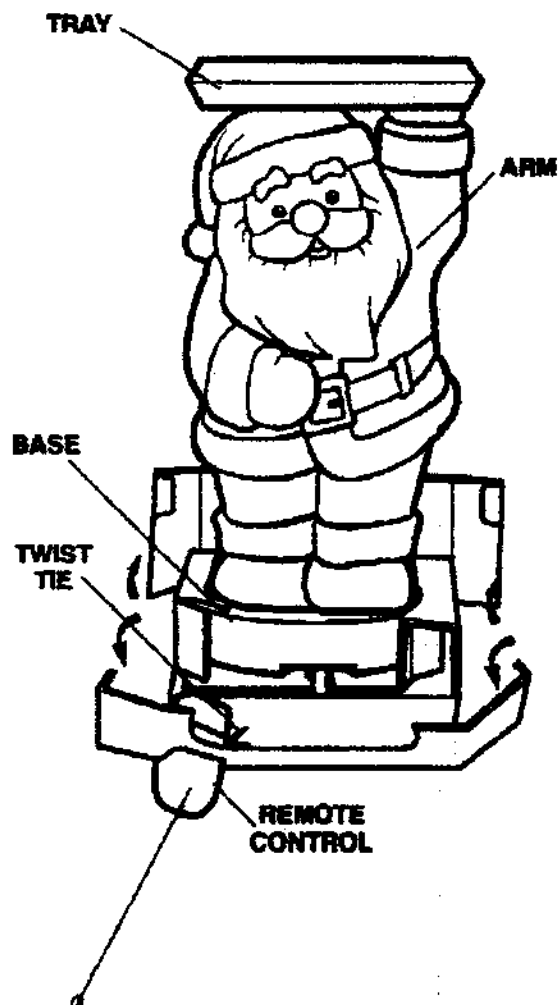 
**I. Description**

Thank you for purchasing Mr. Christmas' **SERVING SANTA**. A remote controlled Santa delivers Christmas gifts to everyone in the room. Just put the present on his tray and guide him with the remote control.

**II. Unpacking the unit**

Your **SERVING SANTA** has been carefully packed to assure that it will reach you in perfect condition. To unpack, follow these steps:

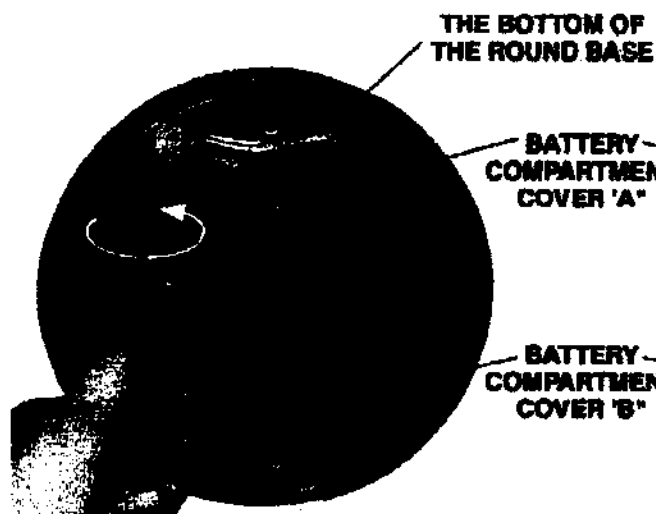 
1. Carefully open the box as shown in FIG.1a & 1b.
  2. Un-twist the twist tie to free the remote control from the box. (See FIG.1b.)
  3. Firmly grasp the base of the unit with both hands and carefully free it from the box.
- NOTE: DO NOT HOLD THE UNIT BY THE TRAY OR THE ARMS.
4. The unit is now free of the packaging. Be sure to save the packaging for storage of your **SERVING SANTA** from season to season.

**FIG.1a****FIG.1b**

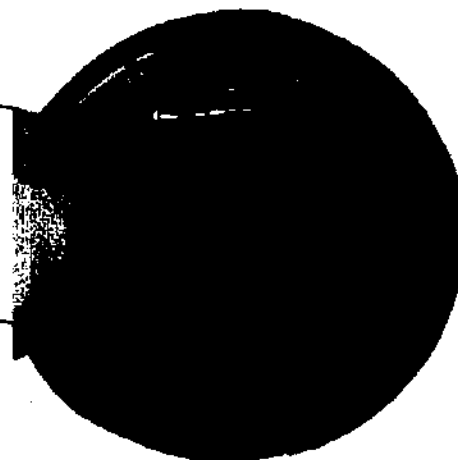 
### III. To install the batteries

1. Un-screw and remove the battery compartment cover 'A' (located at the bottom of the round base) as shown in FIG.IIa & IIb.
2. Repeat step 1 to remove the battery compartment cover 'B'.
3. Insert four "D" batteries (not included) into the battery compartments making sure to align "+" and "-" as marked inside the battery compartments. (See FIG.IIc.)
4. Un-screw and remove the remote control battery compartment cover as shown in FIG.IIIa & IIIb.
5. Align a "9V SIZE" battery (not included) with the 9V battery connector as shown in FIG.IIIc. Then firmly press to connect the "9V SIZE" battery with the 9V battery connector.
6. Put the "9V SIZE" battery with the 9V battery connector back into the battery compartment oriented as shown in FIG.IIIId.

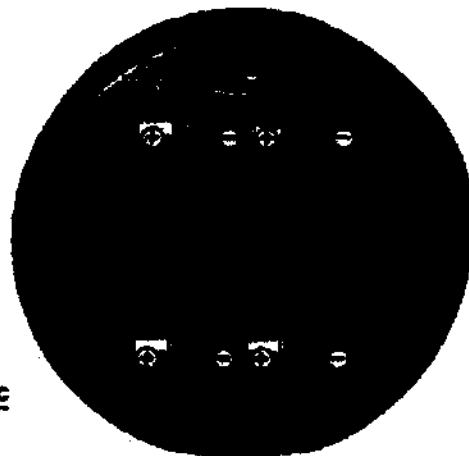 
**FIG.IIa**



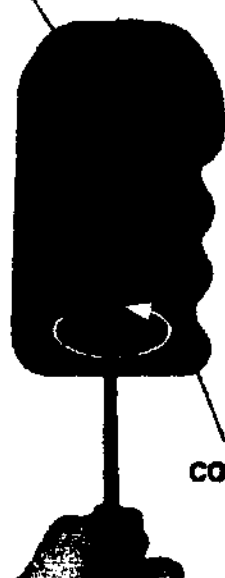 
**FIG.IIb**



**FIG.IIc**



④

**FIG.IIIa****THE BACK OF THE  
REMOTE CONTROL****FIG.IIIb****BATTERY  
COMPARTMENT  
COVER****FIG.IIIc****9V BATTERY  
CONNECTOR****FIG.IIIb****IV. Operation**

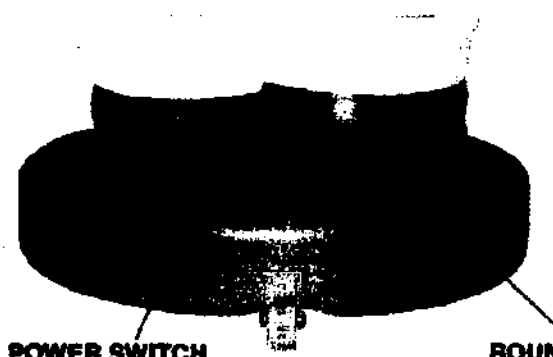 
Follow these instructions to get maximum enjoyment from your **SERVING SANTA** :

**WARNING:** THIS PRODUCT IS DESIGNED TO CARRY UP TO 4 LBS. AND SHOULD NOT BE USED TO CARRY FOOD OR DRINKS IN OPEN CONTAINERS. IF SOMETHING SPILLS, IT WILL CAUSE DAMAGE TO YOUR CARPET OR FLOOR.

1. Carefully place the figure on the floor.
2. Turn the power switch (located at the rear of the round base) to the "ON" position. (See FIG.IV.)
3. Push the remote control **TURNING BUTTON** (See FIG.V) to turn the figure. Release the **TURNING BUTTON** to stop the figure turning. Push the **FORWARD BUTTON** (See FIG.V) and the figure will move in the desired direction. Release the **FORWARD BUTTON** to stop the figure moving.
4. Turn the power switch to the "OFF" position when not in use.

**NOTE:** THE FIGURE MAY BE ACTIVATED BY ANOTHER RADIO CONTROLLED ARTICLE OR RADIO SIGNALS IN THE VICINITY AND CAUSE UNDESIRE MOVEMENT. PLEASE TURN THE POWER SWITCH TO THE "OFF" POSITION IMMEDIATELY WHEN NOT IN USE OR UN-ATTENDED.

5. Remove all the batteries for storage of the unit to avoid battery leakage.
6. PLEASE NOTE: THIS ITEM IS DESIGNED TO WORK ON REGULAR LENGTH CARPET PILE, BUT WILL WORK NORMALLY ON THICK PILE EXCEPT IT WILL MOVE SLOWER.

**FIG.IV****THE REAR OF THE ROUND BASE****POWER SWITCH****ROUND BASE****FIG.V****REMOTE CONTROL****FORWARD  
BUTTON****TURNING  
BUTTON**

(5)

**V. Trouble shooting**

Your **SERVING SANTA** has been designed to give many seasons of trouble-free operation. In the event that a problem does occur, please refer to the following chart for suggested solutions.

<b>Problem</b>	<b>Likely Causes</b>	<b>Solution</b>
Figure does not move	1. No power	1.1. Make sure the batteries are installed properly and aligned with the "+" and "-" polarity as marked inside the two base battery compartments.
		1.2. Push each battery so that the "+" polarity of the battery contacts that end of the battery compartment.
		1.3. Check the battery connection of the remote control making sure the polarities of the "9V SIZE" battery are matching that of the 9V battery connector as shown in FIG.11c., and are securely connected.
	2. Exhausted batteries	2. Replace with new batteries.
	3. Power switch is "OFF"	3. Turn the power switch to the "ON" position.
	4. Figure is too far away	4. Approach the figure or place the figure closer to you.
	5. Figure obstructed	5. Remove obstruction or place the figure away from obstruction.
Figure moves slowly	1. Thick carpet pile	1. Item is designed to work on regular length carpet pile, but will work normally on thick pile except it will move slowly.

**WARNING: THIS PRODUCT IS DESIGNED TO CARRY UP TO 4 LBS. AND SHOULD NOT BE USED TO CARRY FOOD OR DRINKS IN OPEN CONTAINERS. IF SOMETHING SPILLS, IT WILL CAUSE DAMAGE TO YOUR CARPET OR FLOOR.**

**WARNING: CHANGES OR MODIFICATIONS TO THIS UNIT NOT EXPRESSLY APPROVED BY THE PARTY RESPONSIBLE FOR COMPLIANCE COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.**

**WARNING: DO NOT DISPOSE OF BATTERY IN FIRE, BATTERY MAY EXPLODE OR LEAK.**

**DO NOT MIX OLD AND NEW BATTERIES.**

**DO NOT MIX ALKALINE, STANDARD (CARBON-ZINC), OR RECHARGEABLE (NICKEL-CADMIUM) BATTERIES.**

**FOR MORE INFORMATION ABOUT THIS PRODUCT, PLEASE CALL 1-800-4MR-XMAS, OR VISIT OUR WEBSITE! <http://www.mrchristmas.com>**

⑥

**THIS IS NOT A TOY****THIS PRODUCT CONTAINS SMALL PARTS WHICH COULD CAUSE CHOKING IF SWALLOWED.**

**CAUTION:** TO PREVENT FIRE OR SHOCK HAZARD. DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE. DO NOT REMOVE COVER. NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

**SAFETY INSTRUCTION**

1. Read Instructions - All the safety and operating instructions should be read before the appliance is operated.
2. Retain Instructions - The safety and operating instructions should be retained for future reference.
3. Heed Warnings - All warnings on the appliance and in the operating instructions should be adhered to.
4. Follow Instructions - All operating and use instructions should be followed.
5. Water and Moisture - The appliance should not be used near water - for example, near a bathtub, washbowl, kitchen sink, laundry tub, in a wet basement, or near a swimming pool, etc.
6. Heat - The appliance should be situated away from heat sources such as radiators, heat registers, stoves, or other appliances (including amplifiers) that produce heat.
7. Power Sources - The appliance should be connected to a power supply only of the type described in the operating instructions or as marked on the appliance.
8. Object and Liquid Entry - Care should be taken so that objects do not fall and liquids are not spilled into the enclosure through openings.
9. Damage Requiring Service - The appliance should be serviced by qualified service personnel when:
  - A. Objects have fallen, or liquid has been spilled into the appliance; or
  - B. The appliance has been exposed to rain; or
  - C. The appliance does not appear to operate normally or exhibits a marked change in performance; or
  - D. The appliance has been dropped, or the enclosure damaged.
10. Servicing - The user should not attempt to service the appliance beyond that described in the operating instructions. All other servicing should be referred to qualified service personnel.

**90-DAY LIMITED WARRANTY**

Mr. Christmas Incorporated warrants to the original consumer/purchaser of the **SERVING SANTA** that it will be free from defects in material and workmanship for a period of 90 days from date-of-purchase. Any liability of Mr. Christmas under this warranty shall be limited to the repair or replacement of defective parts without charge if the item is returned with shipping charges prepaid together with proof of date-of-purchase, name and mailing address of the original consumer/purchaser and a description of the defect. Please call warranty service at 1-800-4MR-XMAS for a claim number and instructions on how and where to return the item.

Mr. Christmas shall not be liable for any other damages or loss. Some states do not allow the exclusion or limitation of incidental or consequential damages. Accordingly, the limitation or exclusion may not be applicable to certain consumers/purchasers.

This warranty does not cover defects caused by damage in transit, abuse, accident, negligence or repairs made by others. This warranty gives the consumer/purchaser specific legal rights. The consumer/purchaser may also have other rights which vary from state to state.

(7)

**Warning:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

---

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- ☐ Reorient or relocate the receiving antenna.
  - ☐ Increase the separation between the equipment and receiver.
  - ☐ Connect the equipment into an outlet on a circuit different from that to which the receiver is needed.
  - ☐ Consult the dealer or an experienced radio/TV technician for help.
- 

**ALKALINE BATTERIES RECOMMENDED**