



Antenna placement Diagrams

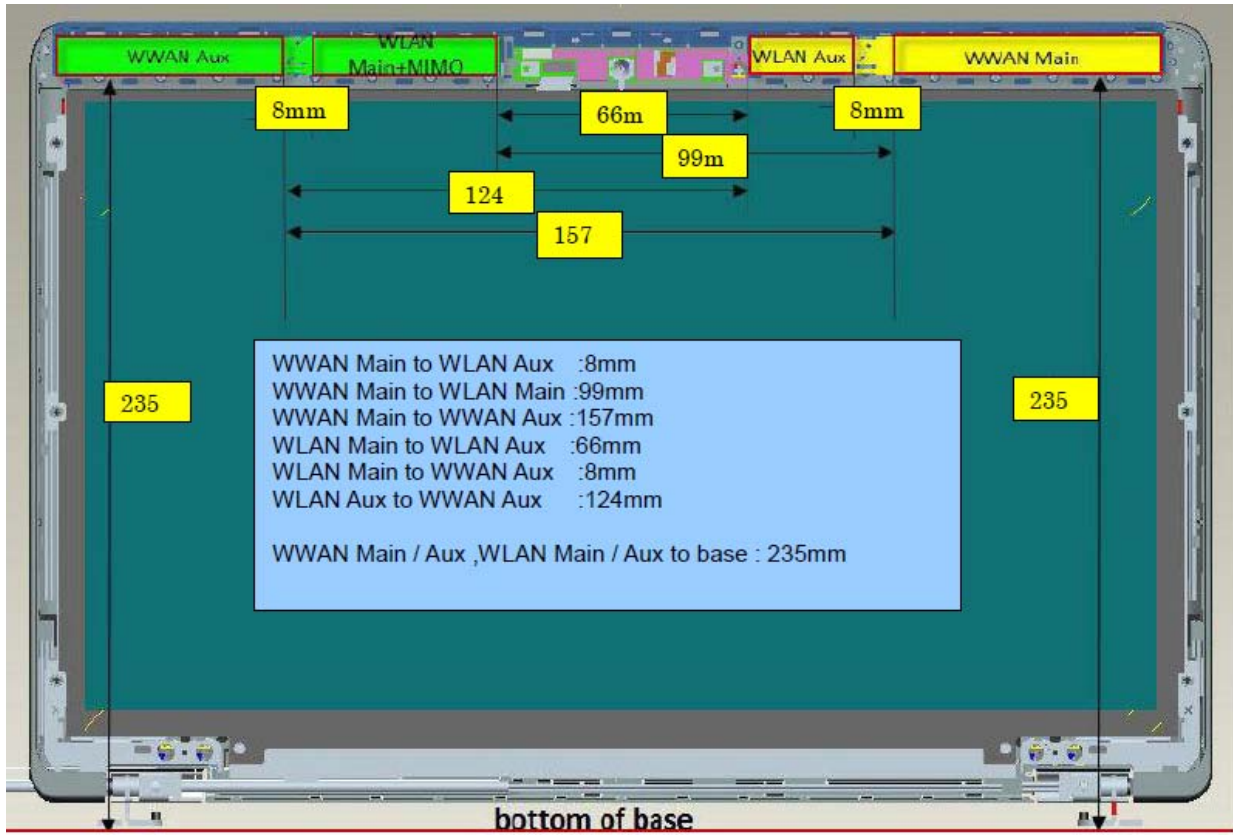

Antenna Separation to the User

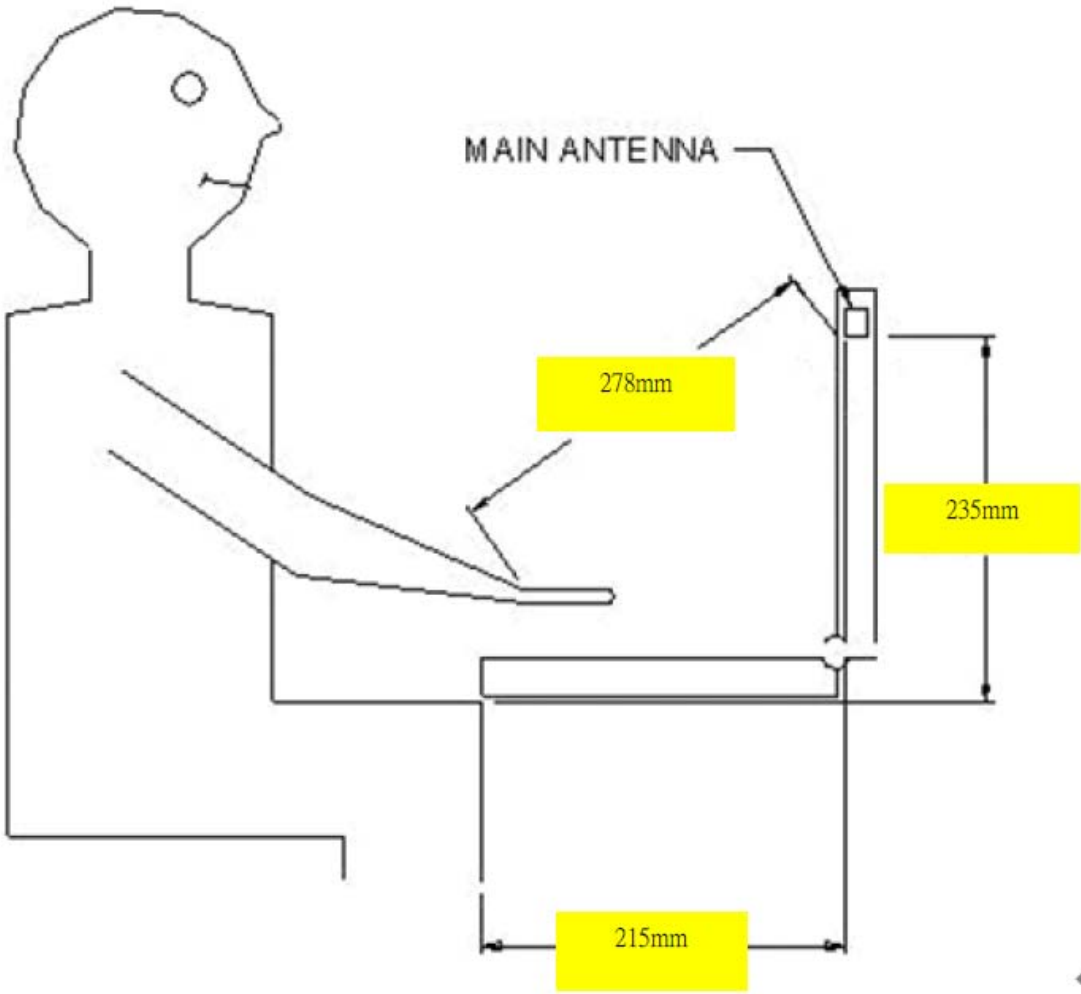

Module locations

