



Novatel Wireless Technologies Ltd.  
Suite 200, 6715 - 8th St NE  
Calgary, AB Canada T2E 7H7  
Phone: 403 295 4800

## NOTES

**FLAT SIZE:** 984.0 mm X 123.0 mm  
**FINISHED ASSEMBLED SIZE:** 123.0 mm X 123.0 mm

**COLOR:** K + PMS 186C



### MATERIAL

105gsm 20-30% post consumer C2S

### FONTS

INCLUDED IN FONTS FOLDER


### LINKS

INCLUDED IN LINKS FOLDER

## FILES

90026842 Rev 1 Master QSG T1114 VZW.INDD (InDesign CS5)  
90026842 Rev 1 Print QSG T1114 VZW.PDF (PRINT PDF)  
90026842 Rev 1 View Only QSG T1114 VZW.PDF (DO NOT PRINT Reference PDF)

## ACCORDION FOLD

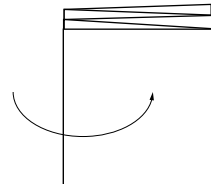

TITLE: QSG T1114 VZW

P/N: 90026842

ECO: 13281

Rev.A 07/25/13 - LZalasky - INITIAL DRAFT RELEASE  
Rev.1 08/07/13 - LZalasky - REMOVED SPANISH SECTION



# Get to Know Your Device

## 4G LTE BROADBAND ROUTER WITH VOICE

### FRONT VIEW

The Verizon 4G LTE Broadband Router with Voice is a wireless device that delivers Internet connectivity and telephone service. You can make a phone call and simultaneously provide network and Internet connectivity for up to 10 devices via Wi-Fi and up to 3 devices via Ethernet. Refer to this guide for setup and usage tips.



**NOTE:** A voice plan is not required for E911 calls. Emergency service is available regardless of your service plan.

### DISPLAY



ICON	STATUS	ICON	MENU/CAROUSEL
	Voice mail messages		Wi-Fi name/password
	Connected devices		Connected devices
	Data signal strength indicator*		Voice signal strength indicator*
	Network activity indicator		Data signal strength indicator*
	Internet connectivity indicator		Battery charge indicator
	Network roaming indicator		Software update
	Voice signal strength indicator*		About
			Home
			Data usage*

**\*NOTE:** Voice and Data availability is dependent upon the selected price plan.

### LED STATES

LED	COLOR-STATE	DESCRIPTION
Power button	Blue-solid	Normal operation
	Blue-blinking	Battery is charging
	Red-solid	No AC power. Device operating on battery only
Internet indicator	4G LTE Red-solid	Indicates internet connectivity
	Unlit	Indicates no internet connectivity
Wi-Fi indicator	Blue-solid	Wi-Fi user(s) connected but not transmitting or receiving
	Blue-blinking	Wi-Fi user(s) connected and transmitting or receiving
LAN indicator	Blue-solid	User(s) connected but not transmitting or receiving
	Blue-blinking	User(s) connected and transmitting or receiving
WPS button	Unlit	No user(s) connected
	Amber-blinking	Searching for wireless devices to connect via WPS. You have two minutes to start WPS on your wireless device
	Green-solid	WPS connection successful
	Red-blinking	Router could not find the wireless device. Try again to establish the WPS connection

### BACK VIEW



**\*\*NOTE:** Future feature

### BEFORE YOU BEGIN




#### STEP 1: INSTALL THE BATTERY

1. Remove the battery cover on the underside of the device.
2. Plug in and insert the battery, keeping the red cable to the center of the device and the metal contacts facing up, then replace the battery cover.

#### STEP 2: PLUG IN THE POWER CORD

1. Plug the power cord into the device power port.
2. Plug the power adapter into an AC wall outlet. The device will power on and guide you through a welcome process for connecting via Wi-Fi. Once complete, verify at least one bar of the voice signal strength indicator (📶) is lit. If not, move device to an alternative location that provides a stronger signal.

**WARNING!** Be sure to use the power cord that came with your device to avoid damage that may void the warranty.

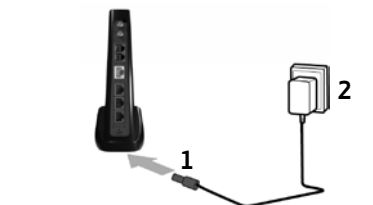


### STEP 3: CONNECTING YOUR TELEPHONE

This device provides ports for up to two telephones. Both ports use the same telephone number.

1. Unplug your telephone's cord from your wall's telephone jack.

**WARNING!** Do not plug this device into your telephone wall jack.

2. Plug the end of the telephone cord that was just removed from the wall jack into one of the two phone ports on the back of the device. The other end of the cord must remain plugged into the back of your telephone's base unit.

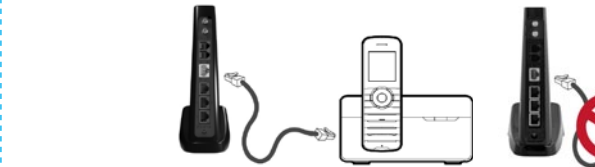

**NOTE:** The telephone and telephone cord are sold separately. Rotary, pulse dialing, and Voice over IP (VoIP) phones are not supported.

#### IMPORTANT!

If the device is in active mode and running on the battery alone, only voice calls are supported.

If the Power button is pressed and held, the device will enter charging mode. When in charging mode, the device screen displays the battery charge indicator (🔋). To resume normal operation, press the Power button. To completely turn off the device, disconnect from AC power.



## STEP 4: INITIAL ACTIVATION

### Transferring Your Existing Number

Customers transferring a phone number will not be able to send or receive calls on the 4G LTE Broadband Wireless Router with Voice until the transfer process is complete. This process can take 2-10 business days.

To check the status of your transfer, visit [www.verizonwireless.com/lnp](http://www.verizonwireless.com/lnp) or call (877) 567-4899.

### Activating a New Number

Your device automatically activates the new number after the device is powered on, as long as network coverage is available. Make a call to test service.

**NOTE:** If you are not subscribed to a plan with voice service and would like to add this feature, dial \*611 to sign up for service.

### IMPORTANT!

- A voice plan is required to make and receive calls.
- Customers may need to use the three-digit Area Code when dialing local and long distance numbers.

## SETTING UP VOICE MAIL

To set up and manage your voice mail, dial \*86 and follow the system prompts. For more details about your voice mail service, visit [www.verizonwireless.com/voicemail](http://www.verizonwireless.com/voicemail).

## CONNECTING INTERNET/NETWORK DEVICES

You can connect up to three wired devices such as laptops, printers and gaming consoles via Ethernet.



1. Plug the end of an Ethernet cable\* into one of the three Ethernet ports.
2. The other end of the cable must remain plugged into the Ethernet port of the device you wish to connect.

\* Sold separately

## SYSTEM REQUIREMENTS FOR WI-FI CONNECTIVITY

To connect wirelessly to your 4G LTE Broadband Router with Voice, devices such as laptops and tablets must be Wi-Fi capable.

- Compatible with all major operating systems.
- Works with the latest versions of browsers, including Android™, Chrome™, Firefox®, Internet Explorer®, Safari™ and Mobile Safari™.

## PASSWORDS

Your default Wi-Fi Network Name (SSID) and Wi-Fi Password will appear on the 4G LTE Broadband Router with Voice display upon initial power up. You can also access your Wi-Fi Name and Wi-Fi Password using the following steps:

1. Power on your 4G LTE Broadband Router with Voice.
2. On the device screen, select **Menu** and open the **Wi-Fi Name and Password** option.
3. Select **Open** to display the **Wi-Fi Name/Password**.

To access your Admin Password for the 4G LTE Broadband Router with Voice Web Interface:

1. Select **Menu** and select the **About** option.
2. Select **Open > More > More** to display the Web Interface Admin Password.

**NOTE:** Your default Wi-Fi and Web Interface Admin Password are the same. To change the Wi-Fi Password, follow the instructions in **ACCESSING ADVANCED SETTINGS**.

## CONNECTING TO THE INTERNET VIA WI-FI

1. With the 4G LTE Broadband Router with Voice powered on, open the Wi-Fi application or controls on the computer or Wi-Fi capable device that you want to connect and find the Wi-Fi network (SSID), for example Verizon-4GLTE-BRV-XXXX. Click **Connect**.
2. When prompted, enter your Wi-Fi Password, found under **Menu > Wi-Fi Name/Password**. Your Wi-Fi capable device is now connected to the Internet.

**NOTE:** For information on connecting devices with WPS, see the User Guide available online at [verizonwireless.com/support](http://verizonwireless.com/support).

## MONITORING DATA USAGE

You can view current data usage details on your 4G LTE Broadband Router with Voice by selecting **View Usage** from the bottom of the Home Screen. You can also view your data usage and manage your plan selection via your My Verizon account.

**NOTE:** Data plan subscription required.

## RESTORING FACTORY SETTINGS

To restore factory settings, follow these steps:

1. Verify that your 4G LTE Broadband Router with Voice is powered on. Find the master RESET opening on the battery cover on the bottom of the device.
2. Place one end of an unfolded paper clip into the master RESET opening and press down for approximately five seconds until the device resets.

**NOTE:** When performing the factory reset, all previous settings will be lost.

## ACCESSING ADVANCED SETTINGS

Once your 4G LTE Broadband Router with Voice is connected to a device that supports web browsing, you can access the administrative interface in order to customize advanced settings, change your password, and access information.

1. Connect to <http://VerizonBRV> via the web browser on any compatible connected device.
2. Sign in using your Web Interface Admin Password found under **Wi-Fi Name/Password** on the device screen.
3. Click **Customize my Wi-Fi Settings** to change the Wi-Fi Password.
4. Click **Change my Admin Password** to change the Admin Password.



**NOTE:** You must be connected to the 4G LTE Broadband Router with Voice to access this web page.

## INSTALLING THE OPTIONAL ANTENNA


To purchase the optional antenna for the 4G LTE Broadband Router with Voice, please visit [www.verizonwireless.com](http://www.verizonwireless.com) or go to a Verizon Wireless store.

**IMPORTANT INSTRUCTIONS! Read before installation.**


If using the optional antenna, align the antenna with the antenna port on the 4G LTE Broadband Router with Voice and attach securely into place.

Use the following installation instructions to comply with FCC rules on RF exposure. Failure to follow these guidelines can result in operations that exceed RF exposure limits.

- Maintain a minimum distance of at least 20 cm (8 in) from all persons regardless of how the antenna is mounted (stand assembly or wall mount).
- Connect the antenna to the modem using the supplied cable only – do not use a different cable. Use the full length of the cable to position the antenna as far from the modem and generally populated areas as possible.

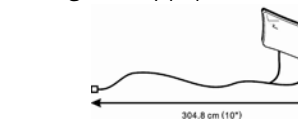

- For wall mount installations, position the antenna as far off the ground as possible ensuring at least 20 cm (8 in) from people.

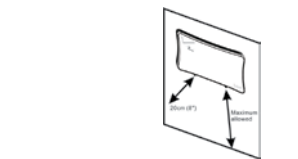

- For stand assembly installations, maintain a minimum distance of 20 cm (8 in) between the antenna and people at all times.



- Do not operate the 4G LTE Broadband Router with Voice and the antenna in close proximity to each other.



- Use only the approved ProBrand 4G LTE Signal Booster Antenna (PROB4GANT) available through Verizon. Never use an antenna from another vendor or another source

## CUSTOMER INFORMATION

### YOUR WIRELESS DEVICE AND THIRD PARTY SERVICES

Verizon Wireless is the mobile carrier associated with this wireless device, but many services and features offered through this wireless device are provided by or in conjunction with third parties. Verizon Wireless is not responsible for your use of this wireless device or any non-Verizon Wireless applications, services and products including any personal information you choose to use, submit or share with others. It is recommended that you use the available encryption options for added security when provisioning your device for use as a Wi-Fi gateway. See your user manual for details. Specific third party terms and conditions, terms of use, and privacy policies shall apply. Please review carefully all applicable terms and conditions and policies prior to using this wireless device and any associated application, product or service.

### FIND MORE INFORMATION

- A User Guide is available online at [verizonwireless.com/support](http://verizonwireless.com/support).
- Customer Service is available at any Verizon Wireless store, by visiting [verizonwireless.com](http://verizonwireless.com), or by calling 1-800-922-0204.

Printed using non-petroleum based inks and coatings

