<u>Tuneup</u>

The RF output is setup by the calibration routine on the system. A value is set in the EMS and the system outputs that power level at the antenna port. The RF Output is monitored constantly by the system.

There is no user adjustment of the rf parameters of the system.